

Manuals.plus /

- › [Ikea](#) /
- › [IKEA PLUGGET Alarm Clock 11 cm, White \(Model 205.227.20\) User Manual](#)

## Ikea 205.227.20

# IKEA PLUGGET Alarm Clock 11 cm, White

Model: 205.227.20

## INTRODUCTION

---

This instruction manual provides essential information for the safe and efficient use of your IKEA PLUGGET Alarm Clock. Please read this manual thoroughly before using the product and retain it for future reference.



Image: The IKEA PLUGGET Alarm Clock in white, featuring a digital display showing '12:00'. The clock has a minimalist, round design.

## SAFETY INFORMATION

---

- Always use the recommended battery type (AAA 1.5V alkaline batteries).
- Do not mix old and new batteries, or different types of batteries.
- Remove batteries if the product is not used for an extended period to prevent leakage.
- Keep the product away from water and high humidity.
- Do not attempt to open or repair the product yourself. Refer to qualified service personnel.

## PACKAGE CONTENTS

---

- 1 x IKEA PLUGGET Alarm Clock
- 1 x USB Cable (1.5m)

**Note:** 3 x AAA 1.5V alkaline batteries (LR03) are sold separately and are not included in the package.

## SETUP

---

### Powering the Alarm Clock

The IKEA PLUGGET Alarm Clock can be powered in two ways:

1. **USB Cable:** Connect the included 1.5m USB cable to the clock and a compatible USB power adapter (not included). When powered by USB, the display will remain continuously lit.
2. **Batteries:** Insert 3 x AAA 1.5V alkaline batteries (LR03) into the battery compartment. When powered by batteries, the display will light up briefly when any button is pressed to conserve power.

### Battery Installation

1. Locate the battery compartment on the back of the alarm clock.
2. Open the battery compartment cover.
3. Insert 3 x AAA 1.5V alkaline batteries, ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.

## OPERATING INSTRUCTIONS

---

### Setting Time

Specific button functions for time setting are typically located on the back or side of the clock. Look for buttons labeled 'SET', 'TIME', or similar. Press the 'SET' button, then use '+' and '-' buttons to adjust hours and minutes. Press 'SET' again to confirm.

### Setting Alarm

Locate the 'ALARM' or 'ALARM SET' button. Press it, then use '+' and '-' buttons to set the desired alarm time. Confirm by pressing the 'ALARM' button again. An alarm icon should appear on the display to indicate it is active.

### Adjusting Display Brightness (Dimming)

The display features 3 dimming levels. Look for a button labeled 'DIM', 'BRIGHTNESS', or a light bulb icon. Press this button repeatedly to cycle through the brightness levels until you find your preferred setting.

### Changing Time Display Format

The clock supports both 12-hour and 24-hour time formats. Look for a button labeled '12/24H' or 'FORMAT'. Press it to toggle between the two display modes.

## MAINTENANCE

---

### Cleaning

Wipe the clock with a soft, dry cloth. Do not use abrasive cleaners or solvents, as these may damage the surface.

### Battery Replacement

When the display becomes dim or the clock functions erratically while on battery power, it's time to replace the batteries. Follow the battery installation steps in the 'Setup' section.

## TROUBLESHOOTING

---

- **Display not lighting up (battery mode):** Press any button to activate the display. Ensure batteries are correctly inserted and not depleted.
- **Clock not functioning:** Check power source. If using USB, ensure the cable is securely connected and the adapter is working. If using batteries, ensure they are fresh and correctly inserted.
- **Alarm not sounding:** Ensure the alarm function is activated (check for alarm icon on display) and the volume is not set to zero (if applicable).

## SPECIFICATIONS

Feature	Detail
Model Number	205.227.20
Color	White
Diameter	10.5 cm
Dimensions (Package)	13.4 x 11.3 x 4.2 cm
Weight (Product)	180 grams
Power Source	3 x AAA 1.5V Alkaline Batteries (LR03) or USB Cable
USB Cable Length	1.5 m
Display Type	Digital
Features	Alarm function, 3-stage dimming, 12/24-hour format selection
Materials	Clock face: Polystyrene plastic; Back panel: ABS plastic, printed acrylic paint finish; Pad: Silicone rubber

## WARRANTY AND SUPPORT

For information regarding warranty, returns, or customer support, please refer to the retailer's policy or contact IKEA customer service directly. Specific warranty details are not provided in this manual.