

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Argo](#) /
- › [Argo Maxime Plus Portable Air Conditioner 13000 BTU User Manual](#)

Argo Maxime Plus

Argo Maxime Plus Portable Air Conditioner 13000 BTU User Manual

Model: Maxime Plus

[Safety Information](#)

[Product Components](#)

[Setup &
Installation](#)

[Operating
Instructions](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty &
Support](#)

1. SAFETY INFORMATION

Read all safety warnings and instructions carefully before using this appliance. Failure to follow the warnings and instructions may result in electric shock, fire, and/or serious injury.

- Ensure the power supply matches the voltage specified on the rating label.
- Do not operate the unit with a damaged cord or plug. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.
- Do not block air inlets or outlets. Maintain a minimum distance of 20 cm from walls or other objects.
- This appliance uses R290 refrigerant. R290 is a flammable refrigerant. Do not use means to accelerate the defrosting process or to clean, other than those recommended by the manufacturer.
- The appliance shall be stored in a room without continuously operating ignition sources (e.g., open flames, an operating gas appliance, or an operating electric heater).
- Do not pierce or burn. Be aware that refrigerants may not contain an odor.
- Keep the appliance away from heat sources and direct sunlight.
- This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

2. PRODUCT COMPONENTS

The Argo Maxime Plus portable air conditioner includes the following main components:

- Main Air Conditioner Unit
- Flexible Exhaust Hose
- Window Adapter Kit (for exhaust hose)
- Remote Control (if applicable, not explicitly mentioned but common)
- User Manual (this document)



Image 1: Front view of the Argo Maxime Plus portable air conditioner. The unit is white with blue accents, featuring a control panel on top and air vents.

3. SETUP AND INSTALLATION

Follow these steps for proper setup and installation of your portable air conditioner.

3.1 Unpacking

1. Carefully remove the unit from its packaging.
2. Check for any damage during transit. Contact your retailer if any damage is found.
3. Retain the original packaging for future storage or transport.

3.2 Positioning the Unit

- Place the unit on a flat, stable surface.
- Ensure there is at least 20 cm (8 inches) of clear space around the air inlets and outlets for proper airflow.
- Position the unit near a window or door for exhaust hose installation.

3.3 Exhaust Hose Installation

The exhaust hose expels hot air from the room. Proper installation is crucial for efficient cooling.

1. Attach one end of the flexible exhaust hose to the air outlet on the back of the unit.
2. Attach the window adapter to the other end of the exhaust hose.
3. Open the window or door and secure the window adapter in place to prevent hot air from re-entering the room. The window kit is designed to fit window openings with a maximum width of 40.5 cm and a minimum height of 8 cm.
4. Minimize the length and bends of the exhaust hose to maximize cooling efficiency.



Image 2: Illustrative diagram of the exhaust hose installation, showing the hose connected to the unit and extended through a window using the provided adapter kit.

3.4 Power Connection

- Plug the power cord into a grounded electrical outlet.
- Ensure the outlet meets the electrical requirements of the unit (1300 watts, AC power).

4. OPERATING INSTRUCTIONS

This section details how to operate your Argo Maxime Plus portable air conditioner.

4.1 Control Panel Overview

The control panel is located on the top of the unit and features various buttons and indicators for operation.

- **Power Button:** Turns the unit ON or OFF.
- **Mode Button:** Selects operating modes (Cool, Fan, Dry).
- **Temperature Up/Down Buttons:** Adjusts the desired temperature.

- **Fan Speed Button:** Adjusts fan speed (Low, Medium, High).
- **Timer Button:** Sets the auto-on or auto-off timer.
- **Wi-Fi Indicator:** Shows Wi-Fi connection status.



Image 3: Detailed view of the control panel on the top of the unit, highlighting the power, mode, temperature, and fan speed buttons, along with the digital display.

4.2 Basic Operation

1. Press the **Power** button to turn on the unit.
2. Press the **Mode** button to select the desired operating mode:
 - **Cool Mode:** For cooling the room. Use the temperature buttons to set the desired temperature.
 - **Fan Mode:** For air circulation without cooling.
 - **Dry Mode:** For dehumidification.
3. In Cool mode, use the **Temperature Up/Down** buttons to set the desired room temperature.
4. Press the **Fan Speed** button to adjust the fan speed as needed.

4.3 Wi-Fi and App Control

The Argo Maxime Plus supports Wi-Fi connectivity for control via a smartphone application.

1. Download the official Argo app from your smartphone's app store.
 2. Follow the in-app instructions to connect your air conditioner to your home Wi-Fi network.
 3. Once connected, you can control the unit's functions (power, mode, temperature, fan speed, timer) remotely via the app.
-

5. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your air conditioner.

5.1 Cleaning the Air Filter

The unit is equipped with a pre-filter. A dirty filter reduces airflow and cooling efficiency.

1. Turn off the unit and unplug it from the power outlet.
2. Locate the air filter, typically behind a removable grille.
3. Remove the filter.
4. Clean the filter with a vacuum cleaner or wash it gently with lukewarm water and mild detergent.
5. Allow the filter to dry completely before reinserting it.
6. Clean the filter every two weeks or more frequently if used in dusty environments.



Image 4: Step-by-step illustration of removing the air filter from the unit and cleaning it under running water.

5.2 Draining Condensed Water

The unit collects condensed water during operation. Depending on humidity levels, it may need to be drained periodically.

- Most portable air conditioners have an internal water tank that triggers an indicator when full.
- Turn off and unplug the unit.
- Locate the drain plug at the bottom or back of the unit.
- Place a shallow pan or container under the drain plug.
- Remove the drain plug to allow water to flow out.
- Replace the drain plug securely once all water has drained.

5.3 External Cleaning

- Wipe the exterior of the unit with a soft, damp cloth.
- Do not use harsh chemicals, abrasives, or solvents, as these can damage the surface.

5.4 Storage

If storing the unit for an extended period:

1. Drain all condensed water completely.
2. Clean the air filter.
3. Unplug the power cord and coil it neatly.
4. Store the unit in a dry, cool place, preferably in its original packaging.

6. TROUBLESHOOTING

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
Unit does not turn on.	No power supply. Power cord not plugged in. Fuse blown or circuit breaker tripped.	Check if the unit is plugged into a working outlet. Check household fuse/circuit breaker.
Unit cools poorly.	Air filter is dirty. Exhaust hose not properly installed or blocked. Room too large. Doors/windows open. Temperature setting too high.	Clean the air filter. Ensure exhaust hose is properly connected and not obstructed. Close all doors and windows. Lower the set temperature.
Unit is noisy.	Unit not on a flat surface. Obstruction in fan.	Place the unit on a flat, stable surface. Turn off and unplug the unit, then check for obstructions.
Water leakage.	Drain plug not securely closed. Unit tilted.	Ensure the drain plug is tightly closed. Place the unit on a level surface.
Wi-Fi connection issues.	Incorrect Wi-Fi password. Unit too far from router. Router issues.	Verify Wi-Fi password. Move unit closer to router or use a Wi-Fi extender. Restart your Wi-Fi router.

If the problem persists after attempting these solutions, please contact customer support.

7. SPECIFICATIONS

Detailed technical specifications for the Argo Maxime Plus portable air conditioner.

Feature	Detail
Model Name	Maxime Plus
Brand	Argo

Feature	Detail
Cooling Capacity	13000 BTU (British Thermal Units)
Power Consumption	1300 Watts
Noise Level	51 Decibels
Refrigerant Type	R-290 (Flammable)
Energy Efficiency Class	A/A++
Special Features	Cooling function, Wi-Fi connectivity, App control
Filter Type	Pre-filter
Control Method	App, Control Panel
Installation Type	Portable
Color	White (and blue accents)
Minimum Window Opening Height	8 cm
Maximum Window Opening Width	40.5 cm

8. WARRANTY INFORMATION

The Argo Maxime Plus portable air conditioner comes with a **Limited Warranty**.

For specific terms and conditions of the warranty, including duration and coverage, please refer to the warranty card included with your product or visit the official Argo website. Keep your purchase receipt as proof of purchase for warranty claims.

The warranty typically covers manufacturing defects and malfunctions under normal use. It does not cover damage caused by misuse, improper installation, unauthorized repairs, or natural disasters.

9. CUSTOMER SUPPORT

If you require assistance, have questions, or need to report an issue, please contact Argo customer support.

- **Online Support:** Visit the official Argo website for FAQs, product registration, and online support forms.
- **Telephone Support:** Refer to your product documentation or the Argo website for regional contact numbers.
- When contacting support, please have your product model number (Maxime Plus) and purchase date available.

