

[Manuals.plus](#) /

> [Minecraft](#) /

> Minecraft Touch-Screen Interactive Watch User Manual

Minecraft MIN4045AC

Minecraft Touch-Screen Interactive Watch User Manual

Model: MIN4045AC

INTRODUCTION

Welcome to the user manual for your new Minecraft Touch-Screen Interactive Watch. This multi-function device is designed for children, offering a blend of entertainment and utility. It features a touch-screen interface and includes various functions such as a camera, video recording, games, calculator, voice recorder, customizable clock dials, alarm, pedometer, and an album viewer. This manual provides essential information on setup, operation, maintenance, and troubleshooting to ensure optimal use of your watch.

IMPORTANT SAFETY INFORMATION

WARNING: Choking Hazard - Small Parts. Not for children under 3 years.

Please read all safety information before using the product. Keep this manual for future reference.

PACKAGE CONTENTS

Ensure all items are present in the package:

- Minecraft Touch-Screen Interactive Watch
- USB Charging Cable
- User Manual (this document)

PRODUCT OVERVIEW

Familiarize yourself with the components of your Minecraft Interactive Watch.







Figure 1: Front angled view of the Minecraft Interactive Watch, showing the green casing, digital display with time and date, and a Minecraft character face.



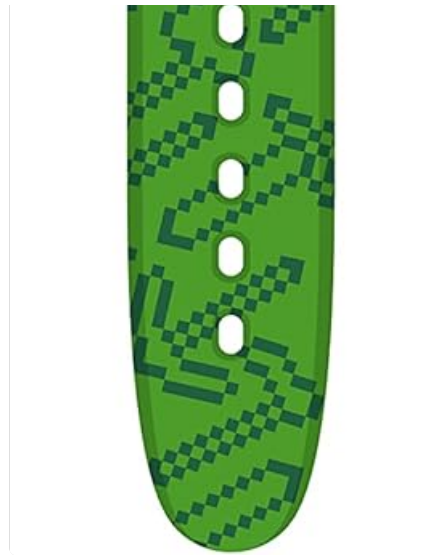


Figure 2: Direct front view of the watch, highlighting the green strap with pixelated patterns and the square screen displaying a Creeper face.



Figure 3: Back view of the watch, showing the "MINECRAFT" logo, copyright information, model number MIN4045AZ, and regulatory markings on the green and white casing.



Figure 4: The watch connected to its white USB charging cable, illustrating the charging port location on the side of the watch.

CHANGEABLE WATCH FACES

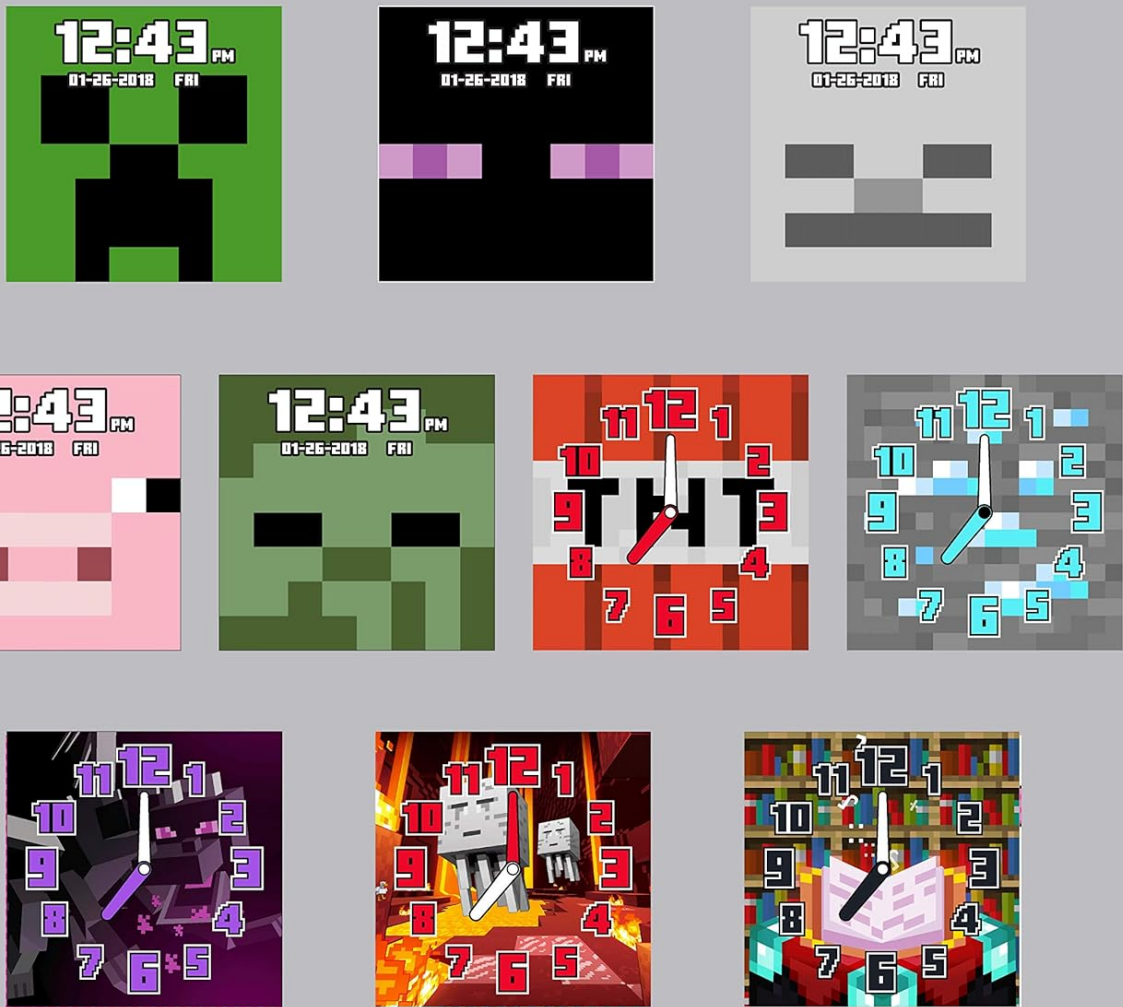


Figure 5: A display of nine different changeable watch faces, featuring various Minecraft characters and themes like Creeper, Enderman, Skeleton, Pig, Zombie, TNT block, and block-style digital clocks.

Key Components:

- **Touch-Screen Display:** Interactive screen for navigation and function selection.
- **Camera:** Integrated camera for taking photos and videos.
- **USB Port:** Located on the side for charging and data transfer.
- **Strap:** Durable, adjustable strap with Minecraft-themed pixel patterns.

SETUP

1. Charging the Watch

Before first use, fully charge the watch. A long-lasting battery ensures extended fun.

1. Locate the USB charging port on the side of the watch (refer to Figure 4).

2. Connect the included USB charging cable to the watch.
3. Plug the other end of the USB cable into a standard USB power adapter (not included) or a computer's USB port.
4. The watch display will indicate charging status. Allow sufficient time for a full charge.

2. Initial Power On

Once charged, press and hold the power button (usually located on the side) to turn on the watch. Follow any on-screen prompts for initial setup, such as setting the time and date.

OPERATING INSTRUCTIONS

Navigate the watch's features using the touch-screen display.

Navigation

- **Swipe:** Swipe left or right on the screen to browse through different applications and menus.
- **Tap:** Tap an icon to select an application or confirm an action.
- **Back Button:** Look for an on-screen back arrow or a physical button (if present) to return to the previous screen or main menu.

Functions Overview

Camera

The watch features a built-in selfie-cam for taking photos.

1. From the main menu, tap the "Camera" icon.
2. Position the watch to capture your desired image.
3. Tap the on-screen shutter button to take a photo.
4. Photos are automatically saved to the watch's album.

Video Recorder

Record short videos directly from your watch.

1. Tap the "Video" icon from the main menu.
2. Tap the record button to start recording.
3. Tap the record button again to stop recording.
4. Videos are saved to the watch's album.

Games

Enjoy pre-loaded interactive games on your watch.

1. Select the "Games" icon.
2. Choose from the list of available games.
3. Follow the on-screen instructions to play.

Calculator

Perform basic arithmetic calculations.

1. Tap the "Calculator" icon.
2. Use the touch-screen keypad to input numbers and operations.

Voice Recorder

Record short audio messages or notes.

1. Select the "Voice Recorder" icon.
2. Tap the record button to start recording.
3. Tap the stop button to finish. Recordings are saved for playback.

Clock Dial / Watch Faces

Customize the appearance of your watch face with various Minecraft themes.

1. From the main clock screen, tap and hold the display, or navigate to the "Clock Dial" settings.
2. Swipe through the available watch faces (refer to Figure 5).
3. Tap to select your preferred watch face.

Alarm

Set alarms to remind you of important times.

1. Tap the "Alarm" icon.
2. Set the desired time for the alarm.
3. Activate or deactivate the alarm as needed.

Pedometer

Track your steps throughout the day.

1. Select the "Pedometer" icon.
2. The watch will automatically begin tracking steps when worn.
3. View your daily step count on this screen.

Album Viewer

View photos and videos captured with the watch.

1. Tap the "Album Viewer" icon.
2. Browse through your saved photos and videos.
3. Tap on an item to view it in full screen.

Downloading Photos and Videos

To transfer your photos and videos to a computer:

1. Connect the watch to your computer using the provided USB charging cable (refer to Figure 4).
2. The watch should appear as a removable storage device on your computer.
3. Navigate to the watch's internal storage to access and copy your media files.

MAINTENANCE

- **Cleaning:** Wipe the watch with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners.
- **Water Resistance:** This watch is not waterproof. Avoid exposing it to water, moisture, or extreme temperatures.
- **Storage:** When not in use for extended periods, store the watch in a cool, dry place.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge it regularly.

TROUBLESHOOTING

Problem	Possible Solution
Watch does not turn on.	Ensure the watch is fully charged. Connect it to the USB charger for at least 30 minutes.
Screen is unresponsive.	Try restarting the watch by holding down the power button. Ensure the screen is clean and dry.
Cannot transfer files to computer.	Ensure the USB cable is securely connected to both the watch and the computer. Try a different USB port or cable. Check if the watch is recognized as a removable drive.
Battery drains quickly.	Reduce screen brightness. Close unused applications. Limit continuous video recording or game playing.
Watch freezes or crashes.	Perform a soft reset by holding the power button until the watch turns off, then turn it back on. If issues persist, consult customer support.

SPECIFICATIONS

Feature	Detail
Model Number	MIN4045AC
Brand	Minecraft
Manufacturer	ACCUTIME
Functions	Camera, Video, Games, Calculator, Voice Recorder, Clock Dial, Alarm, Pedometer, Album Viewer
Connectivity	USB for charging and data transfer
Power	Rechargeable Battery (USB Charging Cable included)
Dimensions	14.7 x 9 x 8.5 cm (Parcel Dimensions)
Weight	230 g (Parcel Weight)
Country of Origin	China

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided on the product packaging or visit the official Minecraft or ACCUTIME website. Keep your purchase receipt as proof of purchase.



© 2025 Minecraft / ACCUTIME. All rights reserved. Minecraft is a trademark of Mojang Synergies AB.