

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Sokany](#) /

› [Sokany HS-030 Hair Straightener Instruction Manual](#)

Sokany HS-030

Sokany HS-030 Hair Straightener Instruction Manual

Model: HS-030

1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using the Sokany HS-030 Hair Straightener. Keep this manual for future reference.

Safety Warnings:

- **Burn Hazard:** Surfaces get extremely hot during use. Avoid direct contact with skin, especially the scalp, ears, and neck.
- **Electric Shock Risk:** Keep away from water. Do not use near bathtubs, sinks, showers, or other water sources. Never immerse the appliance in water or any other liquid.
- **Fire Risk:** Unplug the appliance when not in use. Do not leave unattended when plugged into an electrical outlet.
- Keep out of reach of children.
- Do not use if the cord is damaged or if the appliance malfunctions. Contact qualified service personnel for repair.
- Ensure your hands are dry when plugging in or unplugging the appliance.

2. PRODUCT OVERVIEW

The Sokany HS-030 is a versatile hair straightener designed for various hair types and styling needs. It features interchangeable plates and adjustable temperature settings.



Image 2.1: The Sokany HS-030 Hair Straightener in its closed position, showcasing its sleek design and corded electric power source.



Image 2.2: The Sokany HS-030 Hair Straightener with its heating plates open, illustrating the styling surface and plate release button.

Key Features:

- Corded Electric Power Source (220-240V, 50/60Hz, 45W)
- Interchangeable ironing plates for various styles
- Adjustable temperature settings
- Suitable for all hair types

3. SETUP

Before first use, ensure all packaging materials are removed from the appliance.

Initial Setup:

1. Unpack the hair straightener and all included accessories.
2. Inspect the appliance for any visible damage. Do not use if damaged.
3. Ensure the power cord is free from kinks or damage.
4. Place the straightener on a heat-resistant, flat surface.
5. Connect the appropriate ironing plate for your desired style. To attach, align the plate with the slots and gently push until it clicks into place.

4. OPERATING INSTRUCTIONS

Follow these steps for safe and effective hair styling.

General Operation:

1. Ensure your hair is clean, dry, and detangled before styling.
2. Plug the power cord into a suitable electrical outlet (220-240V, 50/60Hz).
3. Turn on the straightener using the power button.
4. Select your desired temperature setting. Allow a few moments for the plates to heat up to the chosen temperature.
5. Divide your hair into small, manageable sections.
6. Place a section of hair between the heating plates, close the plates gently, and glide the straightener slowly from roots to ends. Do not hold the straightener in one place for too long to avoid heat damage.
7. Repeat for all sections of hair until desired style is achieved.
8. After use, turn off the straightener and unplug it from the outlet.
9. Allow the appliance to cool completely before storing.

Replacing Ironing Plates:

The Sokany HS-030 includes interchangeable plates for different styling results. To replace:

1. Ensure the straightener is unplugged and completely cool.
2. Locate the plate release button on the side of the straightener.
3. Gently press the button and slide the current plates out.
4. Align the new plates with the slots and push them in until they click securely into place.

5. MAINTENANCE

Proper maintenance ensures the longevity and performance of your hair straightener.

Cleaning:

- Always ensure the appliance is unplugged and completely cool before cleaning.
- Wipe the exterior and heating plates with a soft, damp cloth.
- Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the surface.

- Never rinse the appliance under running water or immerse it.

Storage:

- Store the straightener in a cool, dry place, away from moisture.
- Do not wrap the power cord tightly around the appliance, as this can cause damage over time.
- Keep the appliance in its original packaging or a protective pouch to prevent damage.

6. TROUBLESHOOTING

If you encounter issues with your Sokany HS-030, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Straightener does not turn on.	Not plugged in correctly or no power from outlet.	Ensure the power cord is securely plugged into a working electrical outlet. Check the circuit breaker.
Plates are not heating up.	Appliance is not turned on or temperature setting is too low.	Press the power button to turn on. Increase the temperature setting.
Hair is not straightening effectively.	Hair is too wet, sections are too large, or temperature is too low.	Ensure hair is completely dry. Work with smaller sections of hair. Increase the temperature setting.
Plates are difficult to replace.	Plate release button not fully pressed or plates are misaligned.	Ensure the straightener is cool. Press the release button firmly. Align plates carefully before pushing.

7. SPECIFICATIONS

Detailed technical specifications for the Sokany HS-030 Hair Straightener.

Feature	Detail
Brand	Sokany
Model Number	HS-030
Power Source	Corded Electric
Voltage	220-240V
Frequency	50/60Hz
Power Consumption	45W
Hair Type Compatibility	All Hair Types

Feature	Detail
Resulting Hair Type	Straight
Item Form	Flat
Color	Red
Size	One Size
Shipping Dimensions	40.5 x 34.2 x 6.4 cm
Shipping Weight	540 grams
ASIN	B097QL5V3K
Manufacturer Reference	6548754521

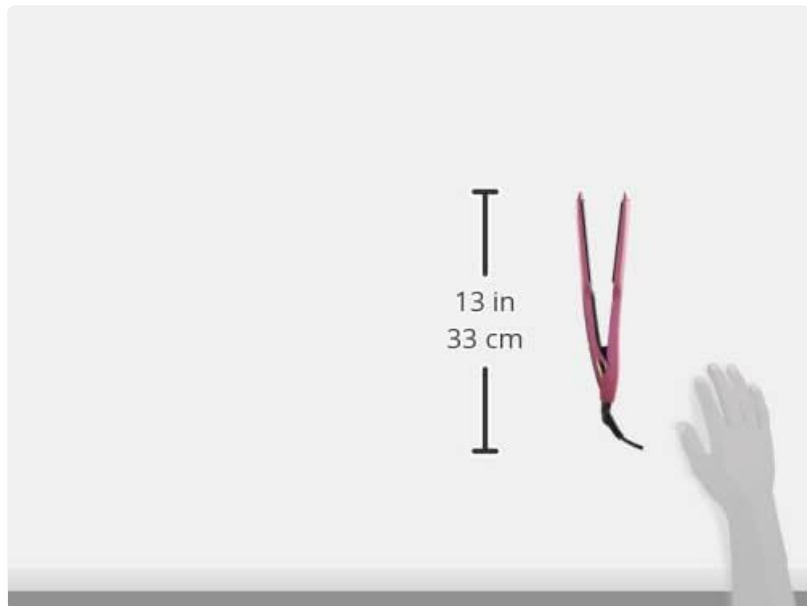


Image 7.1: The Sokany HS-030 Hair Straightener with approximate dimensions (13 inches / 33 cm) for reference.

8. WARRANTY AND SUPPORT

Specific warranty information for the Sokany HS-030 Hair Straightener is not provided in this manual. For warranty claims, technical support, or service inquiries, please contact your retailer or the manufacturer directly. Keep your proof of purchase for any warranty-related requests.