

[Manuals.plus](#) /

> [FOPETT](#) /

> FOPETT Wireless Keyboard and Mouse Set User Manual

FOPETT V2020

FOPETT Wireless Keyboard and Mouse Set User Manual

Model: V2020 White Colorful

1. PRODUCT OVERVIEW

The FOPETT Wireless Keyboard and Mouse Set provides a comfortable and efficient input solution for your computing needs. This combo features a full-size keyboard with a numeric keypad and a silent mouse, both connecting wirelessly via a single 2.4 GHz USB Nano receiver.



Image: FOPETT Wireless Keyboard and Mouse Set (White Colorful) with USB receiver.

The keyboard features round, typewriter-style keycaps designed for comfortable typing, while the mouse offers adjustable DPI settings for precise cursor control. Both devices are equipped with power-saving features, including an auto-sleep

mode to extend battery life.

2. SETUP GUIDE

2.1. Installing Batteries

The keyboard requires one AA alkaline battery, and the mouse requires one AA alkaline battery. Batteries are not included.

1. For the Mouse:

- Open the battery compartment located on the bottom of the mouse.
- Insert one AA battery, ensuring correct polarity.
- Replace the battery compartment cover.

2. For the Keyboard:

- Remove the battery compartment cover on the bottom of the keyboard by squeezing the cover in from the tab to release it.
- Insert one AA battery, ensuring correct polarity.
- Replace the battery compartment cover.

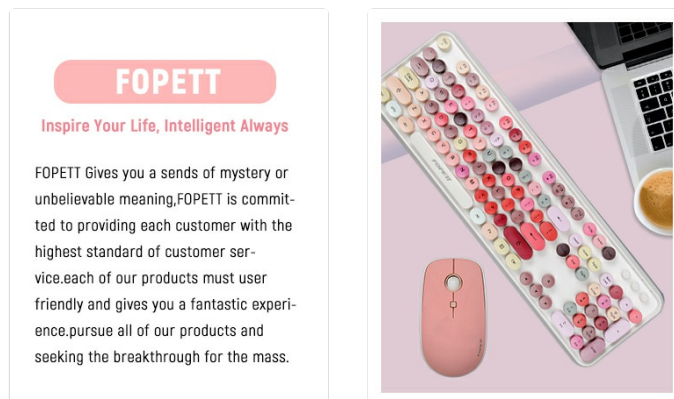


Image: Steps for installing batteries in the mouse and keyboard.

2.2. Connecting the USB Receiver

The Nano USB receiver is conveniently stored in the battery compartment of the mouse. This single receiver connects both the keyboard and the mouse to your device.

1. Take out the USB receiver from the mouse's battery compartment.
2. Plug the USB receiver into an available USB port on your computer, laptop, Smart TV, or other compatible device.
3. Turn on the power switch located on the bottom of both the keyboard and the mouse. The devices should connect automatically.

ONLY NEED ONE USB FOR BOTH KEYBOARD AND MOUSE



Image: Illustration showing that only one USB receiver is needed for both the keyboard and mouse.

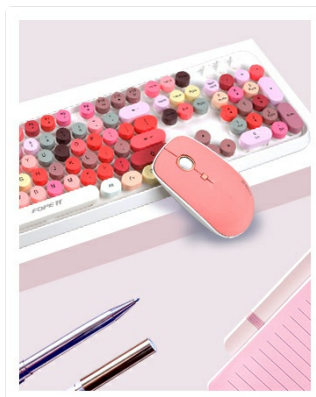 
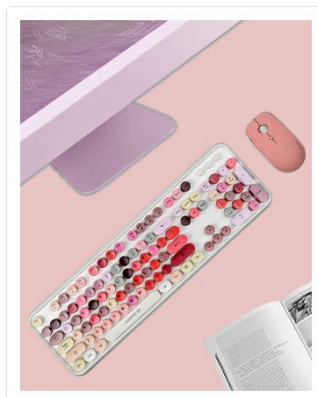 


Image: Steps for connecting the USB receiver and storing it in the mouse.

3. OPERATING INSTRUCTIONS

3.1. Power-Saving Features

Both the keyboard and mouse are designed with intelligent power-saving modes to extend battery life:

- If there is no operation with the keyboard and mouse for more than 5 minutes, they will automatically enter sleep mode.
- To activate them, simply press any key on the keyboard or click any button on the mouse.
- The mouse's optical LED will turn off in economize state, and mouse movement will not be responsive until reactivated.
- When traveling, if the receiver is disconnected from your device, the mouse's LED will automatically switch off for power-save.

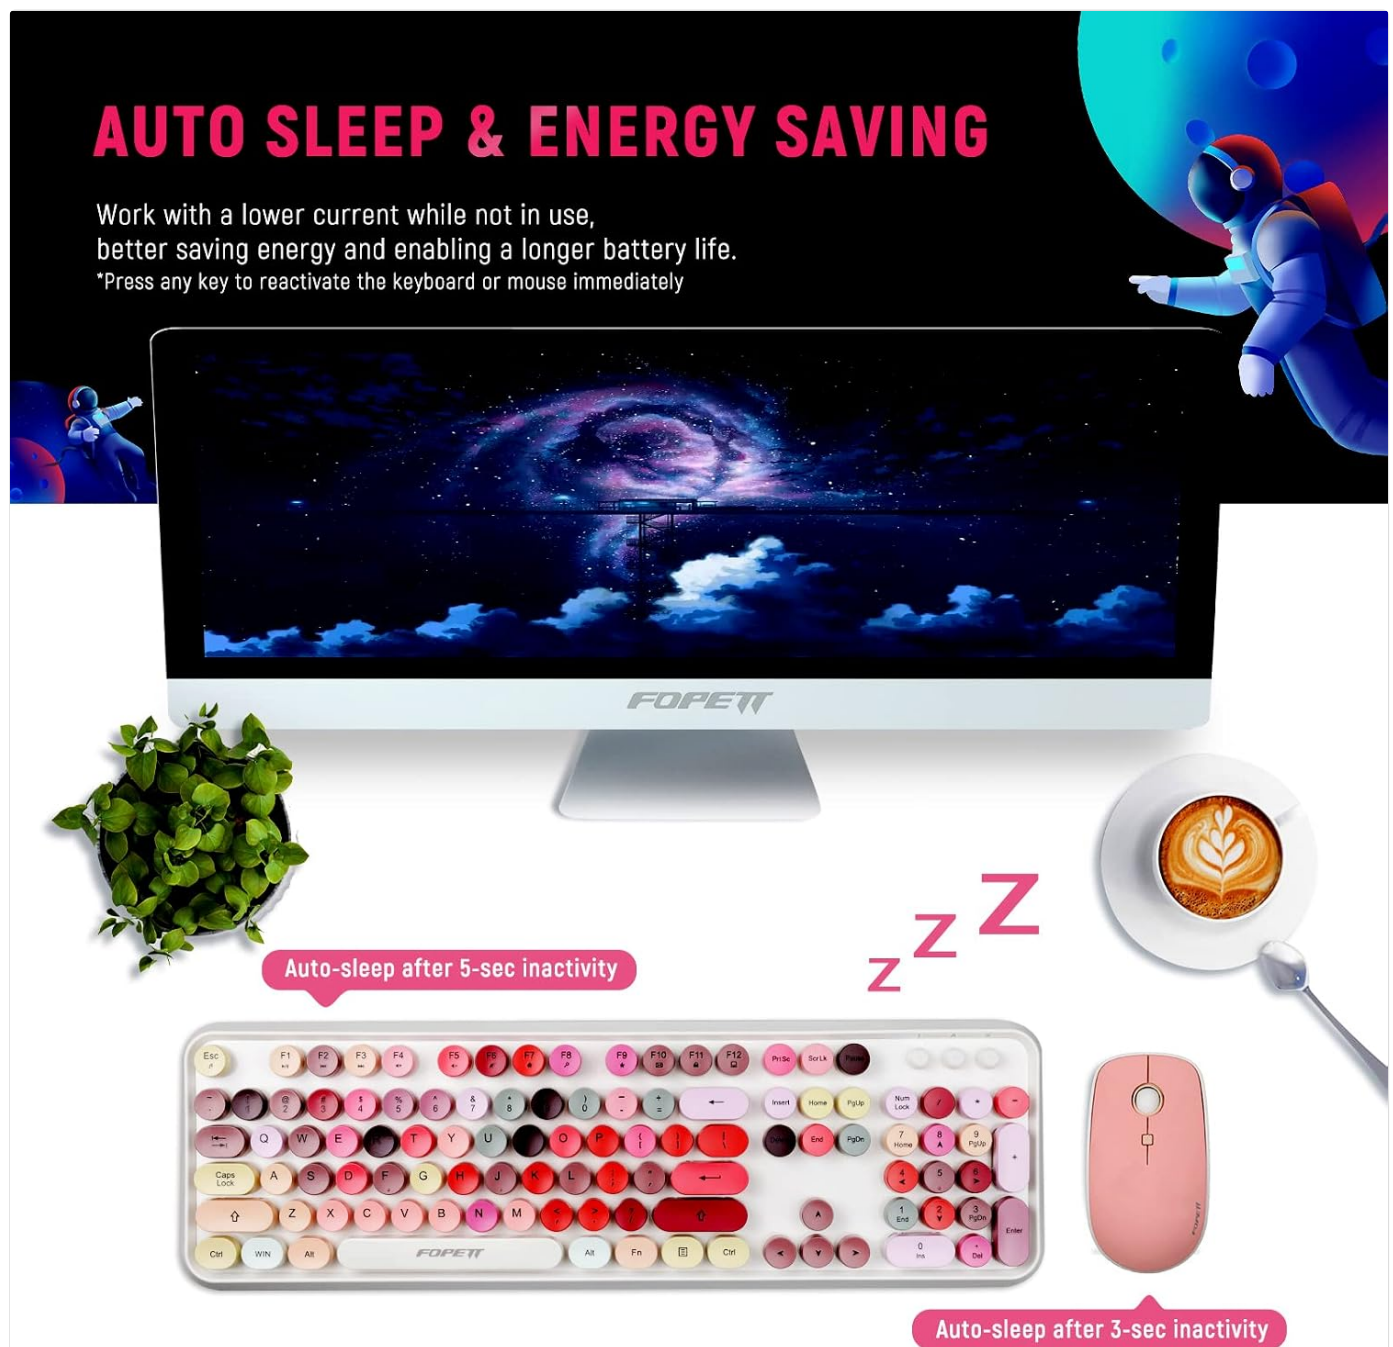 


Image: Diagram illustrating the auto-sleep and energy-saving functions of the keyboard and mouse.

3.2. Keyboard Features

The keyboard features 12 function keys for quick access to various commands. Please note that hotkeys may not be fully

compatible with Mac systems.

Keyboard Function Keys (FN + Key)

Function Key	Description
FN + F1	Music Player
FN + F2	Play/Pause
FN + F3	Previous One
FN + F4	Volume+
FN + F5	Volume-
FN + F6	Mute
FN + F7	Web
FN + F8	Search
FN + F9	Favorites
FN + F10	Email
FN + F11	Lock
FN + F12	Windows

INDICATOR IN UPPER RIGHT CORNER

1 Num lock indicator

A Uppercase and lowercase switch indicator

Low battery/
2.4G connection indicator



17.7INCH/44.95CM

5.47INCH/13.89CM

FN + ESC Music Player

FN + F1 Player/ Pause

FN + F2 Previous One

FN + F3 Next One

FN + F4 Volume+

FN + F5 Volume-

FN + F6 Mute

FN + F7 Web

FN + F8 Search

FN + F9 Favorites

FN + F10 Email

FN + F11 Lock

FN + F12 Windows

Image: Overview of keyboard indicators and function key shortcuts.

3.3. Mouse DPI Settings

The mouse features multiple DPI levels (800, 1200, 1600) for fast and precise cursor control. The default DPI is 1600. To adjust DPI, press the DPI button located on the top of the mouse.



AUTOMATIC POWER SAVING



Image: Illustration of mouse DPI settings and automatic power saving states (working, stand-by, auto-sleep, press to activate).

3.4. Compatibility

This keyboard and mouse combo is compatible with various operating systems and devices that have a USB slot:

- **Operating Systems:** Windows XP/ME/Vista/7/8/10/11
- **Compatible Devices:** PCs, Laptops, MacBooks, Desktops, Chromebooks, Smart TVs, Projectors, Tablets.



Image: Visual representation of compatible devices including Smart TV, PC, Laptop, Mac, Workstation, and Projector.

4. MAINTENANCE

4.1. Cleaning

The keyboard features detachable round keycaps, making it easier to clean the bottom of your keyboard and remove dust or debris.

- Gently pull up on the keycaps to remove them.
- Use a soft brush or compressed air to clean dust and debris from the keyboard base.
- Wipe the keycaps with a damp cloth and mild soap if necessary, then dry thoroughly before reattaching.



Image: Close-up of detachable round keycaps, highlighting ease of cleaning.

5. TROUBLESHOOTING

5.1. Connection Exception Solutions

If you experience connection issues, try the following steps:

1. **For Keyboard:**

- Take out the battery and USB receiver.
- Reload the battery and plug the receiver back into the computer.
- Turn on the keyboard switch, ensuring it is within 20cm (approximately 8 inches) of the receiver.
- Press and hold the **ESC + K** keys together on the keyboard to re-pair.

2. **For Mouse:**

- Take out the battery and USB receiver.
- Reload the battery and plug the receiver back into the computer.
- Turn on the mouse switch, ensuring it is within 20cm (approximately 8 inches) of the receiver.
- Press and hold the **Right button** and **Scroll button** together on the mouse to re-pair.

Note: If the above solutions do not resolve the issue, please repeat the procedures to pair again.

5.2. Restoring Factory Default Settings

If the set is not working, you can try restoring the devices to factory default settings:

1. Ensure the battery volume is normal. Replace batteries if they are used up.
2. **For Mouse:** Press the right button and middle button (under the scroll wheel) simultaneously, then wait five seconds.
3. Insert the Nano receiver into the USB port of your PC or notebook.
4. **For Keyboard:** Press the **Esc** and **K** keys simultaneously, then wait five seconds.
5. Insert the Nano receiver into the USB port of your PC or notebook.

5.3. Lost USB Receiver

If your USB receiver is lost, please contact the seller immediately for assistance.

6. SPECIFICATIONS

Feature	Detail
Brand	FOPETT
Model Number	V2020
Color	White Colorful
Connectivity Technology	2.4 GHz Radio Frequency (Wireless)

Feature	Detail
Keyboard Dimensions (L x W x H)	13.53 x 4.2 x 1.17 inches (45.1 x 14 x 3.9 cm)
Mouse Dimensions (L x W x H)	3.42 x 1.86 x 0.96 inches (11.4 x 6.2 x 3.2 cm)
Mouse DPI Levels	800, 1200, 1600
Keyboard Battery	1 x AA (not included)
Mouse Battery	1 x AA (not included)
Item Weight	2.31 pounds (combined)
Special Features	Round Keycaps, Silent Click Mouse, Auto-Sleep Function, Ergonomic Design

6.1. Package Contents

- 1 x Wireless Keyboard
- 1 x Wireless Mouse
- 1 x USB Receiver (located in the mouse battery compartment)
- 1 x User Manual

7. WARRANTY AND SUPPORT

FOPETT offers a three-year worry-free warranty and a 60-day money-back guarantee for this product. We are committed to providing you with satisfactory solutions.

If you have any inquiries or concerns regarding your wireless keyboard and mouse set, or if you encounter any issues (e.g., defective item, lost USB receiver), please do not hesitate to contact us via Amazon email. Your satisfaction is our top priority.

© 2025 FOPETT. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

Where are the "copy" or "paste" key functions on the FOPETT V2020 keyboard?

The FOPETT V2020 keyboard manual does not list dedicated "copy" or "paste" function keys among its 12 function keys (FN + F1 through FN + F12). These functions are typically standard operating system shortcuts....

[Read full answer](#)

Open the live page

<https://manuals.plus/asin/B097R496BG>

More documents and user manuals: <https://manuals.plus/>