

[Manuals.plus](#) /

> [Whirlpool](#) /

> Whirlpool 7.5 kg 360 Bloomwash PRO INV Top Load Washing Machine User Manual

Whirlpool 31509

Whirlpool 7.5 kg 360 Bloomwash PRO INV Top Load Washing Machine

Model: 31509 | Brand: Whirlpool

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your new Whirlpool 7.5 kg 360 Bloomwash PRO INV Fully-Automatic Top Loading Washing Machine with In-Built Heater. Please read these instructions carefully before using the appliance and retain them for future reference. This washing machine is designed for optimal wash quality and ease of use, featuring advanced technologies for superior cleaning and energy efficiency.

2. SAFETY INFORMATION

To reduce the risk of fire, electric shock, or injury, follow these basic precautions:

- Read all instructions before using the appliance.
- Do not wash articles that have been previously cleaned in, washed in, soaked in, or spotted with gasoline, dry-cleaning solvents, or other flammable or explosive substances, as they emit vapors that could ignite or explode.
- Do not allow children to play on or in the appliance. Close supervision of children is necessary when the appliance is used near children.
- Do not reach into the appliance if the tub or agitator is moving.
- Do not install or store this appliance where it will be exposed to the weather.
- Do not tamper with controls.
- Do not repair or replace any part of the appliance or attempt any servicing unless specifically recommended in the user-maintenance instructions or in published user-repair instructions that you understand and have the skills to carry out.
- Always disconnect the appliance from the power supply before cleaning or performing any maintenance.
- Ensure the power cord is not damaged and is properly grounded.

3. PRODUCT OVERVIEW

3.1. Components and Design

Your Whirlpool washing machine features a sleek Edge-to-Edge design and a durable stainless steel drum with a Hexabloom

Impeller for effective washing.



Figure 3.1: Full front view of the Whirlpool 7.5 kg top-loading washing machine in Cool Illusia color, showcasing its sleek design.



Edge to Edge Design

Figure 3.2: This image highlights the modern edge-to-edge design of the washing machine's top lid, contributing to its aesthetic appeal.

3.2. Dimensions



Figure 3.3: The image shows the dimensions of the Whirlpool 7.5 kg washing machine: 102 cm height, 59 cm width, and 57 cm depth, providing guidance for placement.

3.3. Control Panel

The intuitive control panel allows for easy selection of wash programs and features.

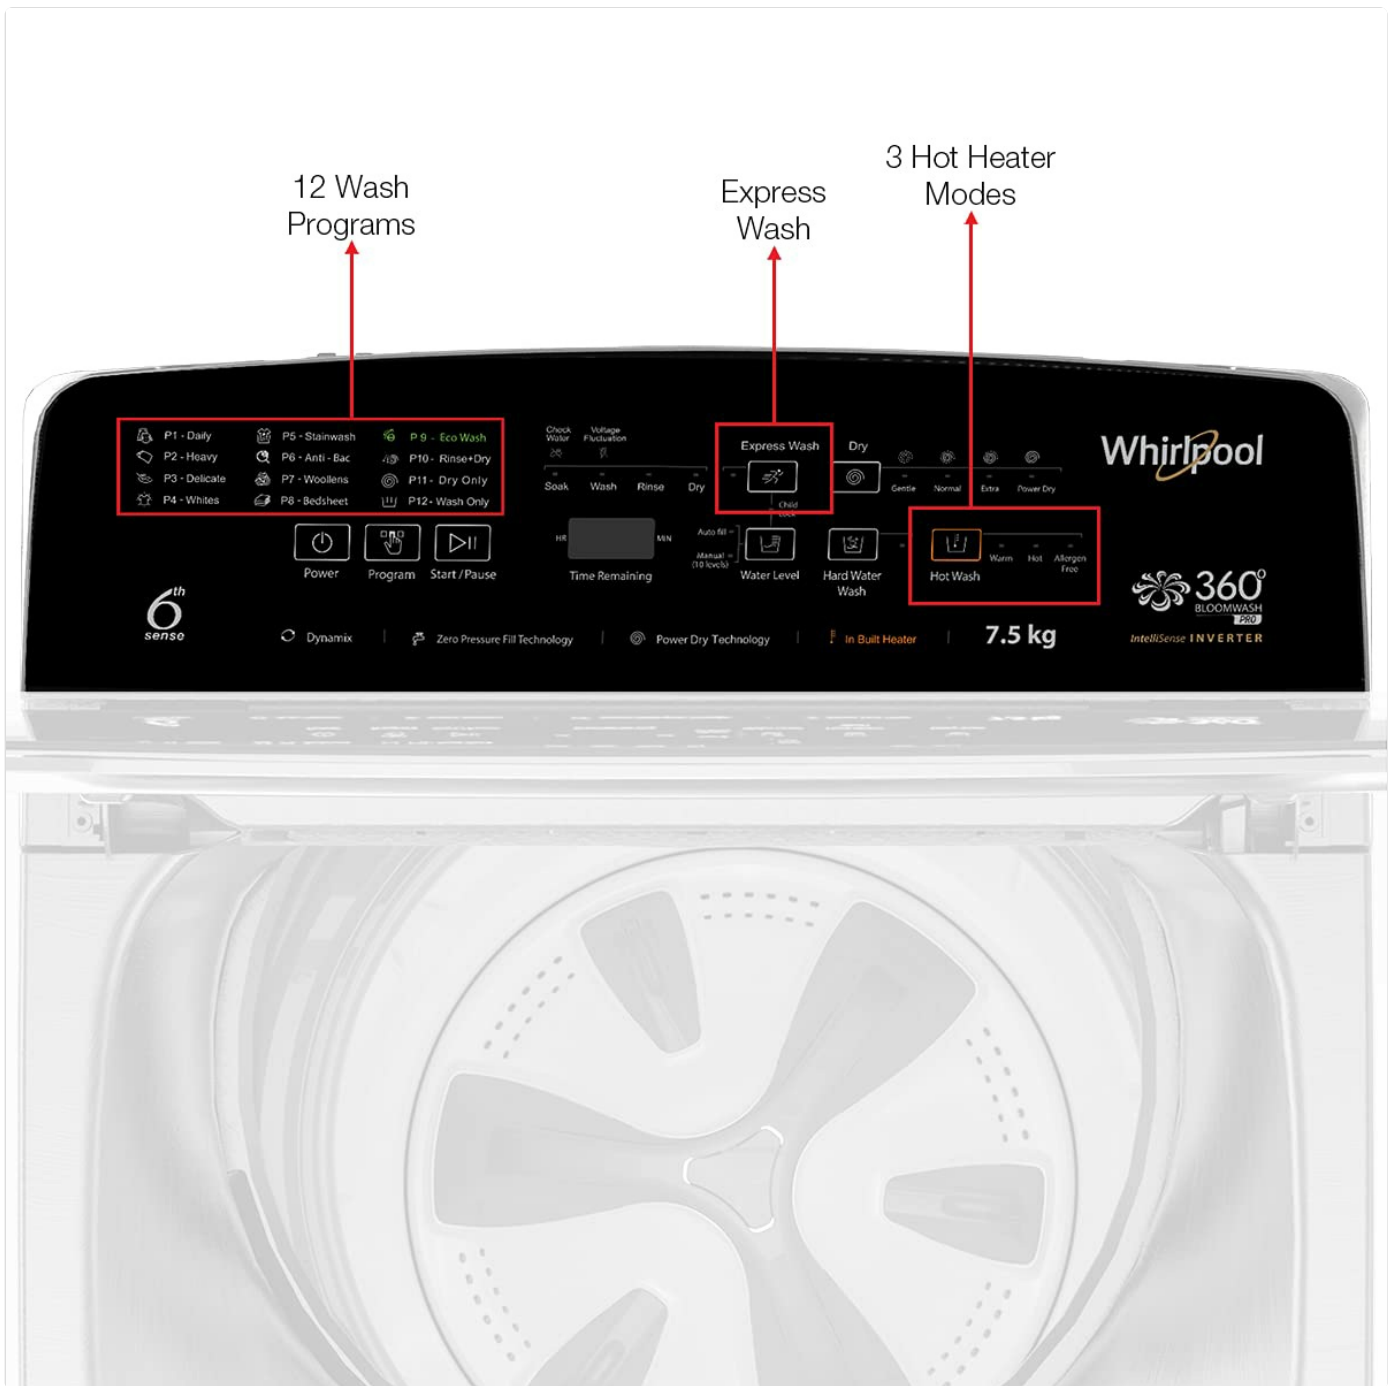 


Figure 3.4: A close-up of the LED digital display and control buttons, showing options for Power, Program, Start/Pause, Time Remaining, Water Level, Hard Water Wash, Hot Wash, and other special features.

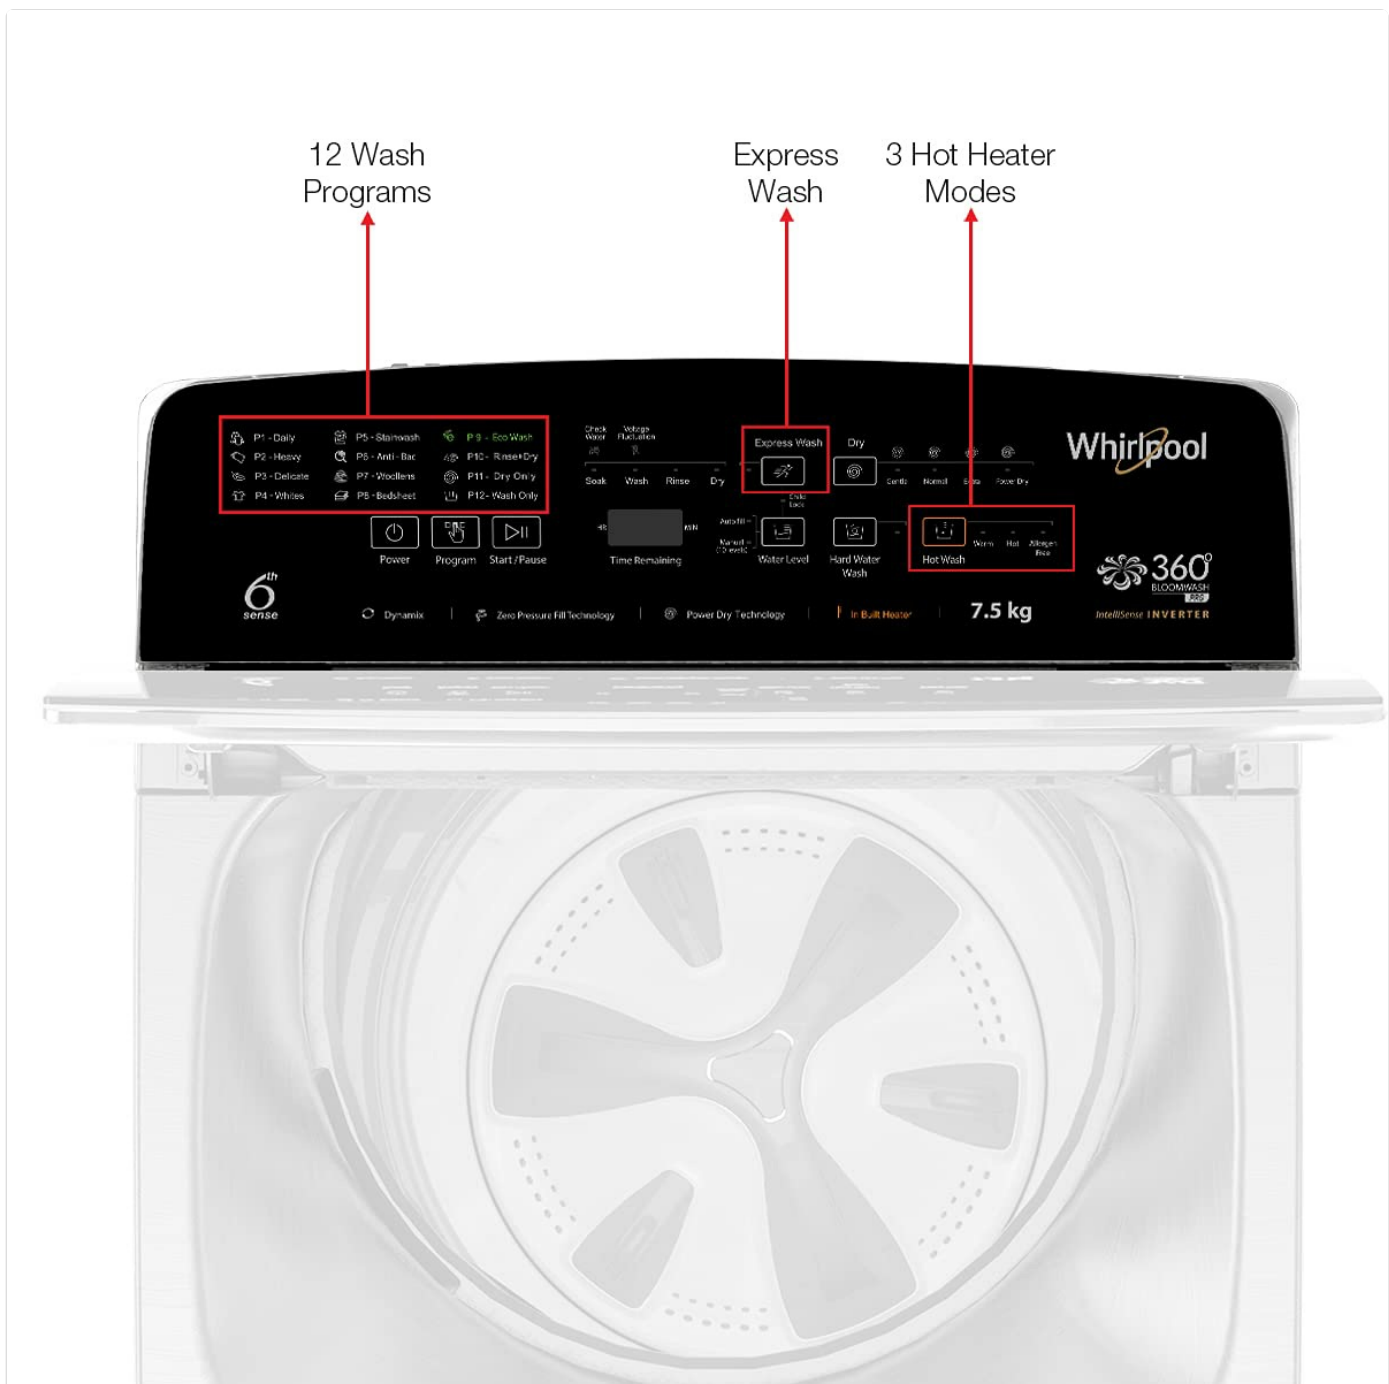 


Figure 3.5: A detailed view of the washing machine's control panel, highlighting the 12 wash programs, Express Wash, and 3 Heater Modes for various fabric types and cleaning needs.

3.4. Included Components

The following components are included with your washing machine:

- Washing Machine Unit
- Inlet Pipe
- Detergent Cup
- Rat Mesh
- Drain Pipe and Drain Hose with Clamp
- User Manual (this document)

4. INSTALLATION & SETUP

4.1. Choosing a Location

Place the washing machine on a firm, level surface. Ensure there is adequate space around the machine for ventilation and access. Avoid direct sunlight or extreme temperatures.

4.2. Water Connection

Connect the inlet pipe to a cold water tap and securely attach the other end to the water inlet valve on the back of the washing machine. Ensure all connections are tight to prevent leaks.

4.3. Drainage

Position the drain hose into a suitable drain or sink. Ensure the hose is not kinked or blocked and is securely fastened to prevent it from dislodging during operation.

4.4. Power Connection

Plug the power cord into a grounded electrical outlet. Ensure the voltage and frequency match the specifications of the appliance.

5. OPERATING INSTRUCTIONS

5.1. Loading Laundry

Open the soft-close lid and load clothes loosely into the drum. Do not overload the machine. For best results, distribute laundry evenly.



Figure 5.1: An illustration demonstrating the soft-close lid feature, which prevents sudden drops and ensures gentle closing.

5.2. Adding Detergent

Add the recommended amount of detergent to the detergent dispenser. For liquid detergents, use the provided detergent cup.

5.3. Selecting a Wash Program

Turn on the machine using the 'Power' button. Use the 'Program' button to cycle through the available wash programs until you find the desired one. The LED digital display will show the selected program.

5.4. Starting the Wash

Press the 'Start/Pause' button to begin the wash cycle. The machine will automatically fill with water and proceed with the selected program.

5.5. Using the In-Built Heater

For enhanced cleaning and sanitization, select a wash program that utilizes the in-built heater. You can choose from 3 Heater Modes (Hot Wash) on the control panel to adjust the water temperature as needed for germ removal and tough stain treatment.

5.6. Child Lock

Activate the Child Lock feature to prevent accidental changes to settings or opening of the lid during operation. Refer to the control panel for specific instructions on activating and deactivating Child Lock.

6. WASH PROGRAMS

Your washing machine offers 12 specialized wash programs to cater to various fabric types and cleaning requirements:

1. **Daily:** For everyday laundry with normal soil levels.
2. **Heavy:** For heavily soiled items like jeans or work clothes.
3. **Delicate:** Gentle wash for delicate fabrics such as silk or lace.
4. **Whites:** Optimized for white garments to maintain brightness.
5. **Bloomwash:** Utilizes 360 Bloomwash technology for thorough cleaning.
6. **Anti-Bac:** Uses hot water to remove bacteria and allergens.
7. **Rinse+Dry:** For rinsing and spinning clothes without a full wash cycle.
8. **Dry Only:** For spinning clothes to remove excess water.
9. **Eco Wash:** Energy and water-efficient wash cycle.
10. **Bed Sheet:** Specifically designed for washing bed sheets and linens.
11. **Wash Only:** For washing clothes without a rinse or spin cycle.
12. **Express Wash:** A quick wash cycle for lightly soiled clothes.

 
7. SPECIAL FEATURES

7.1. In-Built Heater

The advanced in-built heater removes up to 99.9% of germs and allergens, sanitizing your clothes. It also effectively tackles up to 25 tough stains and removes stains that are up to 48 hours old.



**IN-BUILT
HEATER**

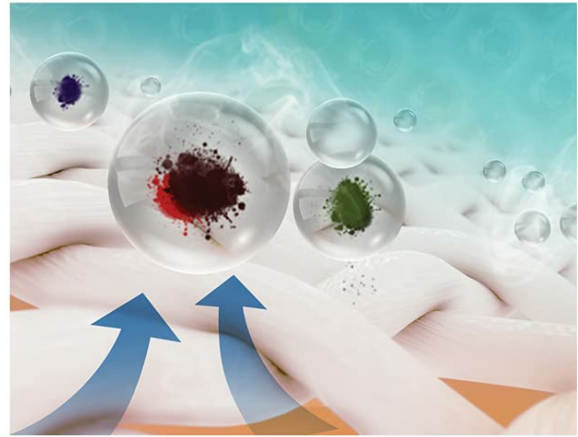

*T&C APPLY

**UP TO 99.9%* GERMS
& ALLERGEN FREE**



**REMOVE 25^
TOUGH STAINS**

^T&C APPLY



**REMOVES# UP TO 48 HOURS
OLD STAINS**

#T&C APPLY

Figure 7.1: This graphic illustrates the benefits of the in-built heater, showing its ability to remove up to 99.9% germs and allergens, tackle 25 tough stains, and remove stains up to 48 hours old.

7.2. 360 Bloomwash Technology

Equipped with a newly designed Hexabloom Impeller with six vanes, this technology moves clothes in a unique 360-degree blooming wash motion. This ensures optimal cleaning results with minimal fabric abrasion.



Figure 7.2: A top-down view of the washing machine's stainless steel drum, featuring the Hexabloom Impeller designed for effective and gentle washing.

7.3. IntelliSense Inverter Motor

The IntelliSense Inverter Motor consumes less energy and operates with low noise and vibration, contributing to a quieter and more efficient washing experience.

7.4. Hard Water Wash

This feature is designed to maintain optimal washing performance even in areas with hard water, ensuring your clothes get a thorough clean.



Figure 7.3: This image shows the Hard Water Wash feature, designed to optimize washing performance even in areas with hard water.

7.5. 5 Star Energy Rating

The washing machine boasts a 5-star energy rating, making it highly energy and resource efficient, which helps in reducing power consumption and saving water.

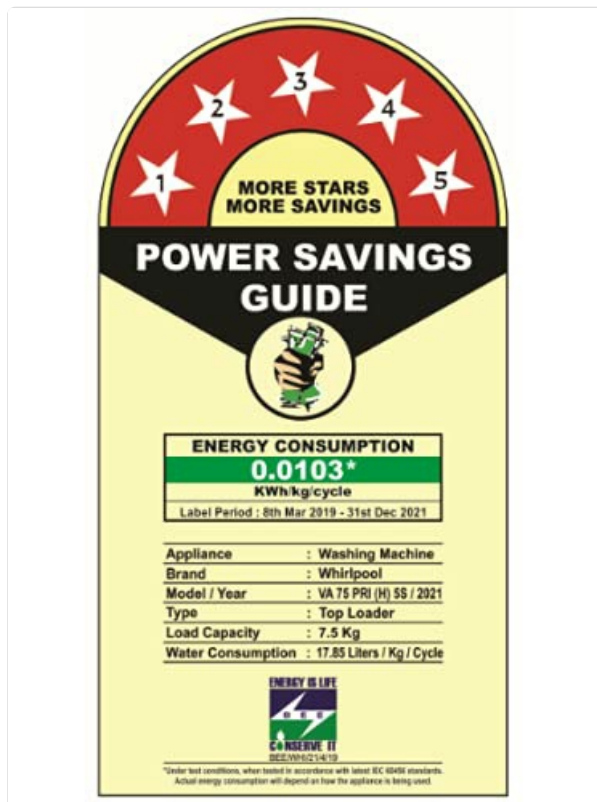 


Figure 7.4: This image displays the 5-star energy rating label for the Whirlpool 7.5 kg washing machine, indicating its high energy efficiency and low power consumption.

7.6. Additional Features

- **Catalytic Soak:** Enhances detergent action for better stain removal.
- **Power Dry:** Efficient drying cycle to reduce moisture in clothes.
- **Dynamix:** Ensures thorough mixing of detergent for optimal cleaning.
- **Zero Pressure Fill Technology:** Ensures the wash tub fills 50% faster even with low water pressure.
- **Auto Tub Clean Feature:** Automatically cleans the wash tub to prevent odor and maintain hygiene.

7.7. Product Overview Video

Your browser does not support the video tag.

Video 7.1: This video provides a brief overview of the Whirlpool Bloomwash Pro Series Top Load Washing Machine, showcasing its key features such as the Hexabloom Impeller, in-built heater, energy efficiency, soft-close lid, and IntelliSense inverter motor.

8. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your washing machine.

8.1. Cleaning the Detergent Dispenser

Remove the detergent dispenser drawer and rinse it under running water to remove any detergent residue. Clean any buildup in the dispenser housing with a brush.

8.2. Cleaning the Lint Filter

Locate the lint filter (usually inside the drum or near the top rim). Remove it, clean out any accumulated lint or debris, and rinse thoroughly before reinserting.

8.3. Cleaning the Drum

Use the 'Auto Tub Clean' feature regularly to clean the drum. Alternatively, run an empty hot wash cycle with a washing machine cleaner or a cup of white vinegar.

8.4. Cleaning the Exterior

Wipe the exterior surfaces of the machine with a soft, damp cloth. Avoid using abrasive cleaners or solvents that could damage the finish.

9. TROUBLESHOOTING

Before contacting customer service, please refer to the following common issues and their solutions:

Problem	Possible Cause	Solution
Machine does not start	Power cord unplugged, door not closed properly, power outage.	Check power connection, ensure lid is fully closed, check household circuit breaker.
Water not filling	Water tap closed, inlet hose kinked, water pressure too low.	Open water tap, straighten inlet hose, check water supply.
Water not draining	Drain hose kinked or blocked, pump filter clogged.	Straighten drain hose, clean pump filter.
Excessive vibration/noise	Machine not level, load unbalanced, transit bolts not removed.	Adjust leveling feet, redistribute laundry, ensure transit bolts are removed during installation.
Clothes not clean	Too much/too little detergent, wrong wash program, overloaded.	Use correct detergent amount, select appropriate program, do not overload.

10. SPECIFICATIONS

Feature	Detail
Brand	Whirlpool

Feature	Detail
Model	31509
Capacity	7.5 Kilograms
Maximum Rotational Speed	740 RPM
Form Factor	Top-Loading
Colour	Cool Illusia
Number of Option Cycles	12
Access Location	Top Load
Included Components	Inlet Pipe, Detergent Cup, Rat Mesh, Drain Pipe and Drain Hose with Clamp
Manufacturer	Whirlpool, Whirlpool of India Limited, Village Thirubhavnai, Puducherry - 605107, India
Item Weight	32 kg
Item Dimensions (LxWxH)	57 x 60.7 x 104.6 Centimeters
Energy Rating	5 Star
Motor Type	IntelliSense Inverter
Heater	In-Built Heater

11. WARRANTY & SUPPORT

11.1. Warranty Information

Your Whirlpool washing machine (Inverter model) comes with a **3-year comprehensive warranty** on the product and a **12-year warranty on the motor and prime mover** from the date of purchase. Please retain your purchase receipt for warranty claims.

11.2. Customer Support

For any service, support, or warranty-related queries, please contact Whirlpool customer service:

- **Email:** helpdeskindia@whirlpool.com
- **Toll Free:** 1800 208 1800
- **Manufacturer Address:** Whirlpool of India Limited, Village Thirubhavnai, Puducherry - 605107, India
- **Importer Address:** Whirlpool of India Ltd. Plot No. A-4, MIDC Ranjangaon, Taluka Shirur, Dist: Pune, Maharashtra 412220, India