

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Daewoo](#) /

› [Daewoo DI7972 Wireless Selfie Stick User Manual](#)

Daewoo DI7972

Daewoo DI7972 Wireless Selfie Stick User Manual

INTRODUCTION

This manual provides detailed instructions for the safe and effective use of your Daewoo DI7972 Wireless Selfie Stick. Please read this manual thoroughly before operating the device and retain it for future reference. The Daewoo DI7972 functions as both a telescopic selfie stick and a stable tripod, featuring a detachable Bluetooth remote control for convenient photo and video capture.

PRODUCT OVERVIEW AND COMPONENTS

The Daewoo DI7972 is a versatile accessory designed for smartphone photography and videography. It combines a telescopic extension pole with a stable tripod base and a wireless remote control.

Key Features:

- 2-in-1 Functionality:** Functions as both a selfie stick and a tripod.
- Telescopic Extension:** Extends up to 70 cm for wider shots.
- Detachable Bluetooth Remote:** Wireless control up to 10 meters.
- Compact Design:** Folds down to 20 cm for portability.
- Wide Compatibility:** Supports Android and iOS smartphones (version 4.0 or higher).

Package Contents:

- Daewoo DI7972 Wireless Selfie Stick with integrated tripod
- Detachable Bluetooth Remote Control (with CR2032 battery installed)



Image: The retail packaging for the Daewoo DI7972 Wireless Selfie Stick, showing the device and remote control.

SETUP INSTRUCTIONS

1. Charging the Remote Control (if necessary)

The remote control comes with a CR2032 battery pre-installed. If the remote does not respond, the battery may need replacement. Refer to the Maintenance section for battery replacement instructions.

2. Pairing the Bluetooth Remote Control

1. Ensure the remote control is charged or has a working battery.
2. Turn on the remote control by sliding the power switch (usually on the side). An indicator light will flash, indicating it's in pairing mode.
3. On your smartphone, go to **Settings > Bluetooth**.
4. Enable Bluetooth and search for available devices.
5. Select "AB Shutter3" or a similar name from the list of devices to pair.
6. Once paired, the indicator light on the remote will stop flashing or turn solid.



Image: The detachable Bluetooth remote control with buttons for iOS and Android devices.

3. Attaching Your Smartphone

1. Gently pull apart the spring-loaded phone holder clamps.
2. Carefully insert your smartphone into the holder, ensuring it is securely gripped.
3. Adjust the angle of the phone holder as needed.



Image: A close-up view of the phone holder mechanism, designed to securely grip a smartphone.



Image: The back of the phone holder, featuring a small mirror for framing shots when using the phone's rear camera.

4. Extending the Selfie Stick

Hold the base of the stick firmly and gently pull the phone holder upwards to extend the telescopic pole to your desired length (up to 70 cm). Ensure all sections are locked into place before use.

5. Using as a Tripod

1. Locate the base of the selfie stick.
2. Unfold the three legs outwards from the base until they are fully extended and stable.
3. Place the tripod on a flat, stable surface.



Image: A detailed view of the three foldable legs that form the tripod base of the device.





Image: The Daewoo DI7972 selfie stick configured as a tripod, holding a smartphone in a horizontal orientation.

OPERATION

Taking Photos or Videos

1. Ensure your smartphone is securely mounted and the Bluetooth remote is paired.
2. Open your smartphone's camera application.

3. Position the selfie stick or tripod as desired.
4. Press the corresponding button on the Bluetooth remote control (usually marked for iOS or Android) to trigger the camera shutter or start/stop video recording.
5. For optimal results, ensure your phone's volume button is set to act as a shutter release in your camera app settings, if applicable.

MAINTENANCE

Cleaning:

Wipe the selfie stick and remote control with a soft, dry cloth. Do not use abrasive cleaners or immerse the device in water.

Battery Replacement (Remote Control):

1. Locate the battery compartment on the side or back of the remote control.
2. Use a small coin or screwdriver to open the compartment cover.
3. Remove the old CR2032 battery and insert a new one, ensuring correct polarity (+/-).
4. Close the battery compartment securely.

TROUBLESHOOTING

Issue	Possible Cause	Solution
Remote control does not pair.	Remote is off, battery is low/dead, or Bluetooth is off on phone.	Ensure remote is on. Replace battery if needed. Turn on phone's Bluetooth and try pairing again.
Remote control does not trigger camera.	Not paired, camera app settings, or incompatible app.	Verify pairing. Check phone camera settings to ensure volume buttons trigger shutter. Try a different camera app if issues persist.
Selfie stick feels unstable.	Telescopic sections not fully extended/locked, or tripod legs not fully spread.	Ensure all telescopic sections are fully extended and locked. When using as a tripod, ensure legs are fully spread on a flat surface.
Phone does not fit in holder.	Phone is too large or too small for the holder's range.	The holder is designed for standard smartphone sizes. Ensure you are pulling the clamps apart sufficiently. Do not force the phone.

SPECIFICATIONS

Model:	DI7972
Brand:	Daewoo
Connectivity:	Bluetooth 3.0
Wireless Range:	Up to 10 meters (33 feet)
Telescopic Length:	Up to 70 cm (27.5 inches)
Closed Length:	20 cm (7.9 inches)
Product Dimensions (L x W x H):	20 x 4.5 x 4 cm (7.9 x 1.8 x 1.6 inches)
Item Weight:	110 grams (0.24 lbs)
Remote Battery Type:	CR2032 (included)
Compatibility:	Android 4.0+ and iOS 4.0+

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official Daewoo website. Keep your proof of purchase for warranty claims.