

## Goodyear Eléctrico 1.000W

# Goodyear Electric Multifunction Brush Cutter User Manual

Brand: Goodyear | Model: Eléctrico 1.000W

## INTRODUCTION

This manual provides essential information for the safe and efficient operation, assembly, maintenance, and troubleshooting of your Goodyear Electric Multifunction Brush Cutter. Please read this manual thoroughly before first use and keep it for future reference.

## IMPORTANT SAFETY INFORMATION

Always adhere to safety guidelines to prevent injury and damage to the product.

- Read all instructions carefully before use.
- Wear protective eyewear and gloves during operation.
- Keep hands and limbs away from the cutting area.
- Do not use on slippery or unstable surfaces.
- Avoid cutting hard or metallic objects to prevent damage.

## PRODUCT COMPONENTS

Familiarize yourself with the main parts of your brush cutter.

### Overall View



This image shows the complete assembly of the Goodyear Electric Multifunction Brush Cutter, highlighting its ergonomic design and overall structure.

## Handle and Motor Unit



A detailed view of the main handle and the electric motor housing, showing the power trigger and auxiliary handle attachment point.

## Cutting Head and Guard



This image focuses on the cutting head, which can accommodate both nylon line and a 3-blade disc, along with the essential protective guard.

## ASSEMBLY INSTRUCTIONS

---

### 1. Attach the Auxiliary Handle:



Slide the auxiliary handle onto the main shaft. Secure it firmly at a comfortable position using the provided fasteners. Ensure it is tightened to prevent rotation during use.

## 2. Install the Protective Guard:



Mount the protective guard over the cutting head area. This guard is crucial for deflecting debris and protecting the user. Ensure it is securely fastened according to the diagram.

## 3. Attach the Cutting Head (Nylon Line or Blade):



Depending on your task, attach either the nylon line head or the 3-blade disc. Refer to the specific instructions for each attachment to ensure correct and secure installation. The nylon line head is suitable for lighter trimming, while the blade is for denser vegetation.

# OPERATING INSTRUCTIONS

---

## 1. Pre-Operation Check:

- Ensure all fasteners are tight and components are securely attached.
- Inspect the power cord for any damage.
- Clear the work area of any obstacles or debris that could be thrown by the cutter.

## 2. Connecting to Power:

Connect the brush cutter's power cord to a suitable outdoor-rated extension cord, ensuring the connection is secure and protected from moisture.

## 3. Starting the Unit:

Hold the brush cutter firmly with both hands. Press the safety lock-off button (if present) and then squeeze the trigger switch to start the motor. Allow the cutting head to reach full speed before beginning to cut.

## 4. Cutting Technique:



Move the cutting head in a sweeping motion, from side to side, to effectively cut grass and weeds. Maintain a steady pace and avoid forcing the tool through dense vegetation. For best results, cut in small increments.

## 5. Stopping the Unit:

Release the trigger switch to stop the motor. Disconnect the power cord from the extension cord and then from the main power outlet after use.

# MAINTENANCE

---

## • Cleaning:

After each use, disconnect the power and clean the cutting head and guard. Remove any accumulated grass, dirt, or debris. Use a damp cloth for the main unit. Do not use harsh chemicals or abrasive cleaners.

## • Nylon Line Replacement:

When the nylon line wears down, replace it according to the instructions provided with the replacement line. Ensure the correct diameter and type of line are used.

## • Blade Inspection:

Regularly inspect the 3-blade disc for sharpness and damage. Replace dull or damaged blades immediately to ensure efficient and safe operation.

## • Storage:

Store the brush cutter in a dry, secure location, out of reach of children. Ensure the power cord is neatly coiled and not kinked.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Unit does not start	No power supply; Safety switch not engaged; Damaged cord.	Check power connection; Ensure safety switch is pressed before trigger; Inspect and replace damaged cord.
Poor cutting performance	Dull blade/worn nylon line; Excessive debris in cutting head.	Replace blade/nylon line; Clean cutting head thoroughly.
Excessive vibration	Loose components; Damaged cutting head/blade.	Tighten all fasteners; Inspect and replace damaged cutting head or blade.

## SPECIFICATIONS

Feature	Detail
Model	Eléctrico 1.000W
Power Source	Electric Cable
Cutting Width	38 Centimeters
Product Weight	5.5 Kilograms
Dimensions	62l. x 30an. Centimeters
Speed	7000 RPM
Assembly Required	Yes
Country of Origin	China

## WARRANTY AND SUPPORT

This product comes with a manufacturer's warranty. Please refer to the warranty card included in the packaging for specific terms and conditions. For technical support, spare parts, or service inquiries, please contact Goodyear customer service. Keep your purchase receipt as proof of purchase.

Replacement parts availability in the EU: 1 Year.