

## Chefman RJ31-SS-V2-D

# Chefman 2-Slice Digital Toaster Instruction Manual

Model: RJ31-SS-V2-D

## IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before operating.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or toaster in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- To disconnect, press the Cancel button, then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Oversize foods, metal foil packages, or utensils must not be inserted in a toaster as they may create a fire or risk of electric shock.
- A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not attempt to dislodge food when toaster is plugged in.
- Do not operate unattended.
- Always unplug the toaster after use.

## PRODUCT OVERVIEW

The Chefman 2-Slice Digital Toaster is designed for efficient and customizable toasting. It features a clear digital display, an adjustable countdown timer, and four one-touch modes for various toasting needs. The toaster is constructed with a durable stainless steel finish and includes a removable crumb tray for easy cleaning.

### Key Features:

- **Digital Display & Countdown Timer:** Provides clear visibility of remaining toasting time.
- **Seven-Shade Dial Control:** Allows for precise browning from light to dark.
- **Extra-Wide Slots:** Accommodates various bread types, including bagels and thicker slices.
- **Four One-Touch Modes:** Includes Cancel, Reheat, Defrost, and Bagel functions.
- **Lift-Assist & Anti-Jam Function:** Ensures safe and easy removal of toasted items.
- **Removable Crumb Tray:** Simplifies cleaning and maintenance.
- **Stainless Steel Finish:** Durable and easy to clean, complementing modern kitchens.



Figure 1: Front view of the Chefman 2-Slice Digital Toaster with toast.



## Elevate your mornings with toast the way you want it.

Figure 2: The toaster positioned on a kitchen counter alongside breakfast items, highlighting its aesthetic integration.

### SETUP

#### Unpacking and Initial Placement:

- Carefully remove the toaster and all packaging materials.
- Place the toaster on a stable, flat, heat-resistant surface, away from flammable materials such as curtains or walls.
- Ensure adequate ventilation around the toaster during operation.
- Unwind the power cord and plug it into a standard 120V AC electrical outlet.

#### First Use:

Before first use, it is recommended to operate the toaster without bread on the highest setting (7) for a few cycles. This will burn off any manufacturing residues and eliminate odors. A slight odor or smoke may be present during this initial operation; this is normal and will dissipate.

### OPERATING INSTRUCTIONS

## Toasting Bread:

1. Insert up to two slices of bread into the toaster slots. The extra-wide slots accommodate various bread types.
2. Adjust the browning level using the dial control. The digital display will show the selected shade setting (1-7).



Customize your crunch with  
seven different shade settings.

Figure 3: Illustrates the seven shade settings available on the toaster for customized browning.

3. Press the toast lever down until it locks into place. The digital display will begin counting down the toasting time.





Digital timer tracks how long until your toast is done.

Figure 4: The digital timer on the toaster, indicating the remaining time for toasting.

4. Once toasting is complete, the toast will automatically pop up. The lift-assist feature helps in safely removing smaller items.



The high-lift lever raises toast up for easier removal.

Figure 5: The high-lift lever in action, raising toast for easier and safer retrieval.

### Special Functions:

- **Bagel Function:** Ideal for bagels and buns. This setting toasts the cut side of the bagel while gently warming the outer side.
  - a. Insert bagel halves with the cut side facing inwards.
  - b. Press the "Bagel" button. The indicator light will illuminate.
  - c. Press the toast lever down.



1.5-inch slots fit bagels,  
breads, buns and more!

Figure 6: The 1.5-inch wide slots designed to accommodate bagels and other thick breads.





## Bagel setting heats one side for an ideal chewy-crunchy ratio.

Figure 7: The bagel setting ensures one-sided toasting for a perfect chewy-crunchy texture.

- **Defrost Function:** For toasting frozen bread or pastries. This setting adds extra time to thaw before toasting.
  - a. Insert frozen bread into the slots.
  - b. Press the "Defrost" button. The indicator light will illuminate.
  - c. Press the toast lever down.





## Defrost setting to thaw and then toast with one button.

Figure 8: The defrost setting allows for thawing and toasting with a single button press.

- **Reheat Function:** To warm up previously toasted items without further browning.
  - a. Insert the already toasted item into the slots.
  - b. Press the "Reheat" button. The indicator light will illuminate.
  - c. Press the toast lever down.
- **Cancel Function:** To stop the toasting cycle at any time.
  - a. Press the "Cancel" button. The toast will immediately pop up.

## MAINTENANCE AND CLEANING

The removable crumb tray makes cleaning simple and helps prevent crumb buildup, which can be a fire hazard.

1. Ensure the toaster is unplugged and completely cool.
2. Pull out the crumb tray located at the back of the toaster.
3. Discard crumbs. Wipe the tray with a damp cloth and dry thoroughly.
4. Slide the crumb tray back into place until it clicks securely.

# Stainless steel

The brushed stainless-steel finish and removable crumb tray make cleaning easy.



Figure 9: The removable crumb tray for easy cleaning.

## Cleaning the Exterior:

Wipe the exterior of the toaster with a soft, damp cloth. For stubborn stains, a mild non-abrasive cleaner can be used. Do not use abrasive cleaners or metal scouring pads, as they may scratch the stainless steel finish.

## TROUBLESHOOTING

| Problem                         | Possible Cause  | Solution   |
|---------------------------------|---|--|
| Toaster does not turn on.       | Not plugged in; power outage; circuit breaker tripped.          | Ensure toaster is securely plugged into a working outlet. Check household circuit breaker.             |
| Toast is unevenly browned.      | Inconsistent bread thickness; crumb buildup; first use.         | Ensure bread slices are of uniform thickness. Clean crumb tray regularly. Initial uses may vary.       |
| Toast lever does not stay down. | Toaster is not plugged in; internal mechanism issue.            | Ensure toaster is plugged in. If problem persists, contact customer support.                           |
| Smoke coming from toaster.      | Crumb buildup; food stuck in slots; excessive browning setting. | Immediately press Cancel and unplug. Clean crumb tray. Remove any stuck food. Reduce browning setting. |

## SPECIFICATIONS

| Feature            | Detail           |
|--------------------|------------------|
| Brand              | Chefman          |
| Model Number       | RJ31-SS-V2-D     |
| Number of Slices   | 2                |
| Wattage            | 850 watts        |
| Voltage            | 120V             |
| Material           | Stainless Steel  |
| Product Dimensions | 6"D x 10"W x 7"H |

| Feature          | Detail  |
|------------------|---|
| Shade Settings   | 7   |
| Special Features | Digital Display, Countdown Timer, Lift-Assist, Anti-Jam, Removable Crumb Tray |
| UPC              | 816458020336  |



Figure 10: Product dimensions for the Chefman 2-Slice Digital Toaster.

### WARRANTY AND SUPPORT




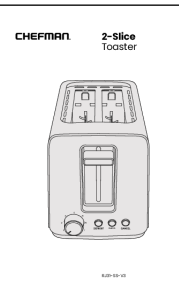 
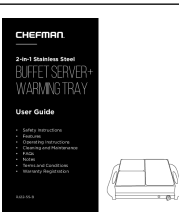 
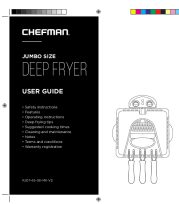 
The Chefman 2-Slice Digital Toaster is cETL approved with advanced safety technology for long-lasting durability.

- **Warranty:** This product comes with a 1-year Chefman warranty. Please refer to the official Chefman website or your purchase documentation for full warranty details and terms.



- **User Guide:** For additional information and detailed instructions, you can view the official PDF User Guide:[Chefman 2-Slice Digital Toaster User Guide \(PDF\)](#).
- **Customer Support:** For any questions, troubleshooting assistance, or warranty claims, please contact Chefman customer support through their official channels.

Related Documents - RJ31-SS-V2-D

|   |   |
|---|---|
|    | <p><a href="#">Chefman 2-Slice Digital Toaster User Guide</a></p> <p>User guide for the Chefman 2-Slice Digital Toaster (RJ31-SS-V2-D), covering safety instructions, features, operating instructions, toasting tips, cleaning and maintenance, troubleshooting FAQs, terms and conditions, and warranty registration.</p>                       |
|   | <p><a href="#">Chefman Stainless Long Slot Toaster with Extra Wide Slots User Guide</a></p> <p>User guide for the Chefman Stainless Long Slot Toaster with Extra Wide Slots (Model RJ31-SS-4L), covering safety instructions, features, operating procedures, cleaning, maintenance, and warranty information.</p>                                |
|  | <p><a href="#">Chefman RJ31-SS-V2-D 2-Slice Digital Toaster User Guide</a></p> <p>User guide for the Chefman RJ31-SS-V2-D 2-Slice Digital Toaster, providing safety instructions, operating procedures, features, troubleshooting, and warranty information.</p>  |
|  | <p><a href="#">Chefman 2-Slice Toaster User Manual and Safety Guide</a></p> <p>Comprehensive user manual for the Chefman 2-Slice Toaster (Model RJ31-SS-V3), covering safety instructions, operation, special features, toasting tips, cleaning, and warranty information.</p>  |
|  | <p><a href="#">Chefman 2-in-1 Stainless Steel Buffet Server + Warming Tray User Guide</a></p> <p>User guide for the Chefman 2-in-1 Stainless Steel Buffet Server + Warming Tray (Model RJ22-SS-B). Includes safety instructions, features, operating procedures, cleaning, maintenance, FAQs, warranty information, and terms and conditions.</p> |
|  | <p><a href="#">Chefman Jumbo Size Deep Fryer User Guide - Safety, Operation &amp; Tips</a></p> <p>Explore the Chefman Jumbo Size Deep Fryer User Guide for essential safety instructions, operating procedures, deep frying tips, cooking times, cleaning advice, and warranty details. Model RJ07-45-SS-MX-V2.</p>                               |

