

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

> [RecPro](#) /

> [RecPro RV Microwave with Trim Kit \(RPM-5-BLK\) Instruction Manual](#)

## RecPro RPM-5-BLK

# RecPro RV Microwave with Trim Kit (RPM-5-BLK) Instruction Manual

Model: RPM-5-BLK

[Introduction](#) | [Safety](#) | [Contents](#) | [Installation](#) | [Setup](#) | [Operation & Support](#) | [Maintenance](#) | [Troubleshooting](#) | [Specifications](#) | [Warranty](#)

## 1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your RecPro RV Microwave, Model RPM-5-BLK. This 0.9 cubic foot, 900-watt black microwave oven is designed for recreational vehicle use and includes a trim kit for integrated installation. Please read all instructions carefully before operating the appliance.

*Video: RecPro Brand Overview. This video provides a general overview of the RecPro brand and its commitment to RV products.*



*Image: Front view of the RecPro RV Microwave with the included trim kit, showcasing its sleek black finish.*

## 2. IMPORTANT SAFETY INSTRUCTIONS

**WARNING: To reduce the risk of electric shock, do not remove the cover or back of the unit. There are no user-serviceable parts inside. Refer all servicing to qualified service personnel.**

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions before using the appliance.
2. Do not operate the oven if the door is damaged, or if the unit is malfunctioning.
3. Do not attempt to service or repair the oven yourself. Contact qualified service personnel.
4. Ensure proper ventilation around the microwave. Do not block any ventilation openings.
5. Do not use corrosive chemicals or vapors in this appliance.
6. Do not heat liquids or other foods in sealed containers as they are liable to explode.
7. Always use microwave-safe cookware. Metal objects can cause arcing and damage the oven.
8. This microwave is equipped with a **Child Safety Lock** feature to prevent unintended operation. Refer to the Operating Instructions for activation and deactivation.



Image: Rear view of the RecPro RV Microwave, showing the power cord and important warning labels regarding electrical safety and servicing.

### 3. PACKAGE CONTENTS

Your RecPro RV Microwave package includes:

- RecPro RV Microwave Unit (RPM-5-BLK)
- Trim Kit for integrated installation
- Glass Turntable
- Instruction Manual

### 4. INSTALLATION

The RecPro RV Microwave is designed for built-in installation using the provided trim kit. While the unit is listed as 'Countertop' in some specifications, the trim kit facilitates a seamless, integrated look within your RV cabinetry. Professional installation is recommended to ensure proper fit, ventilation, and electrical


connection.

### Dimensions for Installation:

**External Microwave Dimensions:** 19" W x 10 1/8" H x 14 1/4" D

**External Dimensions with Trim Kit:** 23 1/2" W x 15 1/8" H x 14" D

Ensure the cabinet opening accommodates these dimensions for a proper fit. The trim kit is designed to cover the edges of the opening for a finished appearance.

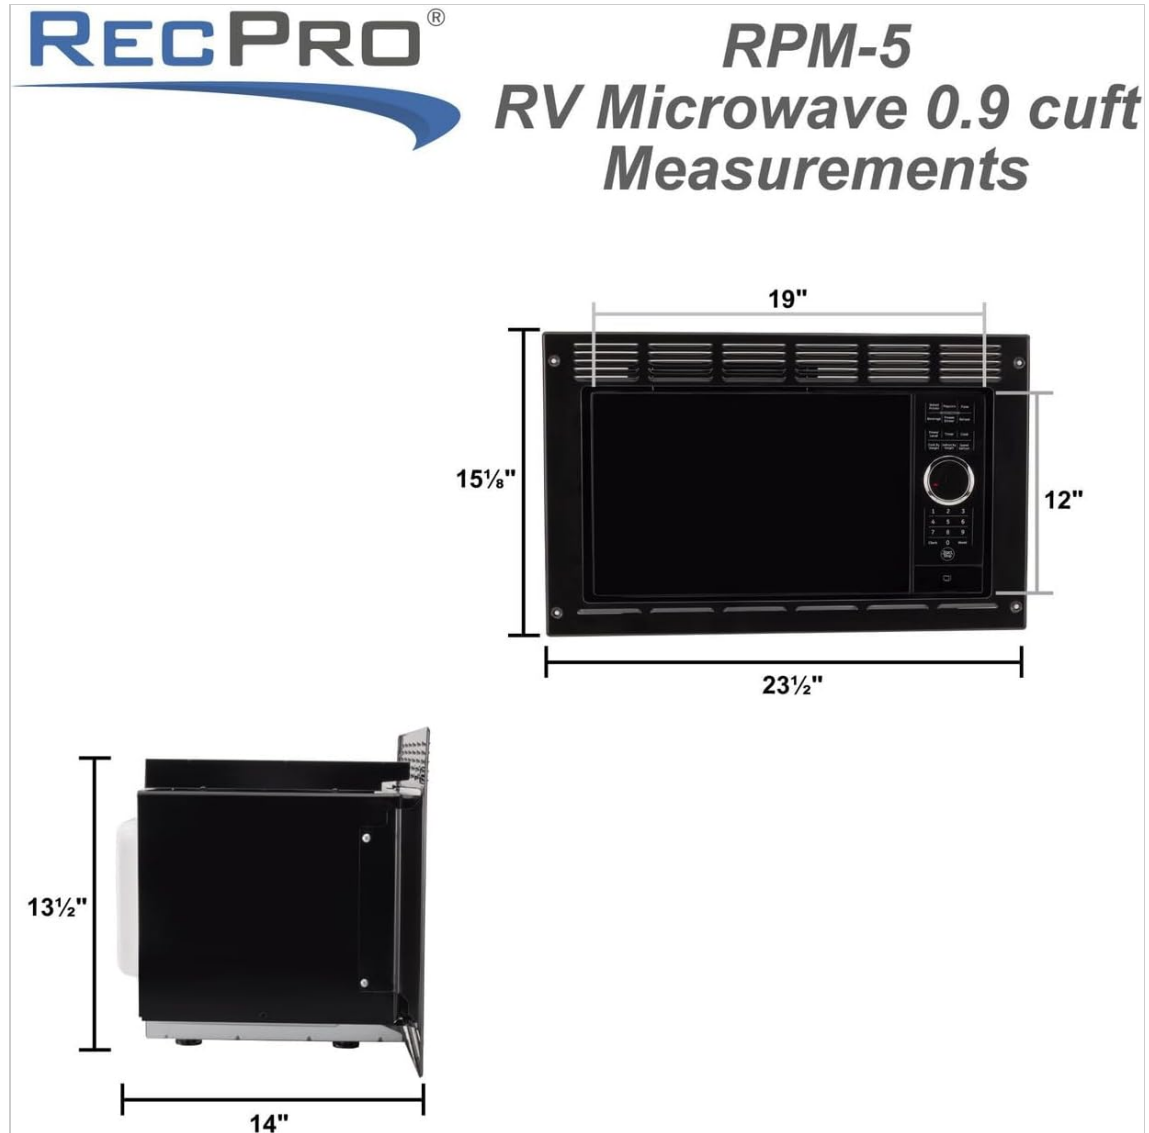

*Image: A detailed diagram illustrating the external dimensions of the RecPro RV Microwave and its trim kit, crucial for accurate installation measurements.*



*Image: Side view of the RecPro RV Microwave, providing a perspective on its depth and design for installation planning.*

## 5. INITIAL SETUP

---

1. After installation, place the glass turntable and turntable support ring securely inside the microwave cavity.
2. Plug the microwave into a grounded 120V AC outlet.
3. Set the clock: Press the 'Clock' button, then use the number pad to enter the current time. Press 'Clock' again to confirm.

## 6. OPERATING INSTRUCTIONS

---

Your RecPro RV Microwave features a user-friendly control panel with various cooking options.

### **Control Panel Overview:**



Image: A close-up view of the microwave's control panel, highlighting the digital display, number pad, and various function buttons.

### Basic Cooking:

1. Place food in a microwave-safe container on the turntable.
2. Close the microwave door securely.
3. Enter desired cooking time using the number pad.
4. Press 'Power Level' and select a power level (1-10, 10 being full power). If no power level is selected, the microwave will cook at full power.
5. Press 'Start' to begin cooking.

### Quick Start / Instant Start:

Press the 'Start' button repeatedly to add 30 seconds of cooking time at full power with each press.

### Pre-set Cooking Functions:

The control panel includes dedicated buttons for common food items:

- **Popcorn:** For microwave popcorn.
- **Potato:** For baking potatoes.
- **Pizza:** For reheating pizza slices.
- **Beverage:** For heating drinks.
- **Frozen Dinner:** For heating frozen meals.
- **Reheat:** For general food reheating.

Simply press the desired pre-set button, and the microwave will automatically set the appropriate cooking time and power level.

### Defrost Functions:

- **Defrost by Weight:** Enter the weight of the food, and the microwave will calculate defrosting time.
- **Speed Defrost:** For quick defrosting of smaller items.

### Child Safety Lock:

To activate the Child Safety Lock, press and hold the 'Stop' button for 3 seconds. The display will indicate that the lock is active. To deactivate, press and hold the 'Stop' button again for 3 seconds.



*Image: The RecPro RV Microwave with its door open, revealing the spacious 0.9 cubic foot interior and glass turntable.*

**STYLISH  
TRIM KIT**

**10 POWER  
LEVELS**



**TOUCH PAD  
WITH INSTANT START  
(30 SECONDS PER TOUCH)**

**REC PRO**<sup>®</sup>

*Image: Front view of the RecPro RV Microwave, highlighting its stylish trim kit, 10 power levels, and touchpad with instant start functionality.*

## 7. MAINTENANCE

### Cleaning the Microwave:

- Always unplug the microwave before cleaning.
- Clean the interior and exterior surfaces with a soft, damp cloth and mild detergent. Avoid abrasive cleaners or scouring pads.
- The glass turntable can be removed and washed with warm, soapy water or in a dishwasher.
- Wipe the door seal and adjacent parts frequently to remove any spills or splatters.

### Care for the Trim Kit:

Wipe the trim kit with a soft, damp cloth. Avoid harsh chemicals that could damage the finish.

## 8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Microwave does not start	Power cord not securely plugged in; Door not closed properly; Circuit breaker tripped; Child Safety Lock active.	Check power connection; Ensure door is fully closed; Reset circuit breaker; Deactivate Child Safety Lock.

<b>Problem</b>	<b>Possible Cause</b>	<b>Solution</b>
Food not heating	Incorrect cooking time/power level; Microwave-safe cookware not used.	Adjust time/power; Use appropriate cookware.
Sparking or arcing inside	Metal in microwave; Food residue.	Remove metal objects; Clean interior thoroughly.
Display not functioning correctly	Electrical issue; Internal component malfunction.	Unplug and re-plug the unit. If the issue persists, contact RecPro customer support for assistance.

## 9. SPECIFICATIONS

<b>Feature</b>	<b>Detail</b>
Brand	RecPro
Model Number	RPM-5-BLK
Power Output	900 Watts
Capacity	0.9 Cubic Feet
Color	Black
Material	Stainless Steel (Inner & Outer)
Voltage	120 Volts
Item Weight	40 pounds
External Dimensions (Microwave)	19" W x 10 1/8" H x 14 1/4" D
External Dimensions (with Trim Kit)	23 1/2" W x 15 1/8" H x 14" D
Internal Dimensions	9" x 13 1/4" x 12 1/2" (overall)
Installation Type	Built-in (with Trim Kit) / Countertop
Special Feature	Child Safety Lock
Included Components	Trim Kit



Ample Oven Capacity  
0.9 Cubic Foot



Child Lock  
Safety Option



*Image: An illustration emphasizing the 0.9 cubic foot capacity and the Child Lock Safety Option of the RecPro RV Microwave.*

## 10. WARRANTY AND SUPPORT

For warranty information, product support, or to inquire about available protection plans, please contact RecPro customer service. Keep your purchase receipt as proof of purchase for any warranty claims.

### Available Protection Plans:

- 3-Year Protection Plan
- 4-Year Protection Plan
- Complete Protect (monthly billing, covers eligible past and future purchases)

These plans offer extended coverage beyond the standard manufacturer's warranty. Please refer to the specific terms and conditions of each plan for full details.