



[Manuals.plus](#) /

› [Pure Enrichment](#) /

› Pure Enrichment PureSpa Zen Cordless Essential Oil Diffuser & Light User Manual

Pure Enrichment PESPALNT

Pure Enrichment PureSpa Zen Cordless Essential Oil Diffuser & Light User Manual

Model: PESPALNT

INTRODUCTION

Thank you for choosing the Pure Enrichment PureSpa Zen Cordless Essential Oil Diffuser & Light. This manual provides important information regarding the safe operation, setup, maintenance, and troubleshooting of your new device. Please read it thoroughly before use and retain it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

- Ensure proper ventilation during use.
- Avoid direct skin contact with undiluted essential oils.
- Keep the diffuser out of reach of children and pets.
- Do not immerse the unit in water or other liquids.
- Use only the provided USB charging cable.
- Do not block the mist outlet during operation.
- Unplug the diffuser when not in use or before cleaning.

PRODUCT COMPONENTS

Familiarize yourself with the parts of your PureSpa Zen diffuser:



Image Description: An exploded view of the PureSpa Zen diffuser, showing its main components. Labels point to the Faux Leather Handle, Mist Outlet, Outer Cover, Water Tank, USB Charging Outlet, and Control Buttons.

- **Faux Leather Handle:** For easy portability.
- **Mist Outlet:** Where the aromatherapy mist is released.
- **Outer Cover:** The decorative and protective exterior of the diffuser.
- **Water Tank:** Holds water and essential oils.
- **USB Charging Outlet:** For connecting the charging cable.
- **Control Buttons:** For power, mist settings, and light control.

SETUP

1. **Unpack:** Carefully remove the PureSpa Zen Cordless Aroma Diffuser & Light and all accessories from its packaging.
2. **Charge:** Before first use, fully charge the diffuser using the provided USB charging cable. Connect the cable to the USB charging outlet on the diffuser and a compatible USB power source. The indicator light will show charging status.

3. **Prepare:** Place the diffuser on a flat, stable surface. Remove the outer cover.
4. **Fill Water Tank:** Fill the water tank with up to 80 ml of clean tap water. Do not exceed the maximum fill line.
5. **Add Essential Oils:** Add 2-3 drops of your favorite 100% pure essential oils directly into the water tank. Adjust the quantity based on personal preference and room size.
6. **Reassemble:** Replace the outer cover securely.

SOOTHING AROMATHERAPY

Stimulate your senses and calm your mood when using your favorite 100% pure essential oils



*Essential oils sold separately

Image Description: A close-up view of the PureSpa Zen diffuser with its outer cover removed, showing the water tank. A bottle of essential oil is tilted, with drops falling into the tank, illustrating the process of adding oil.

OPERATION

Power On/Off

- Press the power button () once to turn on the diffuser.
- Press and hold the power button to turn off the diffuser.

Mist Settings

The PureSpa Zen offers two mist modes:

- **Continuous Mist:** Press the mist button () once for continuous mist. The diffuser will operate until the water level is low or the timer expires.
- **Intermittent Mist:** Press the mist button () a second time for intermittent mist (30 seconds on, 30 seconds off). The diffuser will operate until the water level is low or the timer expires.
- Press the mist button a third time to turn off the mist function.

Mood Light Settings

The diffuser features an optional soft glow mood light:

- Press the light button () once to turn on the mood light.
- Press the light button a second time to turn off the mood light.

Timer Function

Set the diffuser to automatically shut off after a specified duration:

- Press the timer button () once for a 1-hour timer.
- Press the timer button a second time for a 2-hour timer.
- Press the timer button a third time to deactivate the timer.

The diffuser also features an automatic shut-off function when the water tank is empty, regardless of timer settings.



Image Description: A close-up of the base of the PureSpa Zen diffuser, highlighting the control buttons for power, mist, light, and timer settings. The buttons are clearly labeled with icons and '1H', '2H' for timer options.

MAINTENANCE

Regular cleaning ensures optimal performance and extends the lifespan of your diffuser.

Cleaning the Water Tank and Ultrasonic Plate

1. Ensure the diffuser is turned off and unplugged.
2. Remove the outer cover and empty any remaining water from the tank.
3. Wipe the inside of the water tank with a soft cloth or sponge. For stubborn residue, use a small amount of mild dish soap and rinse thoroughly.
4. Gently wipe the ultrasonic plate (the small ceramic disc at the bottom of the water tank) with a cotton swab dipped in white vinegar. Do not scrub or use abrasive materials.
5. Rinse the water tank with clean water, ensuring no soap residue remains.
6. Allow all parts to air dry completely before reassembling or storing.

Note: Clean the diffuser after every 5-6 uses or every 3-5 days, especially when changing essential oils, to prevent mineral buildup and ensure proper mist output.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No mist or weak mist output.	Insufficient water in the tank. Water level exceeds the maximum line. Ultrasonic plate is dirty or has mineral buildup. Outer cover not properly seated.	Add water to the tank, ensuring it is between the minimum and maximum lines. Empty some water if it exceeds the maximum line. Clean the ultrasonic plate as described in the Maintenance section. Ensure the outer cover is correctly placed and sealed.
Diffuser does not turn on.	Battery is depleted. Power button not pressed correctly.	Charge the diffuser using the USB cable. Press and hold the power button for a few seconds.
Light function not working.	Light button not pressed.	Press the light button to activate the mood light.
No aroma or weak aroma.	Insufficient essential oil added. Low quality essential oil.	Add more drops of essential oil. Ensure you are using 100% pure essential oils.

SPECIFICATIONS

Brand	Pure Enrichment
Model Name	PESPALNT
Color	White
Capacity	80 Milliliters
Coverage Area	Up to 160 Square Feet
Power Source	Battery Powered (Built-in Lithium Battery)

Product Dimensions	4"L x 4"W x 6.7"H (10.1 cm x 10.1 cm x 17.1 cm)
Wattage	7 watts
Auto Shutoff	Yes (when water tank is empty)
Item Weight	14.9 ounces
UPC	817387025935



Image Description: The PureSpa Zen diffuser shown next to a USB charging cable, with dimensions indicated: 6.7 inches (17.1 cm) in height and 4 inches (10.1 cm) in width.

WARRANTY AND SUPPORT

The Pure Enrichment PureSpa Zen Cordless Essential Oil Diffuser & Light is backed by Pure Enrichment's guaranteed **5-Year Manufacturer's Warranty**.

For warranty claims, technical support, or any questions regarding your product, please contact Pure Enrichment customer support. Refer to the product packaging or the official Pure Enrichment website for current contact information.

Our customer support team is dedicated to providing quality service and assistance.

