

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [adidas](#) /

› **Adidas Golf ADM-914 Golf Marker User Manual**

adidas ADM-914

Adidas Golf ADM-914 Golf Marker User Manual

Model: ADM-914

INTRODUCTION

This manual provides essential instructions for the proper use and care of your Adidas Golf ADM-914 Golf Marker. Designed for golfers, this marker assists in accurately marking your golf ball's position on the green. Please read this manual thoroughly to ensure optimal performance and longevity of your product.

PRODUCT OVERVIEW

The Adidas Golf ADM-914 Golf Marker is a durable and visually distinct accessory for any golfer. It features a vibrant Screaming Orange color and is constructed from a zinc alloy with an integrated magnet for secure attachment.



Figure 1: Front view of the Adidas Golf ADM-914 Golf Marker, featuring the Adidas logo.



Figure 2: Back view of the Adidas Golf ADM-914 Golf Marker, showing the magnetic disc.

SETUP

The Adidas Golf ADM-914 Golf Marker is designed for easy attachment to a cap or visor that has a magnetic clip. If your cap or visor does not have a magnetic clip, a separate magnetic clip accessory may be required (not included).

- 1. Prepare your cap or visor:** Ensure your cap or visor has a magnetic clip securely attached.
- 2. Attach the marker:** Place the Adidas Golf ADM-914 Golf Marker onto the magnetic clip. The integrated magnet in the marker will adhere to the clip.
- 3. Verify security:** Gently tug on the marker to ensure it is firmly attached to the magnetic clip before use.

OPERATING INSTRUCTIONS

Using the golf marker is straightforward:

- 1. Marking your ball:** When your golf ball lands on the green and needs to be moved (e.g., to clean it or if it's in another player's line), carefully place the Adidas Golf ADM-914 Golf Marker directly behind or in front of your ball.

- 2. Removing your ball:** Once the marker is in place, you may lift your golf ball.
- 3. Replacing your ball:** After cleaning or when it's your turn to play, place your golf ball back in its original position, directly in front of or behind the marker.
- 4. Retrieving the marker:** Once your ball is replaced, pick up the marker. You can reattach it to your cap or visor's magnetic clip for safekeeping.

MAINTENANCE

To maintain the appearance and functionality of your Adidas Golf ADM-914 Golf Marker:

- Cleaning:** Wipe the marker with a soft, damp cloth to remove dirt or debris. Avoid using harsh chemicals or abrasive materials, which could damage the finish.
- Storage:** Store the marker in a dry place when not in use.
- Avoid extreme conditions:** Prolonged exposure to extreme heat or cold may affect the material.

TROUBLESHOOTING

If you experience issues with your golf marker, consider the following:

- Marker frequently falls off cap:**
 - Ensure the magnetic clip on your cap or visor is clean and free of obstructions.
 - Verify that the magnetic clip itself is strong enough to hold the marker securely. Some clips may weaken over time or not be designed for strong retention.
 - The marker's magnet strength is designed for standard use. If it consistently detaches, consider using a stronger magnetic cap clip or storing the marker in a pocket when not actively marking a ball.
- Discoloration or wear:**
 - Normal wear and tear may occur with regular use. Follow maintenance guidelines to minimize this.
 - Avoid contact with harsh chemicals or prolonged exposure to direct sunlight.

SPECIFICATIONS

Model Number	ADM-914
Brand	adidas
Color	Screaming Orange
Material	Zinc Alloy, Magnet
Number of Items	1
Water Resistance Level	Not Water Resistant

WARRANTY AND SUPPORT

For warranty information or product support, please refer to the official adidas website or contact adidas customer service directly. Keep your purchase receipt as proof of purchase.

