

Bar B097T1JFX3

User Manual for Bar 11.8" 1500W Electric Smokeless Indoor Grill

Model: B097T1JFX3

Brand: Bar

1. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions carefully before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'off', then remove plug from wall outlet.
- Do not use appliance for other than intended use.

2. PRODUCT OVERVIEW

The Bar 11.8" 1500W Electric Smokeless Indoor Grill is a versatile 6-in-1 appliance designed for various cooking needs. It functions as a contact grill, electric grill, electric griddle, panini press, crepe maker, and pizza maker, offering a wide range of culinary possibilities.



Figure 2.1: The Bar Electric Smokeless Indoor Grill in its closed position, showcasing its compact design and integrated handles.

EASY TO USE

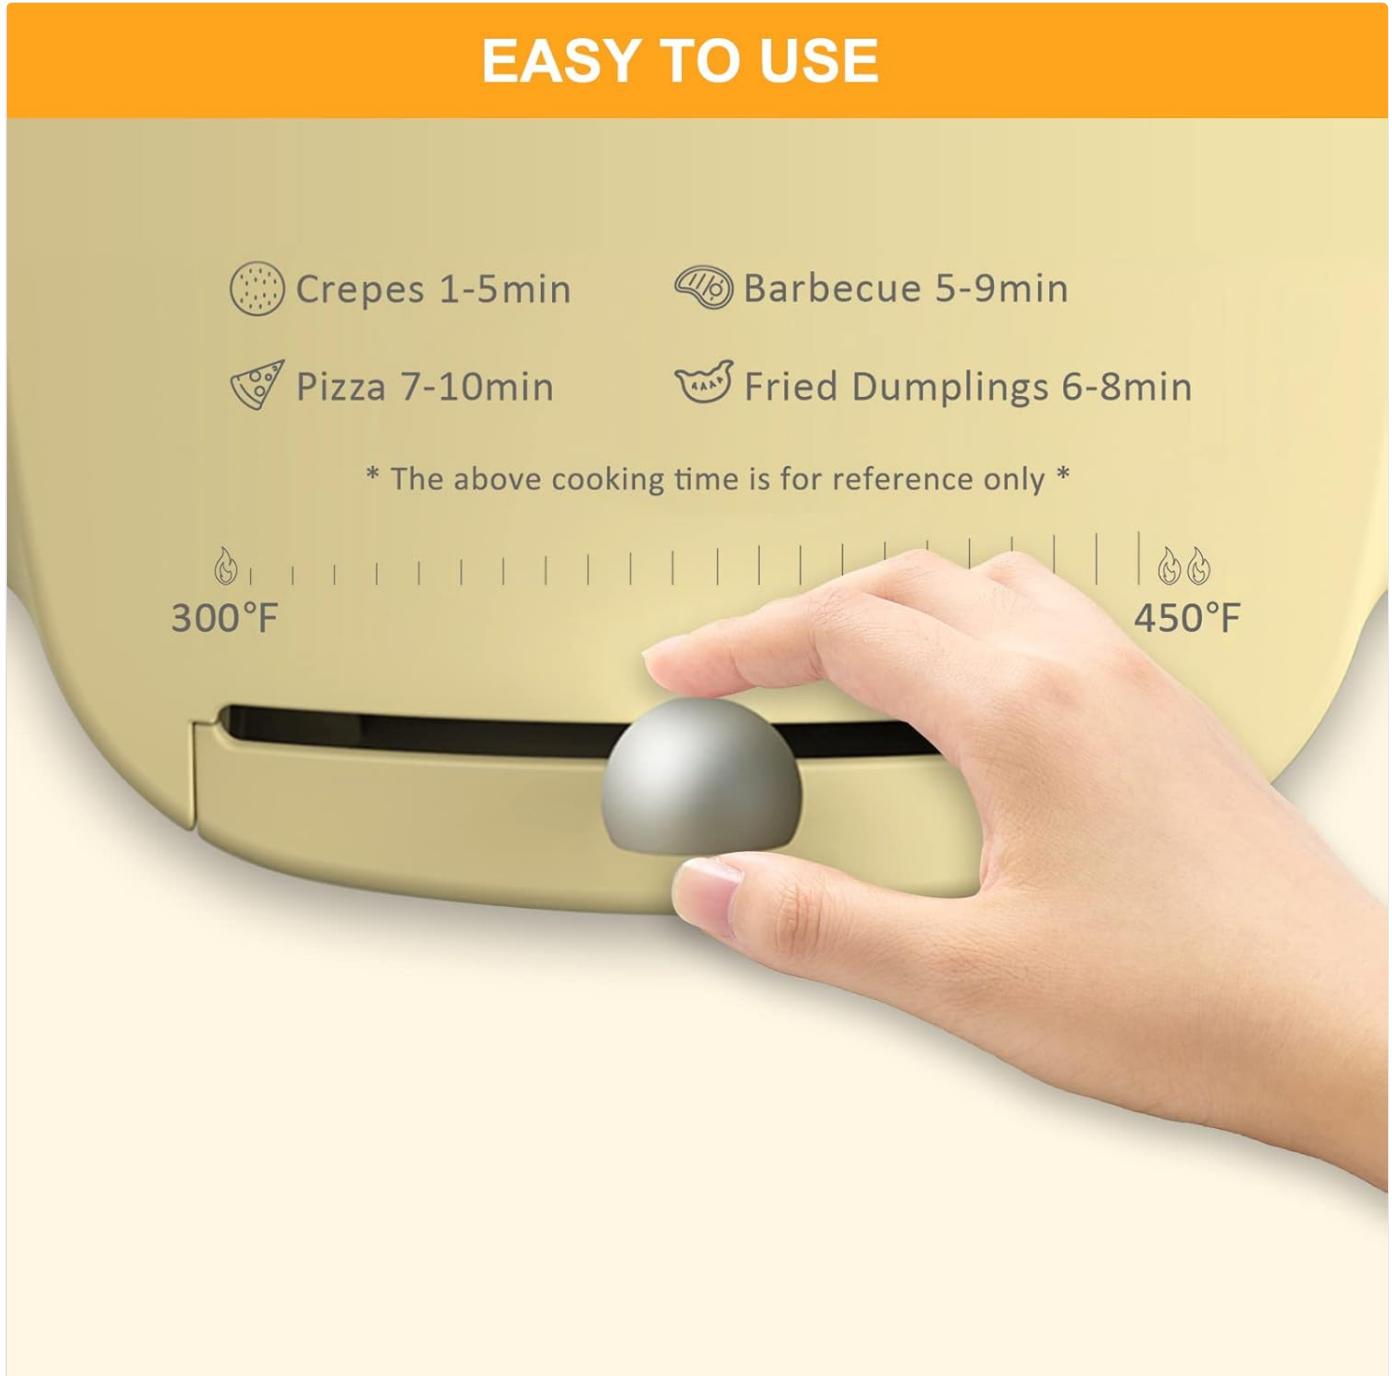


Figure 2.2: Illustration of the grill's compact size and dimensions, highlighting its ability to open flat for two-sided cooking. The dimensions are approximately 11.89 inches wide when closed and 13.43 inches deep, with a height of 5.59 inches.

Key Features:

- **6-in-1 Versatility:** Functions as a contact grill, electric grill, electric griddle, panini press, crepe maker, and pizza maker.
- **Independent Temperature Controls:** Separate controls for the top and bottom heating elements, allowing precise temperature management from 300°F to 450°F.
- **Nonstick Cooking Surface:** Premium nonstick coating ensures easy food release and simplifies cleaning.
- **Fast & Even Heating:** 1500W power with a unique embedded heating element provides rapid and consistent heat distribution for uniform cooking.
- **Extra-Large Cooking Surface:** Designed to accommodate meals for the entire family.

3. SETUP

- 1. Unpack:** Carefully remove the grill and all accessories from the packaging. Retain packaging for future storage or transport.
- 2. Initial Cleaning:** Before first use, wipe the cooking plates with a damp cloth or sponge. Dry thoroughly. Do not immerse the appliance in water.
- 3. Placement:** Place the grill on a stable, flat, heat-resistant surface, away from walls or cabinets to allow for proper ventilation. Ensure there is sufficient space around the unit.
- 4. Power Connection:** Ensure the power cord is not damaged and plug it into a standard 120V electrical outlet.

4. OPERATING INSTRUCTIONS

This appliance offers versatile cooking options. Always ensure the grill is properly set up and plugged in before operation.

Temperature Control:



Figure 4.1: Close-up of the temperature control dial, which allows adjustment from 300°F to 450°F. Suggested cooking times for various foods are also indicated on the appliance for reference.

- The grill features independent temperature controls for the top and bottom heating elements. Use the respective dials to set your desired temperature between 300°F and 450°F.
- Allow the grill to preheat for 5-10 minutes after setting the temperature. The indicator light will typically turn off or change color when the desired temperature is reached.

Cooking Modes:

The grill can be used in two primary configurations:

- **Closed Position (Contact Grill/Panini Press):** Ideal for grilling sandwiches, paninis, and thinner cuts of meat or vegetables. The top plate rests directly on the food, cooking both sides simultaneously.
- **Open Position (Electric Grill/Griddle/Crepe/Pizza Maker):** The grill can open 180 degrees to provide two flat cooking surfaces. This is suitable for larger quantities, breakfast items like pancakes and eggs, or for making crepes and pizzas.



Figure 4.2: The Bar Electric Grill in its fully open, 180-degree position, being used to prepare a variety of breakfast items such as pancakes and eggs on one side, and bacon on the other, demonstrating its dual cooking surface capability.

General Cooking Tips:

- Lightly grease the cooking plates with cooking spray or a small amount of oil before adding food, especially for the first use or when cooking lean foods.
- Avoid using metal utensils on the nonstick surface to prevent scratching. Use heat-resistant plastic, silicone, or wooden utensils.
- Suggested cooking times (reference only, adjust based on food thickness and desired doneness):
 - Crepes: 1-5 minutes
 - Barbecue (e.g., grilled meats): 5-9 minutes
 - Pizza: 7-10 minutes
 - Fried Dumplings: 6-8 minutes

GREAT FOR ANY MEAL!



Figure 4.3: Examples of diverse meals prepared using the Bar Electric Grill, illustrating its versatility for dishes such as pizza, grilled skewers, and steak with vegetables.

5. MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and performance of your grill. Always allow the appliance to cool completely before cleaning.

Cleaning Instructions:



Figure 5.1: A close-up view of the nonstick cooking surface, demonstrating its ease of cleaning after preparing an omelet.

1. **Unplug:** Always unplug the grill from the power outlet and allow it to cool down completely before cleaning.
2. **Wipe Cooking Plates:** Use a soft, damp cloth or sponge to wipe the nonstick cooking plates. For stubborn food residue, dampen a cloth with warm, soapy water and gently scrub. Avoid abrasive cleaners or scouring pads, as they can damage the nonstick coating.
3. **Clean Exterior:** Wipe the exterior of the grill with a damp cloth. Do not use harsh chemicals or abrasive materials.
4. **Do Not Immerse:** Never immerse the main unit, cord, or plug in water or any other liquid.
5. **Dry Thoroughly:** Ensure all parts are completely dry before storing or next use.

Storage:

Store the grill in a clean, dry place. The compact design allows for easy storage in a cabinet or pantry.

6. TROUBLESHOOTING

If you encounter issues with your grill, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Grill does not heat up.	Not plugged in; power outlet malfunction; appliance malfunction.	Ensure the grill is securely plugged into a working outlet. Test the outlet with another appliance. If still no power, contact customer service.
Food sticks to the cooking plates.	Insufficient oil/grease; cooking surface not clean; damaged nonstick coating.	Lightly grease the plates before cooking. Ensure plates are clean. Avoid using metal utensils that can scratch the coating.
Uneven cooking.	Improper preheating; food not evenly distributed.	Allow the grill to fully preheat before adding food. Distribute food evenly across the cooking surface.
Excessive smoke.	Too much oil/grease; food with high fat content; food residue on plates.	Use minimal oil. Trim excess fat from meats. Clean the cooking plates thoroughly after each use.

7. SPECIFICATIONS

Feature	Specification
Model	B097T1JFX3
Brand	Bar
Special Feature	Two Frying Pan, Panini Crepe Pizza Maker
Material	ABS
Product Dimensions	13.43"D x 11.89"W x 5.59"H
Wattage	1500 watts
Item Weight	5.05 Pounds
Included Components	Manuals
Style	Indoor
Voltage	120 Volts
Material Type Free	BPA Free

8. WARRANTY AND SUPPORT

The Bar 11.8" 1500W Electric Smokeless Indoor Grill comes with a one-year warranty from the date of purchase. This

warranty covers defects in materials and workmanship under normal use.

For warranty claims, technical assistance, or any questions regarding your product, please contact Bar customer service. They offer 24-hour online customer service to assist you.

Please retain your proof of purchase for warranty validation.