

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

- › [Westinghouse](#) /
- › White Westinghouse WW-14106S1 Washer Dryer User Manual

## Westinghouse WW-14106S1

# White Westinghouse WW-14106S1 Washer Dryer User Manual

Model: WW-14106S1 | Capacity: 10.5 kg Wash / 6 kg Dry

## INTRODUCTION

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your White Westinghouse WW-14106S1 Washer Dryer. Please read these instructions thoroughly before using the appliance and retain them for future reference.

The WW-14106S1 is a front-load combination washer and dryer designed for household use, offering a washing capacity of 10.5 kg and a drying capacity of 6 kg. It features 25 wash programs and a maximum spin speed of 1400 RPM.

## SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury to persons.

- Ensure the appliance is properly grounded.
- Do not operate the appliance if it is damaged or malfunctioning.
- Keep children and pets away from the appliance during operation.
- Do not wash or dry articles that have been soiled with flammable substances.
- Unplug the appliance before performing any maintenance or cleaning.
- Do not install or store the appliance where it will be exposed to temperatures below freezing or weather conditions.

## SETUP AND INSTALLATION

Proper installation is crucial for the performance and longevity of your washer dryer. Refer to the included [Washing Guide](#) for detailed diagrams.

### 1. Unpacking

Carefully remove all packaging materials, including the transport bolts located at the rear of the machine. Retain these bolts for future transport if needed.

## 2. Location Requirements

- Install on a firm, level floor surface.
- Ensure adequate space for air circulation around the appliance.
- Locate near a water supply (hot and cold), a drain, and a grounded electrical outlet.

## 3. Connecting Water Hoses

Connect the provided water inlet hoses to the corresponding hot and cold water taps and to the inlet valves on the back of the washer dryer. Ensure all connections are tight to prevent leaks. The appliance includes a [water hose](#) for this purpose.

## 4. Connecting Drain Hose

Securely attach the drain hose to the drain outlet at the rear of the machine and route it to a standpipe or laundry tub. Ensure the drain hose is not kinked and is positioned at the correct height (between 60 cm and 100 cm from the floor) to prevent siphoning.

## 5. Electrical Connection

Plug the power cord into a grounded 220V, 50Hz electrical outlet. Do not use extension cords or adapters. The appliance consumes 2100 watts.

## 6. Leveling the Appliance

Use a spirit level to check if the appliance is perfectly level. Adjust the leveling feet at the bottom of the machine by turning them clockwise or counter-clockwise until the appliance is stable and level. This prevents excessive vibration during operation.



Figure 1: Front view of the White Westinghouse WW-14106S1 Washer Dryer. This image shows the control panel, detergent dispenser, and the main loading door.

# OPERATING INSTRUCTIONS

## 1. Control Panel Overview

The control panel features a program selector dial, function buttons (e.g., temperature, spin speed, delay start), and a digital display. Refer to the detailed diagram in your [User Manual](#) for specific button functions.

## 2. Loading Laundry

Open the door and load laundry into the drum. Do not overload the machine; ensure there is enough space for clothes to tumble freely. For washing, the maximum capacity is 10.5 kg. For drying, the maximum capacity is 6 kg.

## 3. Adding Detergent and Softener

Pull out the detergent dispenser drawer. Add appropriate amounts of detergent to the main wash compartment and fabric softener to its designated compartment. Do not exceed the MAX fill lines.

## 4. Selecting a Program

Turn the program selector dial to choose one of the 25 available wash programs (e.g., Cotton, Synthetics, Delicates, Wool, Quick Wash). The digital display will show the default settings for the selected program.

## 5. Selecting Drying Options

After selecting a wash program (or for a standalone drying cycle), select the desired drying level or time using the appropriate function button. The appliance features condenser drying.

## 6. Starting a Cycle

Press the Start/Pause button to begin the selected program. The door will lock, and the cycle will commence.

## 7. Interrupting or Pausing a Cycle

To pause a running cycle, press the Start/Pause button. The door may unlock if the water level and temperature are safe. To resume, press the button again. To cancel a cycle, turn the program selector dial to the 'Off' position, then select a new program.

## 8. End of Cycle

At the end of the cycle, an audible signal may sound, and the display will indicate 'End'. The door will unlock after a short delay. Remove laundry promptly to prevent wrinkles.

# MAINTENANCE AND CARE

---

Regular maintenance ensures optimal performance and extends the lifespan of your appliance.

## 1. Cleaning the Exterior

Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.

## 2. Cleaning the Detergent Dispenser

Periodically remove and clean the detergent dispenser drawer under running water to prevent residue buildup. Reinsert it securely.

## 3. Cleaning the Drum

Run a maintenance wash cycle (e.g., a hot wash with no laundry and a small amount of detergent or a specialized washing machine cleaner) monthly to keep the stainless steel drum clean and fresh.

## 4. Cleaning the Lint Filter (for Dryer)

After every drying cycle, clean the lint filter located inside the door opening. Remove accumulated lint to maintain drying efficiency and prevent fire hazards.

## 5. Cleaning the Drain Pump Filter

Locate the drain pump filter, usually behind a small access panel at the bottom front of the machine. Open the panel, drain any residual water, and carefully remove and clean the filter of any debris. Reinstall securely.

## TROUBLESHOOTING

Before contacting service, review the following common issues and solutions:

Problem	Possible Cause	Solution
Appliance does not start	No power; Door not closed; Program not selected.	Check power supply; Ensure door is latched; Select a program and press Start.
Water leakage	Loose hose connections; Clogged drain filter.	Tighten water inlet/drain hoses; Clean drain pump filter.
Excessive vibration/noise	Appliance not level; Transport bolts not removed; Overloaded drum.	Adjust leveling feet; Remove transport bolts; Reduce laundry load.
Poor washing results	Incorrect detergent dosage; Overloading; Wrong program.	Use correct detergent amount; Do not overload; Select appropriate program.
Clothes not drying properly	Lint filter clogged; Overloaded dryer; Incorrect drying program.	Clean lint filter; Reduce load size; Select suitable drying program.

For error codes or persistent issues, consult the full user manual or contact customer support.

## SPECIFICATIONS

**Model:** WW-14106S1

**Brand:** Westinghouse

**Type:** Front Load Washer Dryer Combo

**Washing Capacity:** 10.5 kg

**Drying Capacity:** 6 kg

**Maximum Spin Speed:** 1400 RPM

**Number of Programs:** 25

**Voltage:** 220 Volts

**Wattage:** 2100 watts

**Efficiency:** A

**Water Consumption:** 1 Gallons per Hour (Note: This value is from product data and may represent a specific cycle or average)

**Drum Material:** Stainless Steel

**Installation Type:** Free Standing

**Product Dimensions (W x D x H):** 60 x 59.5 x 85 cm

**Item Weight:** 80 kg

**Special Features:** Condenser Drying, Energy Saver

## WARRANTY AND SUPPORT

---

For warranty details, please refer to the warranty card included with your appliance or contact your retailer. Keep your proof of purchase for any warranty claims.

For technical assistance, spare parts, or service inquiries, please contact Westinghouse customer support. Contact information can typically be found on the manufacturer's official website or in the documentation provided with your appliance.

---

© 2023 Westinghouse. All rights reserved. Information in this manual is subject to change without notice.