

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Panasonic](#) /

› [Panasonic KX-TG2511CXR Digital Cordless Phone User Manual](#)

Panasonic KX-TG2511CXR

Panasonic KX-TG2511CXR Digital Cordless Phone User Manual

Model: KX-TG2511CXR

[Introduction](#) [Package Contents](#) [Setup](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

This manual provides essential instructions for the setup, operation, and maintenance of your Panasonic KX-TG2511CXR Digital Cordless Phone. This DECT phone features a 1.4-inch amber backlit LCD display, Caller ID capability, and Clear Sound technology for enhanced call clarity. Please read this manual thoroughly before using your new phone to ensure proper functionality and longevity.

2. PACKAGE CONTENTS

Verify that your package contains the following items:

- Cordless Handset
- Base Charger Unit
- AC Power Adapter
- Telephone Line Cord
- Rechargeable AAA Batteries (2)



Image: AC Power Adapter and Telephone Line Cord. These are essential for connecting the base unit to power and the telephone line.

3. SETUP

3.1. Battery Installation

1. Open the battery compartment cover on the back of the handset.
2. Insert the two supplied AAA rechargeable batteries, observing the correct polarity (+ and -).
3. Close the battery compartment cover securely.

3.2. Connecting the Base Unit

1. Connect the AC power adapter to the base unit and then plug it into a standard electrical outlet.
2. Connect the telephone line cord to the base unit and then plug it into your telephone wall jack.
3. Place the handset on the base unit to charge the batteries. Allow at least 7 hours for the initial charge. The charge indicator on the handset will illuminate.

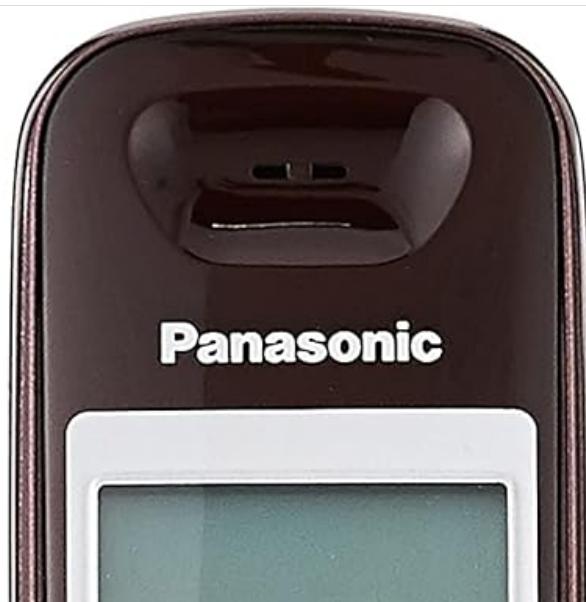




Image: Front view of the cordless handset placed on its base unit. This shows the phone in its charging position.





Image: Rear view of the cordless handset on its base unit. This illustrates the design of the back of the handset and the base.

4. OPERATING INSTRUCTIONS

4.1. Making a Call

1. Lift the handset from the base or press the **Talk** button (green phone icon).
2. Dial the phone number.
3. Press the **End Call** button (red phone icon) or place the handset back on the base to end the call.

4.2. Answering a Call

When the phone rings:

- Lift the handset from the base, or press the **Talk** button.

4.3. Using the Speakerphone (Hands-free)

During a call, press the **Speakerphone** button (speaker icon) to activate hands-free mode. Press it again to switch back to the earpiece.

4.4. Adjusting Ringer and Call Volume

During a call, use the **Up** and **Down** arrow buttons on the handset to adjust the earpiece volume. To adjust the ringer volume, navigate through the menu settings when the phone is idle.

4.5. Caller ID

If you subscribe to Caller ID service, the caller's phone number will be displayed on the LCD screen before you answer the call. You can review a list of recent calls by pressing the **Caller ID** button (often an arrow or dedicated button).

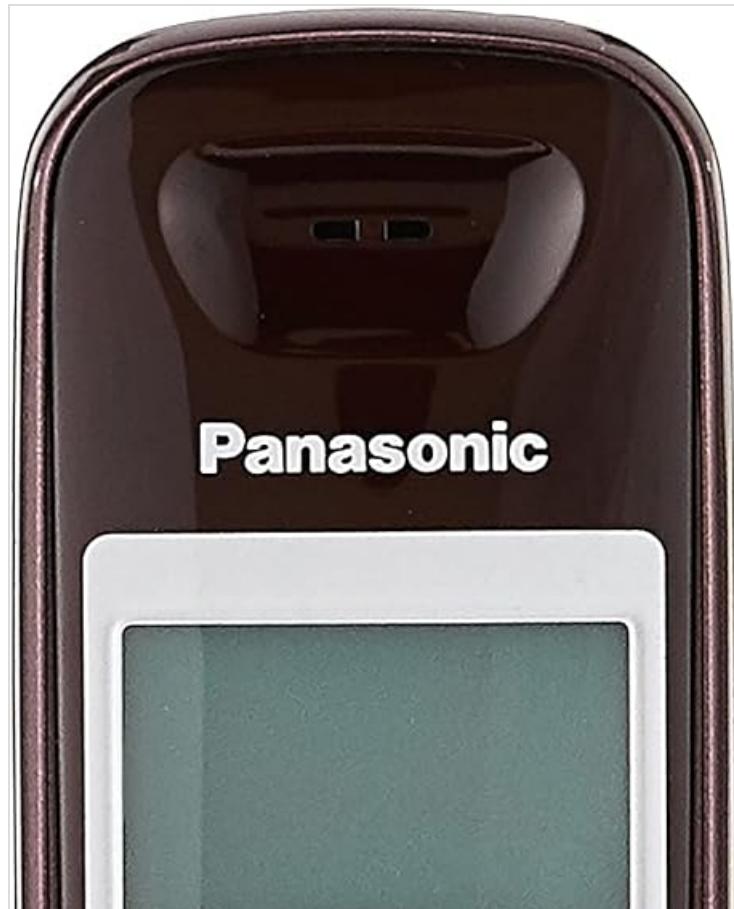




Image: Close-up view of the cordless handset, showing the keypad, screen, and navigation buttons. This highlights the user interface for making and receiving calls, including the Talk, End Call, and Speakerphone buttons.

5. MAINTENANCE

5.1. Cleaning

Wipe the phone and base unit with a soft, damp cloth. Do not use abrasive cleaners or solvents. Ensure the phone is unplugged from the power source before cleaning.

5.2. Battery Care

- Use only the specified rechargeable AAA batteries.
- If the phone will not be used for an extended period, remove the batteries to prevent leakage.

- Dispose of old batteries according to local regulations.

6. TROUBLESHOOTING

Problem	Solution
No dial tone	<ul style="list-style-type: none"> • Ensure the telephone line cord is securely connected to both the base unit and the wall jack. • Check if the AC power adapter is properly connected to the base unit and a working electrical outlet.
Handset does not charge	<ul style="list-style-type: none"> • Verify the handset is correctly placed on the base unit. • Ensure the AC power adapter is connected. • Check the batteries for proper installation and ensure they are rechargeable.
Poor call quality / Static	<ul style="list-style-type: none"> • Move closer to the base unit. • Ensure the base unit is not near other electronic devices that may cause interference. • Check the telephone line cord for damage.
Screen went blank after one year	<ul style="list-style-type: none"> • This may indicate a battery issue or a hardware malfunction. Try replacing the batteries. If the issue persists, contact customer support.

7. SPECIFICATIONS

- **Model:** KX-TG2511CXR
- **Display:** 1.4-inch Amber Backlight LCD
- **Telephone Type:** Cordless DECT Phone
- **Power Source:** Corded Electric (for base unit)
- **Batteries:** 2 x AAA rechargeable batteries (included)
- **Answering System Type:** Digital
- **Conference Call Capability:** 2-way
- **Multiline Operation:** Single-Line Operation
- **Form Factor:** Block-Handy
- **Material:** Plastic
- **Color:** Red



Image: The cordless phone on its base unit, illustrating its approximate dimensions (7.0 inches / 17 cm height). This provides a visual reference for the product's size.

8. WARRANTY AND SUPPORT

Your Panasonic KX-TG2511CXR Digital Cordless Phone comes with a **1-year manufacturer's guarantee**. For technical support, warranty claims, or service inquiries, please refer to the contact information provided with your purchase documentation or visit the official Panasonic support website.

For further assistance, you may also refer to the [Panasonic Store on Amazon](#).