

Cecotec 02339

Cecotec Bolero Wash&Dry 10700 Inverter Washer Dryer User Manual

Model: 02339 | Brand: Cecotec

1. INTRODUCTION

Thank you for choosing the Cecotec Bolero Wash&Dry 10700 Inverter Washer Dryer. This appliance is designed to provide efficient and convenient laundry care with advanced features for both washing and drying. Please read this manual carefully before using the appliance to ensure safe and optimal operation.

Key features of your appliance include:

- **High Capacity:** 10 kg washing capacity and 7 kg drying capacity.
- **Inverter Plus Motor:** Ensures high-quality performance, maximum durability, energy savings, and reduced vibrations and noise.
- **15 Customizable Programs:** A wide range of programs for different fabrics and functions, including quick washes (15' and 45'), intensive, eco, wool, bedding, jeans, rinse, spin, wash & dry, dry only, BabySafe, mixed, and cotton, with adjustable temperatures.
- **Intuitive Control Panel:** Features an LED display and touch buttons for easy operation.
- **Stop&Go Function:** Allows pausing the cycle to add forgotten garments.
- **DelayStart:** Program the start of the cycle up to 24 hours in advance.
- **HygienePro System:** Ensures total sanitization at the end of each wash cycle through AutoClean (drum cleaning), EasySpray (door gasket cleaning), and SafeGasket (antibacterial gasket).
- **DiamondCare Drum:** Special diamond-textured drum design for gentle and effective cleaning, protecting your clothes.
- **KidLock:** Child safety lock to prevent accidental program changes.

2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury.

- Ensure the appliance is properly grounded.
- Do not operate the appliance with a damaged power cord or plug.
- Keep children and pets away from the appliance during operation.

- Do not wash or dry articles that have been cleaned in, washed in, soaked in, or spotted with combustible or explosive substances such as wax, oil, paint, gasoline, degreasers, dry-cleaning solvents, kerosene, etc.
- Do not reach into the appliance if the drum is moving.
- Unplug the appliance before cleaning or performing any maintenance.
- The appliance is intended for household use only.
- Do not install or store the appliance where it will be exposed to the weather or to freezing temperatures.

2.1 Child Safety (KidLock)

The KidLock feature prevents children from accidentally changing settings or opening the door during operation. To activate/deactivate, refer to the "Control Panel" section.



Image: A woman and a young child are in a laundry area. The child is playing on the floor while the woman folds laundry next to the white Cecotec washer dryer. This illustrates the appliance's integration into a family home environment.

3. SETUP AND INSTALLATION

3.1 Unpacking

Carefully remove the appliance from its packaging. Ensure all components are present: 1 x Washer Dryer, 4 x Transport Feet, 1 x Water Supply Hose, 1 x User Manual. Remove all transport packaging and bolts from the rear of the machine before use. Failure to do so can cause significant damage.

3.2 Placement

Place the washer dryer on a firm, level surface. The appliance dimensions are approximately 87.5 x 69.5 x 68 cm (Height x Width x Depth). Ensure adequate ventilation around the unit. The appliance is designed for under-counter installation.

3.3 Water and Electrical Connections

- Connect the water supply hose to a cold water tap.
- Ensure the drain hose is properly installed into a drain pipe or sink.
- Plug the appliance into a grounded electrical outlet. The appliance operates on 230V and has a wattage of 1900W.

3.4 Leveling

Adjust the transport feet at the bottom of the appliance to ensure it is perfectly level. This will minimize vibrations and noise during operation.



Image: A clear front view of the white Cecotec Bolero Wash&Dry 10700 Inverter Washer Dryer, showcasing its modern design with a large black door and a control panel at the top.

4. OPERATING INSTRUCTIONS

4.1 Control Panel Overview

The control panel features an LED display and touch buttons for easy selection of programs and functions. The display shows remaining time and selected options.

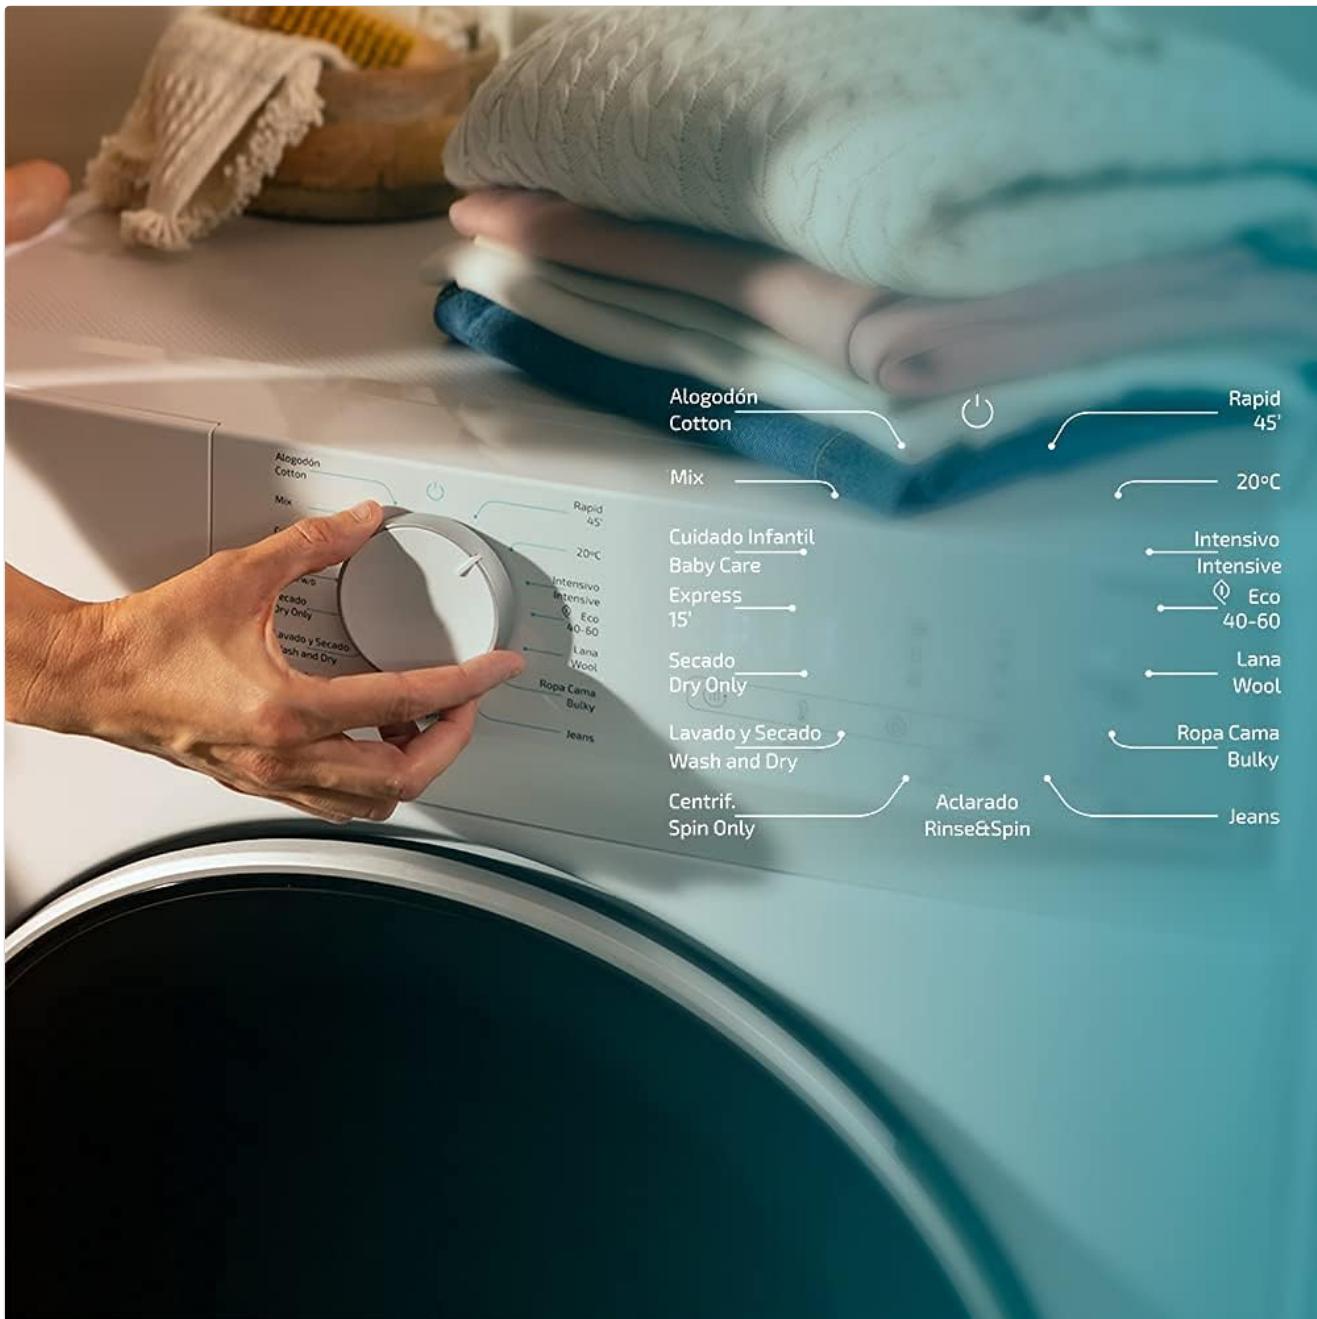


Image: A close-up view of the washer dryer's control panel, highlighting the rotary dial for program selection and the LED display with touch buttons. Program names like Cotton, Mix, Baby Care, Express, Dry Only, Wash and Dry, Rinse & Spin, Intensive, Eco, Wool, Bulky Bedding, and Jeans are visible around the dial.

4.2 Loading Laundry

Load laundry into the drum, ensuring not to exceed the maximum capacity of 10 kg for washing and 7 kg for drying. For optimal results, avoid overfilling the drum.



Image: A woman is kneeling and placing clothes into the open drum of the Cecotec washer dryer, demonstrating the front-loading design.

4.3 Program Selection

Turn the program dial to select one of the 15 available programs. Each program is optimized for specific fabric types and washing needs. You can adjust temperature and spin speed (up to 1500 rpm) for most programs.

Available Programs

Program Name	Description / Use
Cotton	For cotton items.
Mix	For mixed fabric loads.
Baby Care	Increases water intake during rinse cycles to reduce detergent residue, ideal for baby clothes.
Express 15'/45'	Quick wash cycles for lightly soiled items.
Dry Only	For drying clothes without a prior wash cycle.

Program Name	Description / Use
Wash and Dry	Combines washing and drying in a single continuous cycle.
Rinse & Spin	Adds an extra rinse and spin cycle.
Spin	For draining water and spinning clothes.
20°C	Low-temperature wash for delicate items.
Intensive	For heavily soiled items requiring a thorough wash.
ECO 40-60	Energy-efficient program for cottons and mixed items washable at 40°C or 60°C.
Wool	Gentle program for wool garments.
Bulky Bedding	Designed for large items like duvets and blankets.
Jeans	Specific program for denim items.

4.4 Special Functions

- Stop&Go:** Press the Start/Pause button to temporarily stop the cycle and add forgotten garments. The door will unlock if conditions allow.
- DelayStart:** Use this function to program the washer dryer to start a cycle between 0 and 24 hours later.
- Automatic Drying:** Select this function to automatically dry clothes after a wash cycle.
- Extra Drying:** Provides additional drying time for clothes to ensure they are ready for immediate use.
- Silence Function:** Mutes end-of-cycle alerts and operational sounds.

Your browser does not support the video tag.

Video: Official product video for the Cecotec Bolero Wash&Dry 10700 Inverter Washer Dryer, showcasing its features such as the Inverter Plus motor, DiamondCare drum, KidLock, Stop&Go function, and HygienePro system. The video highlights the appliance's efficiency, quiet operation, and user-friendly design.

5. MAINTENANCE

5.1 HygienePro System

The HygienePro system ensures the cleanliness of your appliance and laundry through three integrated systems:

- AutoClean:** Automatically cleans the interior and exterior of the drum.
- EasySpray:** Eliminates residual detergent from the door gasket and clothes.
- SafeGasket:** An antibacterial gasket that helps maintain a clean environment for your laundry.

5.2 General Cleaning

- Wipe the exterior of the appliance with a soft, damp cloth.
- Clean the detergent dispenser drawer regularly to prevent residue buildup.
- Periodically check and clean the drain pump filter (refer to the full user manual for detailed instructions).



Image: An internal view of the washer dryer's drum, showcasing the unique DiamondCare texture designed to protect fabrics during washing and drying.

6. TROUBLESHOOTING

If you encounter any issues with your appliance, please refer to the following common troubleshooting tips before contacting customer service:

- **Appliance does not start:** Check if the power cord is securely plugged in, the door is properly closed, and the water supply is turned on.
- **Excessive noise or vibration:** Ensure the appliance is level and that all transport bolts have been removed. Check if the load is balanced inside the drum.
- **Water leakage:** Verify that the water inlet and drain hoses are securely connected and not damaged.
- **Error codes on display:** Consult the full user manual for a list of specific error codes and their solutions.

For persistent issues or technical assistance, please contact Cecotec customer support.

7. SPECIFICATIONS

Available Programs

Feature	Specification
Model Number	02339
Washing Capacity	10 kg
Drying Capacity	7 kg
Maximum Spin Speed	1500 RPM
Power Consumption	1900 W
Dimensions (H x W x D)	87.5 x 69.5 x 68 cm
Product Weight	72 kg
Noise Level	80 dB
Drum Material	Stainless Steel
Energy Consumption (Drying/Washing per 100 cycles)	343 kWh / 59 kWh
Water Consumption (Drying/Washing per cycle)	100 L / 52 L
Included Components	1 x Washer; 4 x Transport feet; 1 x Water supply hose; 1 x User manual





ENERG⁺



Cecotec

02339

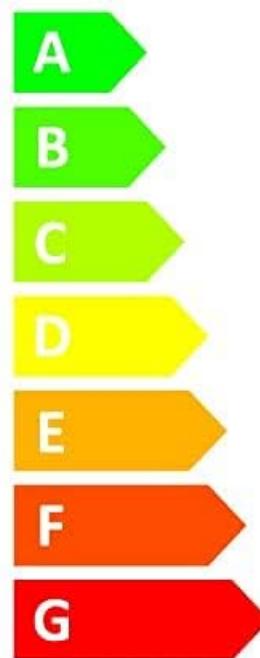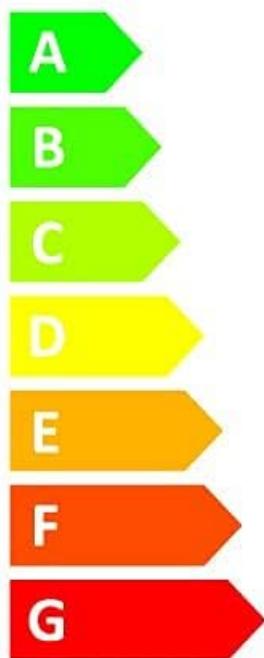

0 \$ 343 kWh / 100

0 59 kWh / 100


7,0 kg 10,0 kg

100 L 52 L

9:40 3:59



A B C D E F G

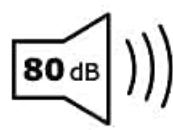

A B C D

2019/2014

Image: The energy efficiency label for the Cecotec washer dryer, showing its energy ratings (D for washing and drying, B for washing only), capacities, water consumption, and noise level. More details can be found at eprel.ec.europa.eu/qr/356793.

8. WARRANTY AND SUPPORT

Cecotec offers a 10-year availability period for spare parts within the EU, ensuring long-term support for your appliance.

For warranty claims, technical support, or any questions regarding your Cecotec Bolero Wash&Dry 10700 Inverter Washer Dryer, please contact Cecotec customer service through their official channels. Keep your purchase receipt as proof of purchase.

© 2025 Cecotec. All rights reserved.

Documents - Cecotec – 02339



[\[pdf\]](#) User Manual Instructions

DRESSCODE WASH DRY 10700 INVERTER bolero washdry inverter user manual escdn cecotec cloud media files |||

DRESSCODE WASH DRY 10700 INVERTER Lavadora secadora /Washing and dryer machine Manual de instrucciones ... ecotec. 7. ESPECIFICACIONES TCNICAS
Producto: Bolero DressCode Wash Dry 10700 Inverter Referencia: **02339** Capacidad de lavado: 10 kg Capacidad de secado: 7 kg Dimensiones ancho*profundidad*altura cm...

lang:es score:28 filesize: 2.59 M page_count: 87 document date: 2021-06-24




[\[pdf\]](#) User Manual Instructions

DRESSCODE WASH DRY 10700 INVERTER Mar 11 2021 · INSTRUCCIONES DE SEGURIDAD Lea las siguientes instrucciones atentamente antes de usar el producto Guarde este manual para referencias

B1I58jKSpnS ref dp product quick view m media amazon images |||

DRESSCODE WASH DRY 10700 INVERTER Lavadora secadora /Washing and dryer machine **02339** Bolero DressCode Wash Dry 10700
Inverter_Manual_YV_02210311.indd 1 Manual de instrucciones Instruction manual
Manuel d instructions Manuale di istruzioni Manual de instrucciones Instrukcja obsługi
Nvod k pouzit 11/3/21...

lang:it score:24 filesize: 2.4 M page_count: 172 document date: 2021-03-11

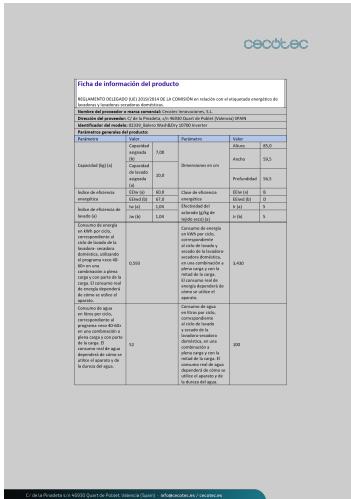

[\[pdf\]](#)

02339 Roberto Cortina Ficha de producto Bolero Wash Dry 10700 Inverter Lavadora Cecotec bolero washdry inverter productenergyinformation 0 spec url es cdn cecotec cloud media files |||

Ficha de informacin del producto REGLAMENTO DELEGADO UE 2019/2014 DE LA COMISIN en relacin con el ... proveedor: C/ de la Pinadeta, s/n 46930 Quart de Poblet Valencia SPAIN Identificador del modelo: **02339** Bolero Wash Dry 10700 Inverter Parmetros generales del producto: Parmetro Valor Parmetro ... lang:es **score:18** filesize: 225.02 K page_count: 2 document date: 2022-01-26



[\[pdf\]](#) Catalog

Cecotec Tienda Oficial Envío Gratis Mejor Precio Catalogo Bolero Dresscode EN CECOTEC cdn cecotec
cloud media IFA2022 en |||

WASHING MACHINES Bolero DressCode Technology designed for you Discover Bolero DressCode, the new r ... cm 76 kg 59.5 x 56.5 x 85 cm 72 kg 220-240 V, 50 Hz 1900 W Washing machine 1300 W Dryer 8435484023399 Box 18435484023396 Master **02339** 26 Discover the product line 27 600 Series Stop Go 8-... lang:en **score:16** filesize: 14.1 M page_count: 33 document date: 2021-06-23