

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Rollei](#) /

› **Rollei Wireless Remote Control for Canon 28118 Instruction Manual**

Rollei 28118

Rollei Wireless Remote Control for Canon

Model: 28118

1. INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your Rollei Wireless Remote Control, Model 28118. This device is designed to provide remote shutter release and advanced timer functions for compatible Canon cameras, enhancing your photographic capabilities, especially for long exposures, time-lapses, and self-portraits.

Please read this manual thoroughly before using the product to ensure correct operation and to prevent damage.

2. PACKAGE CONTENTS

Verify that all items are present in your package:

- Rollei Wireless Remote Control (Transmitter)
- Rollei Wireless Receiver
- Connection Cable for Canon Cameras
- Batteries (pre-installed or included separately)
- Instruction Manual (this document)

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your Rollei Wireless Remote Control system.



Image 3.1: Front view of the Rollei Wireless Remote Control (left) and its receiver (right). The remote features a display screen and multiple control buttons, while the receiver is a compact unit.

3.1. Transmitter (Remote Control)

- **LCD Display:** Shows program settings, timer values, and battery status.
- **Shutter Button (HOLD):** Press halfway for autofocus, fully for shutter release. Can be locked for continuous shooting or long exposures.
- **Directional Buttons (Up, Down, Left, Right):** Navigate menus and adjust settings.
- **SET Button:** Confirms selections.

- **Back Button:** Returns to the previous menu or cancels an action.
- **Play/Forward Button:** Advances through menu options or programs.

3.2. Receiver

- **Hot Shoe Mount:** Attaches to the camera's hot shoe for secure mounting.
- **Connection Port:** For connecting the cable to the camera's remote port.
- **Indicator Light:** Shows connection status and operation.

4. SETUP

4.1. Battery Installation

The remote control and receiver require batteries for operation. Ensure batteries are inserted with correct polarity.

1. Locate the battery compartment on the back of both the transmitter and receiver.
2. Open the compartment cover.
3. Insert the required batteries (typically AAA for the remote, and a smaller cell for the receiver, as indicated by the device markings) according to the polarity indicators (+/-).
4. Close the battery compartment cover securely.

4.2. Connecting to the Camera

The receiver connects to your Canon camera's remote control port.



Image 4.1: The Rollei Wireless Receiver mounted on a Canon camera's hot shoe and connected via cable to the camera's remote port. The remote control unit is shown alongside.

1. Mount the receiver onto your camera's hot shoe. Ensure it is securely fastened.
2. Connect one end of the provided connection cable to the receiver's port.
3. Connect the other end of the cable to the remote control port on your Canon camera. The location of this port varies by camera model; refer to your camera's manual if needed.

4.3. Pairing the Transmitter and Receiver

The remote control and receiver are typically pre-paired. If they do not connect automatically, follow these steps:

1. Ensure both the transmitter and receiver have fresh batteries and are powered on.
2. Refer to the specific pairing instructions in the included quick start guide or on the device itself, as pairing procedures can vary slightly. Generally, this involves pressing a pairing button on both units within a short timeframe.
3. The indicator light on the receiver will confirm a successful connection.

5. OPERATING INSTRUCTIONS

The Rollei Wireless Remote Control offers various modes for shutter release and advanced timing functions.

5.1. Basic Shutter Release

1. Ensure the remote and receiver are connected and the camera is powered on.
2. Press the **Shutter Button (HOLD)** on the remote halfway to activate autofocus (if your camera is set to AF).
3. Press the **Shutter Button (HOLD)** fully to trigger the camera's shutter.

5.2. Timer and Intervalometer Functions

The remote's display allows you to program various shooting sequences, such as delay, exposure time, interval, and number of shots.



Image 5.1: The remote control display showing the "EXPOSURE" setting, indicating programmable exposure duration for long exposures or time-lapse photography.

1. Use the **Directional Buttons** (Up/Down) to navigate through the different settings on the LCD display (e.g., Delay, Exposure, Interval, N (number of shots)).
2. Press the **SET Button** to select a setting for adjustment.
3. Use the **Directional Buttons** (Up/Down/Left/Right) to change the values for the selected setting.
4. Press **SET** again to confirm the value.
5. Once all desired settings are configured, use the **Play/Forward Button** to start the programmed sequence.
6. To stop a sequence, press the **Back Button** or the **Shutter Button (HOLD)**.

Note: Specific programming steps may vary. Refer to the on-screen prompts and the quick start guide for detailed instructions on setting each parameter.

5.3. Locking the Shutter (Bulb Mode)

For very long exposures (Bulb mode on your camera), you can lock the shutter button on the remote.

1. Set your camera to Bulb mode.
2. Press the **Shutter Button (HOLD)** fully and slide it upwards (or in the indicated direction) to lock it in the depressed position.
3. The shutter will remain open for the duration you desire.
4. To end the exposure, slide the **Shutter Button (HOLD)** back to its original position.

6. MAINTENANCE

Proper care ensures the longevity and optimal performance of your remote control.

- **Cleaning:** Use a soft, dry cloth to clean the remote and receiver. Do not use liquid cleaners or solvents.
- **Storage:** Store the device in a cool, dry place away from direct sunlight and extreme temperatures. If storing for extended periods, remove the batteries to prevent leakage.
- **Handling:** Avoid dropping the device or subjecting it to strong impacts.

7. TROUBLESHOOTING

If you encounter issues, refer to the following common problems and solutions:

Problem	Possible Cause / Solution
Remote does not power on.	Check battery installation and ensure batteries are fresh. Replace if necessary.
Camera does not respond to remote.	<ul style="list-style-type: none"> • Ensure the receiver is properly connected to the camera's remote port. • Verify the receiver is powered on and paired with the remote. • Check camera settings to ensure external remote control is enabled. • Ensure the remote is within the 10-meter operating range. • Replace receiver batteries.

Problem	Possible Cause / Solution
Timer functions are not working as expected.	<ul style="list-style-type: none"> Double-check all programmed settings (Delay, Exposure, Interval, N). Ensure the camera is in the correct shooting mode (e.g., Bulb for long exposures).
Display is dim or unresponsive.	Replace the batteries in the remote control.

8. SPECIFICATIONS

Feature	Detail
Brand	Rollei
Model	28118
Connectivity Technology	Bluetooth
Compatible Devices	Canon Cameras
Maximum Range	10 Meters
Number of Buttons	4 (plus directional pad and SET)
Controller Type	Push Button Control
Product Dimensions	10 x 3 x 2 cm
Product Weight	370 g
Batteries Included	Yes
Rechargeable Battery Included	No

9. WARRANTY AND SUPPORT

Rollei products are manufactured with quality and reliability in mind. For information regarding warranty coverage, technical support, or service, please refer to the warranty card included with your product or visit the official Rollei website. Keep your proof of purchase for warranty claims.

For further assistance, you may contact Rollei customer service through their official channels.

10. SAFETY INFORMATION

- Do not attempt to disassemble or modify the device. This may void the warranty and cause damage.
- Keep the device away from water and other liquids.
- Avoid exposing the device to extreme temperatures or high humidity.
- Keep out of reach of children.
- Dispose of batteries according to local regulations.

Related Documents - 28118

	<p>Rollei Pissarro DPF-880 Digital Photo Frame User Manual Comprehensive user manual for the Rollei Pissarro DPF-880 digital photo frame, covering setup, operation, technical specifications, safety guidelines, and disposal information.</p>
	<p>Rollei Actioncam 40s Pro User Guide: Setup, Operation, and Features Explore the features and functionalities of the Rollei Actioncam 40s Pro with this official user guide. This comprehensive manual covers everything from initial setup and operation to advanced settings, waterproof use, and WiFi connectivity, ensuring you can capture high-quality footage in any adventure. Learn about technical specifications, safety guidelines, and maintenance from Rollei.</p>
	<p>Rollei 35AF Schnellstartanleitung Kompaktkamera Bedienung Schnellstartanleitung für die Rollei 35AF Kleinbildkamera. Lernen Sie, wie Sie Film laden, Fotos aufnehmen und Ihre Kamera schnell und einfach bedienen.</p>
	<p>Rollei Powerflex X8 Dual Lens User Manual Comprehensive user manual for the Rollei Powerflex X8 Dual Lens camera, covering setup, operation, features, and technical specifications. Learn how to capture stunning 5K video and high-resolution photos with this versatile digital camera.</p>
	<p>Rollei Actioncam 9s Plus Benutzerhandbuch & Technische Daten Umfassendes Benutzerhandbuch für die Rollei Actioncam 9s Plus. Erfahren Sie alles über Bedienung, Funktionen, technische Spezifikationen, Zubehör und Sicherheitshinweise.</p>
	<p>Rollei 35AF User Manual Comprehensive user manual for the Rollei 35AF camera, covering setup, operation, features, and specifications. Includes quick start guide, safety instructions, and technical details.</p>