

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [MAXXMEE](#) /

> [MAXXMEE Egg Cooker User Manual](#)

MAXXMEE 02088

MAXXMEE Egg Cooker User Manual

Model: 02088

INTRODUCTION

Thank you for choosing the MAXXMEE Egg Cooker. This compact and efficient appliance is designed to perfectly cook up to two eggs, offering convenience and precision for your breakfast. With its integrated measuring cup and egg piercer, you can achieve your desired egg hardness with ease, from soft-boiled to hard-boiled.



Image: The MAXXMEE Egg Cooker, showcasing its compact design, transparent lid, two eggs inside, and the separate measuring cup.

IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance and keep them for future reference. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Do not immerse the appliance, cord, or plug in water or other liquids.
- This appliance is for household use only. Do not use outdoors.
- Always unplug the appliance from the outlet when not in use and before cleaning.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Keep the appliance and its cord out of reach of children.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Use only attachments recommended or sold by the manufacturer.
- Extreme caution must be used when moving an appliance containing hot water.
- Do not place the appliance on or near a hot gas or electric burner, or in a heated oven.
- Ensure the appliance is placed on a stable, heat-resistant surface.
- Do not touch hot surfaces. Use handles or knobs.
- Always ensure the lid is properly closed during operation.

PACKAGE CONTENTS

Please check the package contents upon unpacking:

- 1 x MAXXMEE Egg Cooker base unit
- 1 x Transparent lid
- 1 x Egg tray (integrated)
- 1 x Measuring cup with integrated egg piercer



Image: The product packaging for the MAXXMEE Egg Cooker, showing the appliance and its key features.

SETUP

1. Unpack all components and remove any packaging materials.
2. Clean the transparent lid and measuring cup with warm soapy water before first use. Wipe the base unit with a damp cloth.
3. Place the egg cooker on a flat, stable, and heat-resistant surface.
4. Ensure the appliance is unplugged before adding water or eggs.



Image: A side view of the MAXXMEE Egg Cooker, showing the base unit and the measuring cup placed next to it, ready for use.

OPERATING INSTRUCTIONS

Follow these steps to cook your eggs to perfection:

1. **Pierce the Eggs:** Use the integrated egg piercer located at the bottom of the measuring cup to gently pierce the larger end of each egg. This prevents the eggs from cracking during cooking.



Image: A close-up view of an egg being gently pierced by the small needle on the bottom of the measuring cup.

2. **Add Water:** Fill the measuring cup with cold water according to your desired egg hardness. The measuring cup has markings for soft, medium, and hard-boiled eggs. Pour the measured water onto the heating plate of the egg cooker.
3. **Place Eggs:** Place the pierced eggs onto the egg tray with the pierced end facing upwards.
4. **Close Lid:** Place the transparent lid securely over the egg tray and base unit.
5. **Start Cooking:** Plug the appliance into a suitable power outlet. Press the power button to start the cooking process. The indicator light will illuminate.



Image: A hand pressing the power button located on the side of the MAXXMEE Egg Cooker.

6. **Automatic Shut-off:** The egg cooker will automatically shut off and emit an audible signal when all the water has evaporated and the eggs are cooked to the desired hardness.
7. **Remove Eggs:** Carefully remove the lid (it will be hot) and then remove the cooked eggs using a spoon or tongs. For best results, immediately rinse the eggs under cold water to stop the cooking process and make them easier to peel.



Image: The MAXXMEE Egg Cooker in a kitchen setting, with a perfectly cooked soft-boiled egg in an egg cup next to it, demonstrating the result.

CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the life of your egg cooker.

1. Always unplug the appliance and allow it to cool completely before cleaning.
2. Wash the transparent lid and measuring cup with warm, soapy water. Rinse thoroughly and dry. These parts are not dishwasher safe.
3. Wipe the heating plate and the exterior of the base unit with a damp cloth. For stubborn mineral deposits on the heating plate, you can use a small amount of white vinegar or a descaling solution. Wipe clean with a damp cloth afterwards.
4. Do not use abrasive cleaners or scouring pads, as they may damage the surfaces.
5. Never immerse the base unit in water or any other liquid.
6. Store the appliance in a dry place when not in use.



Image: The MAXXMEE Egg Cooker with its lid removed, showing the empty egg tray and heating plate, indicating it's ready for cleaning.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Eggs are not cooked to desired hardness.	Incorrect water quantity used.	Ensure you use the correct amount of water as indicated on the measuring cup for your desired hardness.
Eggs crack during cooking.	Eggs not pierced; cold eggs placed directly into hot environment.	Always pierce the larger end of the egg with the integrated egg piercer before cooking. Allow very cold eggs to warm up slightly at room temperature before cooking.
Appliance does not turn on.	Not plugged in; power outage; faulty outlet.	Check if the plug is securely inserted into a working outlet. Check your household's circuit breaker.

Problem	Possible Cause	Solution
Water boils over.	Too much water added.	Ensure you do not exceed the maximum water level indicated on the measuring cup.

SPECIFICATIONS

Brand: MAXXMEE

Model Number: 02088 (Eierkocher Kompakt)

Color: Silver

Dimensions (L x W x H): 18.5 x 6.5 x 14.5 cm (approx. 7.3 x 2.6 x 5.7 inches)

Weight: 580 g (approx. 1.28 lbs)

Power: 250 Watts

Voltage: 240 Volts

Material: Stainless Steel

Features: Integrated egg piercer, Transparent lid

Capacity: Up to 2 eggs (S-XL)

WARRANTY AND SUPPORT

This MAXXMEE appliance comes with a standard manufacturer's warranty against defects in materials and workmanship under normal household use. Please refer to your purchase documentation for specific warranty terms and duration. For technical support, service, or warranty claims, please contact your retailer or the MAXXMEE customer service department. Keep your proof of purchase for any warranty-related inquiries.

