

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Deco Chef](#) /

› [Deco Chef Countertop Ice Maker \(Model FBACADCICMBLU\) Instruction Manual](#)

Deco Chef FBACADCICMBLU

Deco Chef Countertop Ice Maker (Model FBACADCICMBLU) Instruction Manual

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Deco Chef Countertop Ice Maker, Model FBACADCICMBLU. Please read all instructions carefully before use and retain this manual for future reference.



Image: Deco Chef Countertop Ice Maker in blue, shown with a glass of iced beverage and an ice scoop. This illustrates the product's primary function and included accessory.

SAFETY INFORMATION

- Ensure the ice maker is placed on a stable, level surface away from direct sunlight and heat sources.
- Do not immerse the appliance, power cord, or plug in water or other liquids.
- Supervise children when the appliance is in use.
- Use only potable water in the water reservoir.
- Unplug the ice maker before cleaning or when not in use for extended periods.
- Do not operate the appliance with a damaged cord or plug.

PACKAGE CONTENTS

- Deco Chef Countertop Ice Maker
- Ice Scoop
- Instruction Manual

PRODUCT OVERVIEW

The Deco Chef Countertop Ice Maker is designed for convenient ice production. It features a digital display, a clear viewing window, and an adjustable ice cube size setting.

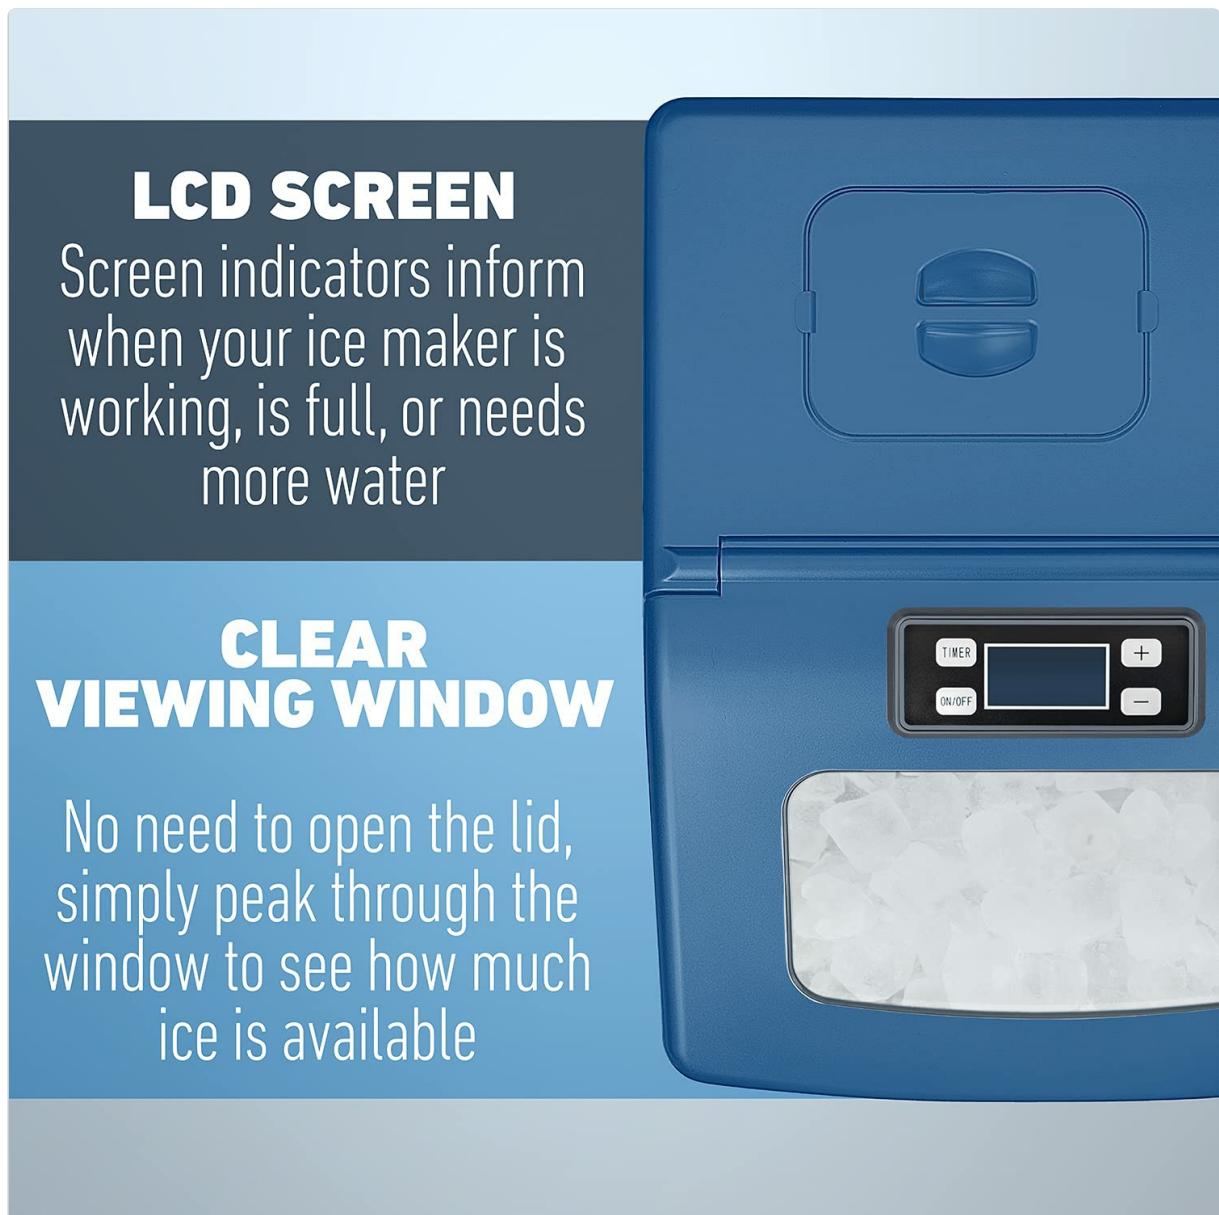


Image: A close-up view of the ice maker's digital display and the clear window on the lid, through which ice cubes are visible. This highlights the user interface and monitoring features.

Key Components:

- **Control Panel:** Features an LCD digital display, ON/OFF button, TIMER button, and '+' / '-' buttons for adjustments.
- **Clear Viewing Window:** Allows monitoring of ice production without opening the lid.
- **Ice Basket:** Stores produced ice cubes.
- **Water Reservoir:** Holds water for ice production.
- **Ice Scoop:** For convenient ice retrieval.

SETUP

1. **Unpack:** Carefully remove the ice maker from its packaging. Remove all packing materials, including

any tape or protective film.

2. **Placement:** Place the ice maker on a flat, stable, and heat-resistant surface. Ensure there is adequate ventilation around the unit.
3. **Clean:** Before first use, clean the interior of the ice maker, including the water reservoir and ice basket, with a soft cloth and mild detergent. Rinse thoroughly and dry.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet.

OPERATING INSTRUCTIONS

Initial Ice Production:

1. **Fill Water Reservoir:** Open the lid and fill the water reservoir with potable water up to the maximum fill line. Do not overfill.
2. **Power On:** Press the **ON/OFF** button on the control panel.
3. **Select Ice Size:** Use the **+** or **-** buttons to select your desired ice cube size (e.g., Small, Medium, Large). The digital display will indicate the current selection.
4. **Start Cycle:** The ice maker will automatically begin the ice-making cycle. The first batch of ice typically takes 15 to 20 minutes.
5. **Monitor:** The LCD display will show the ambient room temperature and a countdown timer indicating the remaining time for the current ice-making cycle.
6. **Ice Collection:** Once ice is produced, it will drop into the ice basket. The ice maker can produce up to 40 pounds of ice per day, with the ice basket holding approximately 2.6 pounds.
7. **Full Basket Indicator:** The digital display will indicate when the ice basket is full, and the ice-making process will pause until ice is removed.
8. **Add Water Indicator:** The digital display will indicate when it's time to add more water to the reservoir.



24
large
ice cubes
in just
15 minutes



Image: A person pouring a beverage into a glass filled with ice, with the Deco Chef ice maker visible in the background. This demonstrates the quick ice production capability.

Using the Timer Function:

The timer function allows you to schedule when the ice maker operates.

- Set Timer:** Press the **TIMER** button. Use the + or - buttons to set the desired operating duration.
- Activate Timer:** Once the time is set, the ice maker will operate for the specified duration and then automatically shut off.

Video Demonstration:

For a visual guide on operating your Deco Chef Countertop Ice Maker, please watch the following video:

Video: This video demonstrates the features and operation of the Deco Chef Countertop Ice Maker, including how to select ice size and use the digital controls.

MAINTENANCE

Cleaning:

- Unplug:** Always unplug the ice maker before cleaning.

- 2. Drain Water:** Drain any remaining water from the reservoir.
- 3. Interior Cleaning:** Clean the interior components (water reservoir, ice basket, ice-making tray) with a soft cloth and a solution of mild detergent and warm water. Rinse thoroughly with clean water.
- 4. Exterior Cleaning:** Wipe the exterior with a damp cloth. Do not use abrasive cleaners or solvents.
- 5. Self-Cleaning Function:** While the product description mentions 'self-cleaning', specific instructions for activating this feature are not provided in the available data. Refer to the product's digital display or manufacturer's website for details if a dedicated self-cleaning cycle exists. Regular manual cleaning is recommended.

Storage:

If the ice maker will not be used for an extended period, ensure it is thoroughly cleaned and dried. Store it in a cool, dry place away from direct sunlight.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Ice maker not producing ice.	No water in reservoir; power issue; ambient temperature too high.	Fill water reservoir; check power connection; ensure proper ventilation.
Ice cubes are thin or wet.	Ice-making cycle duration is too short.	Adjust the length of the ice-making cycle using the digital controls to increase ice cube thickness.
"Add Water" indicator is on.	Water reservoir is empty or low.	Refill the water reservoir with potable water.
"Ice Full" indicator is on.	Ice basket is full.	Remove ice from the basket. The ice maker will resume production.
Unusual noise during operation.	Normal operation sounds (compressor, water pump); ice dropping into basket.	Some operational noise is normal. If noise is excessive or unusual, contact customer support.

SPECIFICATIONS

Feature	Detail
Product Dimensions	15 x 10 x 15 inches
Item Model Number	FBACADCICMBLU
Weight	23.2 Pounds
Brand	Deco Chef
Capacity	40 Pounds (ice production per 24 hours)

Feature	Detail
Voltage	115 Volts
Refrigerant	R600a

WARRANTY AND SUPPORT

The Deco Chef Countertop Ice Maker is covered by a Full 1 Year Manufacturer's Limited Protection Plan. For warranty claims, technical support, or any questions regarding your product, please refer to the contact information provided with your purchase documentation or visit the official Deco Chef website.