

MoKo B0F37N8QHG

MoKo Apple Pencil 1st Gen USB-C Adapter Instruction Manual

Model: B0F37N8QHG

INTRODUCTION

This MoKo USB-C adapter is specifically designed for charging the Apple Pencil 1st Generation and enabling Bluetooth pairing with the iPad 10th Generation and iPad A16 (11th Generation). It offers a convenient, cable-free solution for maintaining your Apple Pencil's power and connectivity. The adapter features a robust design with advanced safety measures to protect your device during charging, and its ultra-lightweight, compact form factor ensures excellent portability.


Important Note: This product is exclusively for Apple Pencil 1st Generation charging and pairing with the specified iPad models. It does not support data transfer, audio output, Lightning cable conversion, or general Type-C power supply to other devices.

SETUP: BLUETOOTH PAIRING

Follow these steps to pair your Apple Pencil 1st Generation with your compatible iPad using the MoKo USB-C adapter:

1. **Enable Bluetooth:** On your iPad, navigate to Settings and ensure Bluetooth is turned on.
2. **Connect Adapter:** Firmly connect the USB-C end of the adapter into your iPad's charging port.
3. **Connect Apple Pencil:** Connect your Apple Pencil 1st Generation to the Lightning end of the adapter.
4. **Pairing Request:** Approximately 3-5 seconds after a correct connection, a "Bluetooth Pairing Request" notification will automatically appear on your iPad screen.
5. **Confirm Pairing:** Tap "Pairing" on the notification to complete the connection.

Bluetoothペアリング

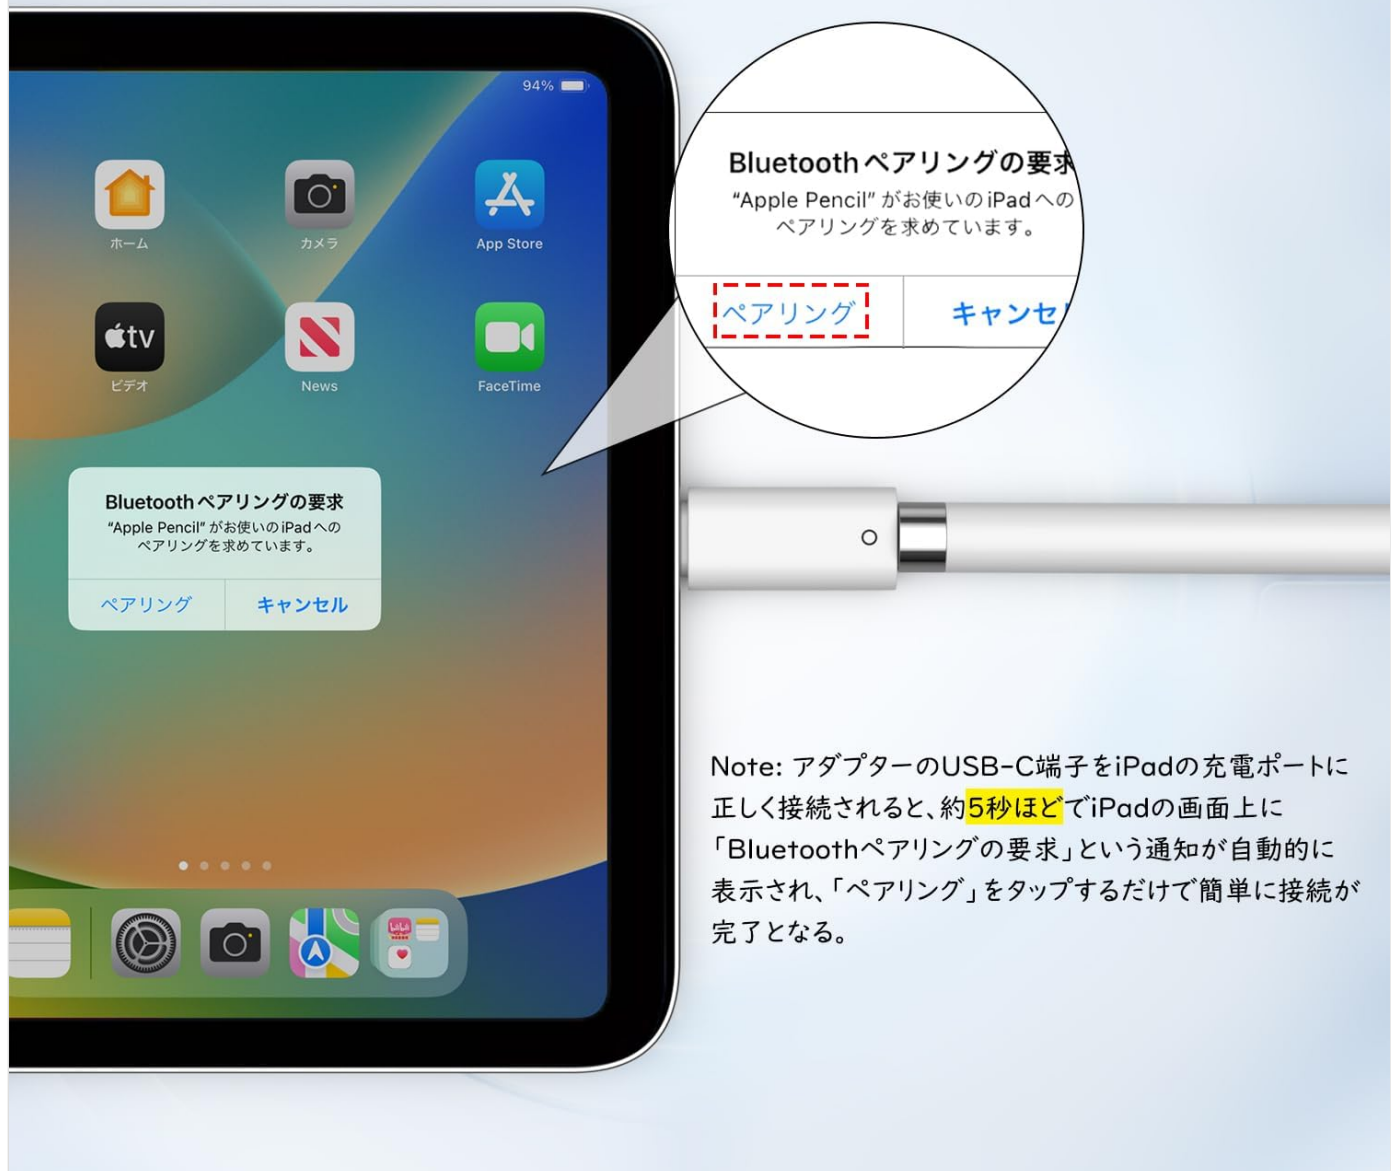

Note: アダプターのUSB-C端子をiPadの充電ポートに正しく接続されると、約5秒ほどでiPadの画面上に「Bluetoothペアリングの要求」という通知が自動的に表示され、「ペアリング」をタップするだけで簡単に接続が完了となる。

Image: iPad displaying the 'Bluetooth Pairing Request' notification after connecting the adapter and Apple Pencil.

Troubleshooting Tip: If the pairing notification does not appear, disconnect the adapter from your iPad and re-insert it firmly.

 
OPERATION: CHARGING YOUR APPLE PENCIL

The MoKo USB-C adapter allows for direct and hassle-free charging of your Apple Pencil 1st Generation. No additional cables are required.

1. **Connect Adapter to Power Source:** Insert the USB-C end of the adapter into a compatible USB-C power source. This can be your iPad 10th Gen / iPad A16 (11th Gen), a USB-C AC adapter, a mobile battery, or a laptop with a USB-C port.
2. **Connect Apple Pencil:** Connect your Apple Pencil 1st Generation to the Lightning end of the adapter.
3. **Charging Begins:** Charging will commence automatically. The adapter's design ensures stable pairing with your iPad even while charging, allowing you to monitor the charge status at any time.

挿すだけで即座充電

互換性がさらに広がり、さまざまなデバイスから直接充電が可能に

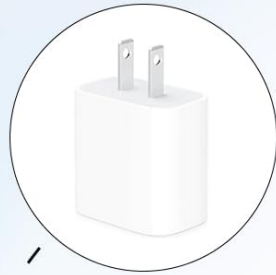

USB-C ACアダプター



モバイルバッテリー



iPad 第10世代 /
iPad A16 (第11世代)



ノートパソコン

Image: The MoKo adapter facilitating charging of an Apple Pencil from multiple USB-C compatible devices.

ライトニングメスからTypeCオス変換 Apple Pencil第一世代充電専用アダプター

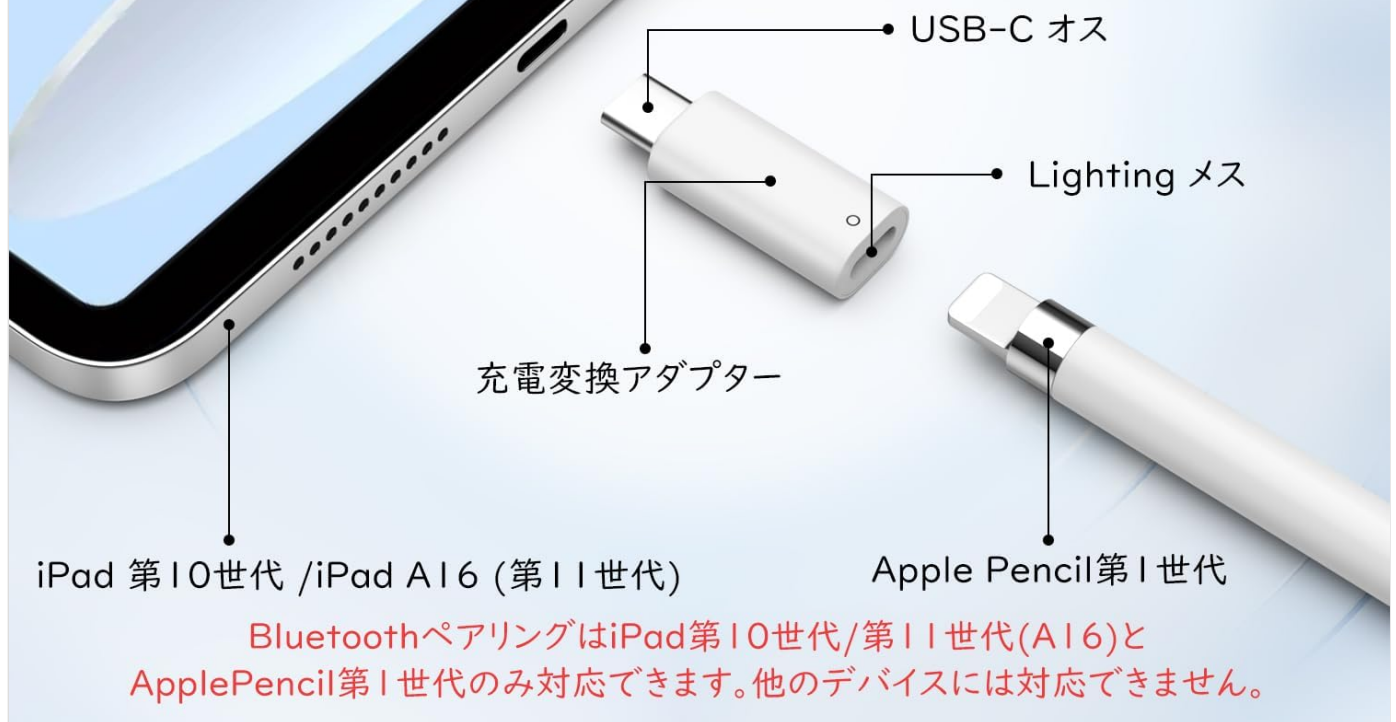 


Image: Detailed view of the adapter connecting an Apple Pencil 1st Gen to an iPad's USB-C port.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to gently wipe the adapter. Avoid using liquid cleaners or abrasive materials.
- **Storage:** Store the adapter in a cool, dry place away from direct sunlight and extreme temperatures.
- **Handling:** Avoid dropping the adapter or subjecting it to strong impacts. While durable, excessive force can cause damage.
- **Connector Care:** Ensure the USB-C and Lightning connectors are free from dust and debris before use to ensure optimal connection.

TROUBLESHOOTING

- **Apple Pencil Not Charging:**
 - Ensure both the USB-C end of the adapter and the Apple Pencil are firmly and correctly inserted.
 - Verify that your USB-C power source (iPad, AC adapter, etc.) is functioning correctly and providing power.

- Check if the Apple Pencil itself is working correctly when connected to other compatible charging methods (if available).

• **Bluetooth Pairing Fails or Notification Doesn't Appear:**

- Confirm that Bluetooth is enabled on your iPad.
- Disconnect the adapter from your iPad and Apple Pencil, then re-insert both firmly.
- Ensure your iPad model is either the 10th Generation or iPad A16 (11th Generation). This adapter is not compatible with other iPad models for pairing.
- Restart your iPad and try the pairing process again.

• **Adapter Feels Loose in iPad Port:**

- Ensure the adapter is pushed in completely. Some users have reported needing to push firmly until it clicks into place.
- Check the iPad's USB-C port for any obstructions or debris.

SPECIFICATIONS

Brand	MoKo
Model Number (ASIN)	B0F37N8QHG
UPC	840401473665
Connector Type	Lightning (Female) to USB-C (Male)
Color	White
Compatibility	Apple Pencil 1st Generation, iPad 10th Generation, iPad A16 (11th Generation)
Functionality	Charging and Bluetooth Pairing (for compatible devices only)
Weight	Approximately 2.5g
Material	Durable PC shell
Country of Origin	China

WARRANTY INFORMATION

This MoKo product comes with a **1-year manufacturer's warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

Please retain your proof of purchase for warranty claims.

CUSTOMER SUPPORT

If you encounter any issues or have questions regarding your MoKo Apple Pencil USB-C Adapter that are not addressed in this manual, please contact MoKo customer support through the retailer where you purchased the product or visit the official MoKo brand store for assistance.

For the MoKo store on Amazon, you can visit: [MoKo Official Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question