

[Manuals.plus](#) /

> [Dolphin](#) /

> Dolphin LX60 Portable Bluetooth Speaker User Manual

Dolphin LX60

Dolphin LX60 Portable Bluetooth Speaker User Manual

Model: LX60

INTRODUCTION

Thank you for purchasing the Dolphin LX60 Portable Bluetooth Speaker. This manual provides essential information for setting up, operating, and maintaining your speaker to ensure optimal performance and longevity. The LX60 is a robust, waterproof portable speaker designed for various environments, offering high-quality audio and versatile connectivity options.



Figure 1: Dolphin LX60 Portable Bluetooth Speaker Overview

This image displays the Dolphin LX60 speaker in black, featuring its cylindrical design, central control panel with buttons, and illuminated end rings. A detachable strap is visible, indicating its portability.

SETUP

1. Charging the Speaker

Before first use, fully charge the Dolphin LX60 speaker. Use the provided charge cable to connect the speaker to a USB power adapter (not included) or a computer's USB port.

- The charging indicator lights will illuminate during charging.
- Charging time may vary depending on the power source.
- A full charge provides approximately 10 hours of playback.

2. Powering On/Off

- To power on, press and hold the **Power button** (usually marked with a power symbol) for a few seconds until you hear an audible prompt and the indicator lights activate.
- To power off, press and hold the **Power button** again until the speaker shuts down.

3. Bluetooth Pairing

The LX60 speaker will automatically enter Bluetooth pairing mode when powered on for the first time or if no device is connected.

1. Ensure the speaker is powered on and in pairing mode (indicator light will flash).
2. On your mobile device (smartphone, tablet, etc.), enable Bluetooth.
3. Search for available Bluetooth devices.
4. Select "**Dolphin LX60**" from the list of devices.
5. Once connected, the speaker will provide an audible confirmation, and the indicator light will become solid.
6. The speaker will automatically reconnect to the last paired device when powered on, if available.



Figure 2: Control Panel of Dolphin LX60

This image highlights the central control panel of the Dolphin LX60 speaker, detailing the layout of the power, play/pause, volume up/down, and mode selection buttons, which are essential for operation.

OPERATING INSTRUCTIONS

Button Functions

- **Power Button:** Press and hold to power on/off. Short press to change light modes (if applicable).
- **Play/Pause Button:** Short press to play or pause audio.
- **Volume Up (+):** Short press to increase volume. Long press for next track.
- **Volume Down (-):** Short press to decrease volume. Long press for previous track.
- **Mode (M) Button:** Short press to switch between input modes (Bluetooth, AUX, USB, FM Radio).

Connectivity Modes

Bluetooth Mode

After successful pairing, audio from your connected device will play through the speaker. Use your device or the speaker's volume controls to adjust playback.

AUX Input Mode

Connect an external audio device using a 3.5mm AUX cable (not included) to the speaker's AUX port. Press the **Mode (M) button** to switch to AUX mode. Audio will play directly from the connected device.

USB Playback Mode

Insert a USB flash drive containing MP3 audio files into the speaker's USB port. Press the **Mode (M) button** to switch to USB mode. The speaker will automatically begin playing audio from the drive.

FM Radio Mode

Press the **Mode (M) button** to switch to FM Radio mode. The speaker will automatically scan and save available FM stations. Use the Volume Up/Down buttons (long press) to navigate between saved stations.

True Wireless Stereo (TWS) Function

The Dolphin LX60 supports TWS, allowing you to pair two LX60 speakers together for a stereo sound experience.

1. Ensure both LX60 speakers are powered on and not connected to any Bluetooth device.
2. On one speaker (this will be the primary speaker), double-press the **Mode (M) button**. You will hear a prompt indicating it's searching for another speaker.
3. The two speakers will automatically connect to each other. Once connected, you will hear a confirmation sound.
4. Now, connect your mobile device to the primary speaker via Bluetooth as described in the "Bluetooth Pairing" section.
5. Audio will now play in stereo through both speakers.



Figure 3: Dolphin LX60 with Carrying Strap

This image illustrates the Dolphin LX60 speaker with its included carrying strap attached, emphasizing its design for easy portability and outdoor use.

MAINTENANCE

Cleaning

- Wipe the speaker with a soft, damp cloth.
- Do not use abrasive cleaners, alcohol, or chemical solvents, as these may damage the surface.

- Ensure all ports are dry before charging or connecting cables, especially after exposure to water.

Storage

- Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- If storing for an extended period, charge the battery to approximately 50% every few months to preserve battery life.

Waterproof Information

The Dolphin LX60 is designed to be waterproof. However, it is important to ensure that the charging port and any other open ports are securely sealed with their protective covers before exposing the speaker to water. Do not submerge the speaker for extended periods or expose it to high-pressure water jets.



Figure 4: Illuminated End Ring of Dolphin LX60

This image provides a detailed view of one end of the Dolphin LX60 speaker, showcasing its distinctive illuminated blue light ring, which adds to its aesthetic appeal during operation.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Low battery; Power button not held long enough.	Charge the speaker; Press and hold the Power button for 3-5 seconds.
No sound.	Volume too low; Incorrect input mode; Device not connected.	Increase speaker and device volume; Press Mode button to select correct input; Re-pair Bluetooth device.
Bluetooth pairing fails.	Speaker not in pairing mode; Device too far; Interference.	Ensure speaker is in pairing mode; Move device closer; Turn off other Bluetooth devices.
Poor sound quality.	Low battery; Device too far; Obstructions.	Charge the speaker; Move device closer to speaker; Remove obstructions between device and speaker.
TWS pairing fails.	Speakers already connected to a device; Incorrect pairing procedure.	Disconnect both speakers from any Bluetooth devices; Follow TWS pairing steps carefully.

SPECIFICATIONS

Feature	Detail
Model Name	LX60
Brand	Dolphin
Connectivity Technology	Bluetooth
Speaker Type	Outdoor
Special Feature	Waterproof
Audio Output Mode	Stereo
Speaker Maximum Output Power	60 Watts
Battery Life	10 Hours
Battery Capacity	3000 mAh (3E+3 Milliamp Hours)
Maximum Range	300 Feet
Product Dimensions	15.2D x 30.5W x 15.2H Centimetres (approx. 12.7 x 25.4 x 15.24 cm)
Material	ABS, Acrylonitrile Butadiene Styrene
Included Components	Strap, Charge Cable
Compatible Devices	iPhone, Android, Bluetooth, AUX, iPod, Zune

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your product packaging or visit the official Dolphin website. Keep your proof of purchase for any warranty claims.

This manual is intended to provide general guidance. For specific issues or advanced troubleshooting, please contact Dolphin customer support.

