

[Manuals.plus](#) /

> [AEG](#) /

> AEG ULTIMATE 8000 AP81A25ULT Cordless Vacuum Cleaner User Manual

AEG AP81A25ULT

AEG ULTIMATE 8000 AP81A25ULT Cordless Vacuum Cleaner User Manual

Model: AP81A25ULT

IMPORTANT SAFETY INFORMATION

Please read this user manual carefully before using the appliance. Keep it for future reference. This appliance is intended for domestic use only.

- Always disconnect the appliance from the charger before cleaning or maintenance.
- Do not use the appliance to vacuum water or other liquids.
- Do not vacuum hot ashes, sharp objects, or large debris that could damage the appliance.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Use only the original charger and battery supplied with the appliance.
- Do not operate the vacuum cleaner if it is visibly damaged.

PRODUCT OVERVIEW

The AEG ULTIMATE 8000 AP81A25ULT is a versatile cordless vacuum cleaner designed for efficient cleaning of various floor types and surfaces. It features a powerful motor, advanced filtration, and a digital display for real-time information.



Figure 1: Complete AEG ULTIMATE 8000 Cordless Vacuum Cleaner with charging station.



Figure 2: Close-up of the handheld unit's digital display and control buttons.



Figure 3: The detachable handheld vacuum unit with its 25.2V Lithium-ion battery.



Figure 4: The self-standing charging station for convenient storage and charging.

Included Accessories:

- **UltimatePower Multi-Floor Brush:** Designed for all floor coverings, highly effective on carpets.
- **UltimatePower Hard Floor Brush:** For extra deep cleaning of hard floors.
- **PetProPlus Electric Suction Brush:** Ideal for removing pet hair and cleaning cushions.
- **Crevice Tool:** For narrow spaces and corners.
- **Furniture Brush:** For delicate surfaces and upholstery.
- **Ergo Angle Nozzle:** For reaching awkward angles.
- **Accessory Holders:** Two holders for attachment to the charging station.
- **Hygienic Filter:** Part of the 5-level filtration system.



Figure 5: UltimatePower Multi-Floor Brush with LED lights.



Figure 6: PetProPlus Electric Suction Brush for pet hair.



Figure 7: Crevice tool for tight spaces.



Figure 8: Furniture brush for upholstery.



Figure 9: Ergo Angle Nozzle for difficult-to-reach areas.

SETUP AND INITIAL USE

1. Assembly:

1. Unpack all components from the packaging.
2. Attach the main vacuum body to the telescopic tube. Ensure it clicks securely into place.
3. Connect your desired floor nozzle (Multi-Floor or Hard Floor brush) to the bottom of the telescopic tube.
4. Assemble the charging station. The self-standing design allows for flexible placement.
5. Attach the accessory holders to the charging station if desired.

2. Initial Charging:

- Place the assembled vacuum cleaner onto the charging station. The Roll-in/Roll-out feature ensures easy docking.

- Ensure the telescopic tube is fully retracted when charging to prevent issues.
- Connect the charger to a power outlet. The digital display will indicate charging status.
- Allow the battery to fully charge before first use. A full charge takes approximately 2.5 hours.

OPERATING INSTRUCTIONS

1. Powering On/Off and Suction Control:

- To turn on the vacuum, press the power button on the handheld unit. There is no need to hold the button down during operation.
- The digital display provides real-time information on battery level, filter status, and suction power.
- Use the +/- buttons to cycle through the 3 power settings: Low, Medium, and High.
- The vacuum also features an automatic mode that adjusts suction power based on floor type, optimizing battery life and cleaning performance.
- To turn off the vacuum, press the power button again.

2. Using Different Nozzles:

- **Floor Nozzles:** The UltimatePower Multi-Floor brush is suitable for all surfaces, including carpets. The UltimatePower Hard Floor brush is specifically designed for hard floors. Both feature LED lights to illuminate the cleaning path.
- **Handheld Mode:** To convert to a handheld vacuum, press the release button to detach the main unit from the telescopic tube.
- **Accessories:** Attach the Crevice Tool for tight corners, the Furniture Brush for upholstery, or the Ergo Angle Nozzle for elevated or awkward areas. The PetProPlus Electric Suction Brush is ideal for pet hair on furniture and stairs.



Figure 10: The vacuum cleaner effectively cleaning debris from a hard floor surface.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your AEG ULTIMATE 8000 vacuum cleaner.

1. Emptying the Dust Bin:

- The dust bin has a capacity of 400 ml. It is recommended to empty it after each use or when the 'Dust Bin Full' indicator appears on the digital display.

- To remove the dust bin, press the release button located on the handheld unit.
- Carefully detach the dust bin and empty its contents into a waste bin.
- Reattach the dust bin, ensuring it clicks firmly into place.

2. Filter Cleaning:

- The hygienic filter is crucial for maintaining suction power and air quality.
- Remove the filter from the dust bin.
- Tap the filter gently to remove loose dust. For a more thorough clean, rinse the filter under cold running water.
- Allow the filter to air dry completely for at least 24 hours before reinserting it into the vacuum cleaner. Do not use a dryer or direct heat.
- Replace the filter if it shows signs of wear or damage, or if suction power remains low after cleaning.

3. Brush Roll Cleaning:

- Periodically check the brush rolls in the floor nozzles for tangled hair or debris.
- To remove the brush roll, follow the instructions in the specific nozzle's manual (usually involves a release mechanism).
- Use scissors to cut away any tangled hair or threads.
- Clean the brush roll and its housing, then reinsert it.

TROUBLESHOOTING

If you encounter issues with your vacuum cleaner, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is depleted.	Charge the battery fully.
Reduced suction power.	Dust bin is full. Filter is clogged. Brush roll is tangled. Obstruction in nozzle or tube.	Empty the dust bin. Clean or replace the filter. Clean the brush roll. Check for and remove any blockages.
Vacuum stops during operation.	Battery is low. Overheating protection activated.	Recharge the battery. Turn off the vacuum, allow it to cool down for at least 30 minutes, then restart. Ensure filters are clean.
Unusual noise during operation.	Obstruction in brush roll or air path. Damaged component.	Check for and remove any blockages. If noise persists, contact customer support.

If the problem persists after attempting these solutions, please contact AEG customer support.

SPECIFICATIONS

Feature	Detail
Brand	AEG

Feature	Detail
Model Number	AP81A25ULT (320721)
Color	Bronze
Dimensions (L x W x H)	25 x 25 x 115 cm
Weight	2.9 Kilograms
Power	8000 Watts
Voltage	25.2 Volts
Noise Level	79 dB
Run Time (with floor nozzle)	Up to 35 minutes
Run Time (handheld part)	Up to 60 minutes
Battery Type	1 Lithium-ion (included)
Charging Time	Max 2.5 hours (fast charge technology)
Filter Type	Multiple (5 filtration levels)
Special Features	Cordless, Digital Display, Automatic Suction Adjustment, Replaceable Battery, Self-standing Charging Station, LED lights on nozzle.

WARRANTY AND SUPPORT

For warranty information, please refer to the documentation provided with your purchase or visit the official AEG website. AEG offers a manufacturer's warranty on this product, typically covering defects in materials and workmanship. For technical support, spare parts, or service inquiries, please contact AEG customer service through their official channels. Keep your proof of purchase and model number (AP81A25ULT) ready when contacting support. You can find more information and support on the official AEG website:www.aeg.com