

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [VINABTY](#) /

› [VINABTY VR10 Remote Control User Manual for Vizio TVs](#)

## VINABTY VR10

# VINABTY VR10 Remote Control User Manual

For Vizio TVs

## 1. OVERVIEW

The VINABTY VR10 is a replacement infrared (IR) remote control designed for various Vizio TV models. This remote requires no programming and functions as a direct replacement for your original Vizio TV remote.

### 1.1 Compatible Vizio TV Models

This remote is compatible with a wide range of Vizio TV models, including but not limited to:

- **E-Series:** E190VA, E220VA, E261VA, E320VA, E320VA-CA, E320VA-MX, E321VA, E370VA, E371VA, E420VA, E420VA-MX, E421VA, E470VA, E550VA
- **M-Series:** M190VA, M190VA-CA, M190VA-MX, M220VA, M220VA-CA, M220VA-MX, M260VA, M260VA-MX, M260VA-W

Please refer to your TV's original manual or the product listing for a complete list of compatible models.





Image 1.1: Front view of the VINABTY VR10 Remote Control, showing all buttons and their labels.

## 2. SETUP

### 2.1 Battery Installation

The VINABTY VR10 remote control requires two (2) AA batteries for operation. Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the latch and slide the battery cover downwards to open it.

3. Insert two new AA batteries, ensuring that the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.

**Note:** Always replace both batteries at the same time. Do not mix old and new batteries, or different types of batteries. Remove batteries if the remote will not be used for an extended period.

## 3. OPERATING INSTRUCTIONS

---

The VINABTY VR10 remote control is designed for immediate use with compatible Vizio TVs without any additional setup or programming. Simply point the remote at your TV and press the desired button.

### 3.1 Basic Functions

- **Power (U):** Turns the TV on or off.
- **INPUT:** Cycles through available input sources (HDMI, AV, Component, etc.).
- **TV/AV/COMP/HDMI:** Direct access buttons for specific input sources.
- **VOL (+/-):** Adjusts the volume level.
- **Mute (X):** Mutes or unmutes the TV audio.
- **CH (+/-):** Changes the TV channel.
- **LAST:** Returns to the previously viewed channel.
- **Number Buttons (0-9):** Directly enter channel numbers.
- **MENU/OK:** Opens the TV's on-screen menu and confirms selections.
- **Navigation Arrows (Up, Down, Left, Right):** Navigate through on-screen menus.
- **EXIT:** Closes the on-screen menu.
- **INFO:** Displays information about the current program or input.
- **GUIDE:** Accesses the electronic program guide (if available on your TV).
- **SLEEP:** Sets a sleep timer for the TV.
- **WIDE:** Adjusts the screen aspect ratio.
- **CC:** Activates or deactivates Closed Captions.

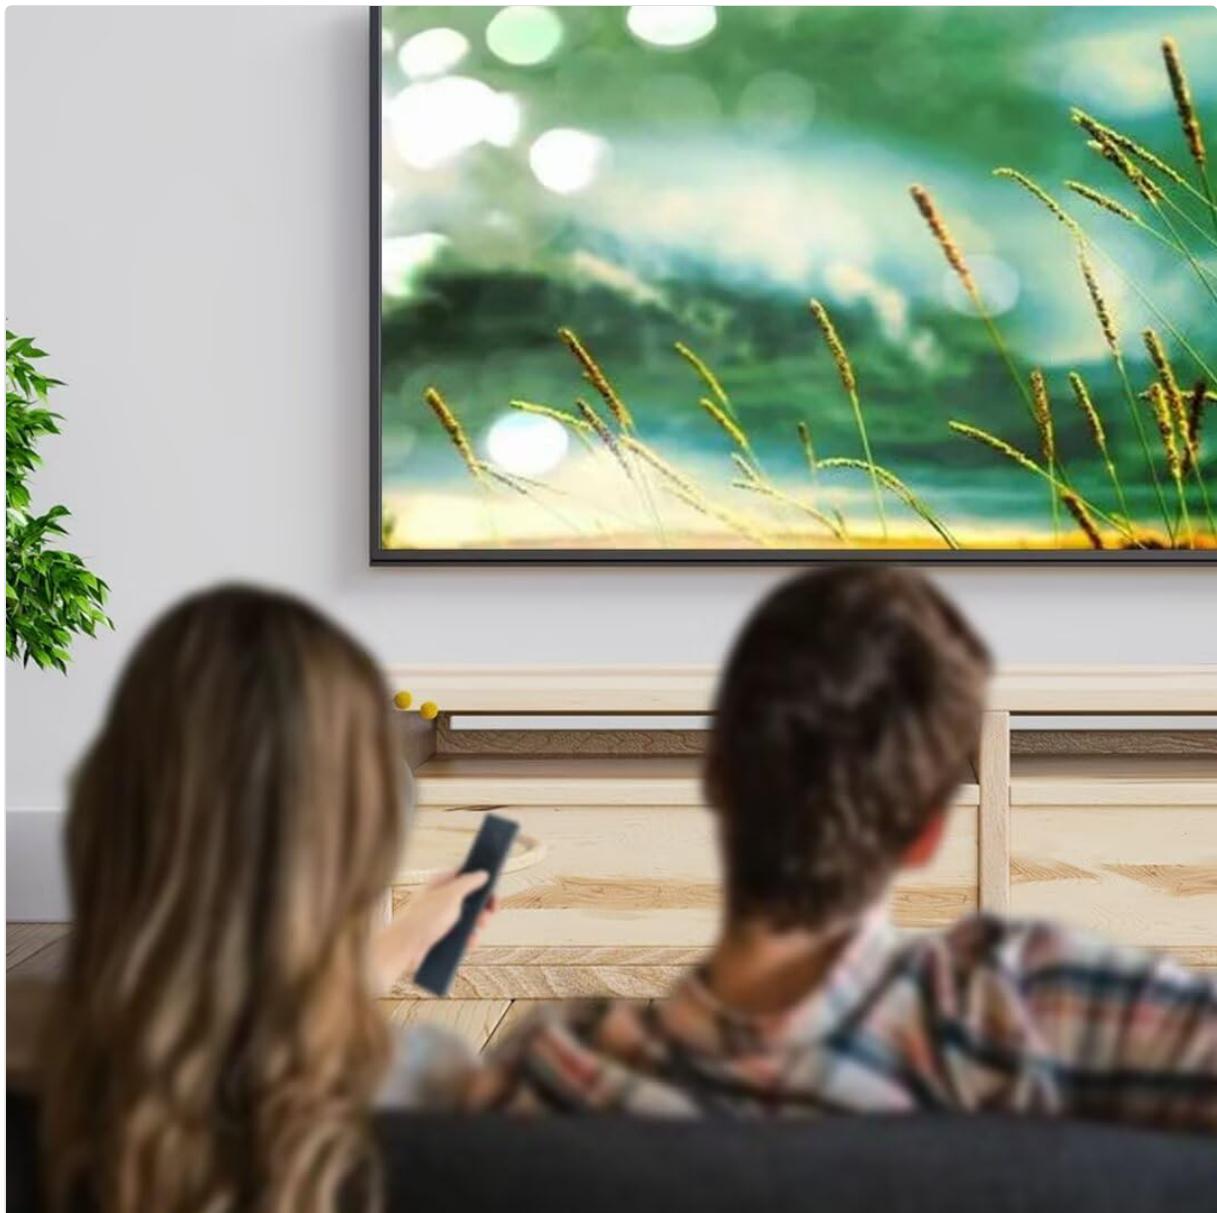


Image 3.1: Example of remote control usage with a television.

## 4. MAINTENANCE

### 4.1 Cleaning the Remote

To maintain the remote control's functionality and appearance:

- Wipe the surface with a soft, dry cloth.
- For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaner.
- Do not use harsh chemicals, solvents, or abrasive cleaning pads, as these can damage the remote's finish or internal components.

### 4.2 Battery Care

- Replace batteries promptly when the remote's performance degrades.
- If the remote will not be used for an extended period (e.g., more than a month), remove the batteries to prevent leakage and potential damage.
- Dispose of used batteries according to local regulations.

## 5. TROUBLESHOOTING

## 5.1 Remote Not Responding

If your VINABTY VR10 remote control is not working, consider the following:

- **Check Batteries:** Ensure batteries are correctly inserted with the correct polarity (+/-) and are not depleted. Replace with fresh AA batteries if necessary.
- **Line of Sight:** Make sure there is a clear line of sight between the remote's IR emitter and the TV's IR receiver. Obstructions can block the signal.
- **Distance:** Ensure you are within the effective operating range of the remote (typically up to 20 feet or 6 meters).
- **TV Sensor:** Verify that the TV's IR sensor is not blocked or dirty.
- **Interference:** Strong light sources or other electronic devices can sometimes interfere with IR signals. Try using the remote in a different environment.

## 5.2 Specific Buttons Not Working

If only certain buttons are unresponsive, it might indicate a minor internal issue or debris under the button. Try gently pressing the button multiple times. If the issue persists, and other troubleshooting steps have failed, consider replacing the remote.

## 6. SPECIFICATIONS

Feature	Specification
Model	VR10
Brand	VINABTY
Product Dimensions	7.6 x 2 x 0.75 inches
Item Weight	2.6 ounces
Batteries Required	2 AA batteries
Connectivity Technology	Infrared (IR)
Compatible Devices	Television
Max Number of Supported Devices	1
Special Feature	Ergonomic design
Manufacturer	VINABTY Inc

## 7. WARRANTY INFORMATION

Warranty terms for the VINABTY VR10 remote control are typically provided by the seller or manufacturer at the time of purchase. Please refer to your purchase documentation, the product packaging, or contact the seller directly for specific warranty details and coverage.

## 8. SUPPORT

For further assistance, technical support, or inquiries regarding your VINABTY VR10 remote control,

please contact the seller from whom you purchased the product. You may also visit the official VINABTY website for additional resources, if available.

*Seller: Promotion-Shopping store*

---

© 2024 VINABTY. All rights reserved.