

[Manuals.plus](#) /

› [Arafuna](#) /

› ARAFUNA Portable CD Player Model CD5194B User Manual

Arafuna CD5194B

ARAFUNA Portable CD Player Model CD5194B User Manual

Model: CD5194B

1. INTRODUCTION

Thank you for purchasing the ARAFUNA Portable CD Player Model CD5194B. This device is designed to provide high-quality audio playback from CDs, CD-R, CD-RW, and MP3 discs, with added features like Bluetooth connectivity, a rechargeable battery, and an anti-shock system. This manual provides detailed instructions for setup, operation, and maintenance to ensure optimal performance and longevity of your device.



Image 1.1: Top-down view of the ARAFUNA Portable CD Player.

2. SAFETY INFORMATION

Please read all safety instructions before using this product. Keep this manual for future reference.

- Do not expose the device to rain, moisture, or extreme temperatures.
- Avoid dropping or subjecting the device to strong impacts.
- Do not disassemble or attempt to repair the device yourself. Contact qualified service personnel.
- Use only the specified charging cable and power adapter.
- Keep the device away from strong magnetic fields.
- Clean the device with a soft, dry cloth. Do not use liquid cleaners.

3. SETUP

3.1. Charging the Battery

The portable CD player features a built-in 2000mAh rechargeable battery. Before first use, fully charge the device. Connect the provided USB charging cable to the player's DC IN 5V port and the other end to a USB power adapter (not included) or a computer's USB port.

- **Charging Time:** Approximately 3-4 hours.
- **Playing Time (without Bluetooth):** Up to 18 hours.
- **Playing Time (with Bluetooth):** Up to 13 hours.



Image 3.1: Illustration of the player's battery life and charging specifications.

3.2. Inserting a CD

1. Gently slide the OPEN switch to open the CD compartment lid.
2. Place the CD onto the center spindle with the label side facing up.
3. Press down gently on the center of the CD until it clicks into place.
4. Close the CD compartment lid firmly until it latches.

3.3. Connecting Headphones

The player features two 3.5mm headphone jacks for shared listening. Insert your headphones into either jack. Note that only Jack 1 can control the player's functions.

Double Headphone Jacks Anti-Shock System

Enjoy high quality music with others

Double jacks can be used together
But just jack 1 can control the player



Image 3.2: The portable CD player featuring dual headphone jacks for shared audio.

3.4. Connecting via AUX Cable (for Car/External Speakers)

To connect the CD player to your car's audio system or external speakers, use a 3.5mm AUX cable. Plug one end into the player's AUX OUT port and the other end into your car's AUX IN port or external speaker's input.

Note: The player's Bluetooth function cannot connect directly to car audio systems. Use the AUX cable for car connections.

Wide Compatibility

CD | CD-R | CD-RW | MP3 | TF CARD




Repeat all


Play in order


Play first 10s
of file


Repeat a track


Random play

Image 3.3: Connecting the CD player to a car stereo using a 3.5mm AUX cable.

4. OPERATING INSTRUCTIONS

4.1. Basic Playback Controls

- **Power On/Off:** Slide the POWER switch to ON/OFF.
- **Play/Pause:** Press the [▶/||] button.
- **Next Track:** Press the [▶▶] button.
- **Previous Track:** Press the [||▶] button.
- **Volume Up/Down:** Use the [VOL+] and [VOL-] buttons.
- **Mode:** Press the [MODE] button to cycle through playback modes (Repeat 1, Repeat All, Intro, Random).
- **EQ:** Press the [EQ] button to select equalizer presets.

4.2. Bluetooth Connection

The player can transmit audio wirelessly to Bluetooth headphones or speakers.

Bluetooth Device Visualization

Easy and clear to connect which you want



Image 4.1: Bluetooth device visualization on the player's screen.

1. Turn on your Bluetooth speaker or headphones and ensure they are in pairing mode.
2. On the CD player, press the **[Bluetooth]** button. If Bluetooth is off, press the **[Play]** button to activate it.
3. Select the Bluetooth search option on the player and press the **[Play]** button. The player will begin searching for nearby devices.
4. Once your device appears on the player's screen, press the **[Play]** button to select it and initiate connection.
5. After successful connection, press the **[Bluetooth]** button to return to the play interface.



Image 4.2: Visual guide for Bluetooth device connection steps.

4.3. TF Card Playback

The player supports TF cards (up to 32GB) formatted as FAT32 for MP3 playback.

1. Insert a TF card into the TF card slot on the side of the player.
2. The player will automatically switch to TF card mode or you may need to press the **[MODE]** button to select TF card mode.
3. Use the playback controls to navigate and play MP3 files.



Image 4.3: Location of the TF card slot on the player.

4.4. Playback Modes and Compatibility

The player supports various disc formats and playback options:

- **Compatible Formats:** CD, CD-R, CD-RW, MP3, TF Card.
- **Repeat All:** Repeats all tracks on the disc/card.
- **Play in Order:** Plays tracks sequentially.
- **Play First 10s of File (Intro):** Plays the first 10 seconds of each track.

- **Repeat a Track:** Repeats the current track.
- **Random Play:** Plays tracks in a random order.



Image 4.4: Overview of supported media types and playback modes.

4.5. LCD Display

The player features a backlit LCD display for easy visibility, even in low-light conditions. It shows track number, elapsed time, playback mode, and Bluetooth status.

Upgraded 2000mAh Rechargeable Battery

Enjoy music for longer time



18H
Playing time
(without bluetooth)

13H
Playing time
(with bluetooth)

3-4H
Charging time

USB Charge

Image 4.5: The player's backlit LCD display for clear viewing.

5. MAINTENANCE

Proper care and maintenance will extend the life of your CD player.

- **Cleaning:** Use a soft, lint-free cloth to wipe the exterior of the player. For the lens, use a specialized CD lens cleaner disc or a soft brush designed for optical lenses. Do not touch the lens directly.
- **Storage:** Store the player in a cool, dry place away from direct sunlight and dust when not in use.
- **Battery Care:** To maintain battery health, avoid fully discharging the battery frequently. If storing for a long period, charge the battery to about 50% every few months.
- **Disc Handling:** Always handle CDs by their edges. Keep discs clean and free of scratches to prevent playback issues.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Player does not turn on	Battery is depleted; Power switch is off	Charge the battery; Slide the POWER switch to ON

Problem	Possible Cause	Solution
CD does not play / "No Disc" error	Disc inserted incorrectly; Disc is dirty or scratched; Disc format not supported	Reinsert disc correctly; Clean or replace disc; Ensure disc is CD, CD-R, CD-RW, or MP3 format
Skipping during playback	Disc is dirty or scratched; Player is subjected to strong vibration	Clean or replace disc; Ensure player is on a stable surface or anti-shock is active
No sound from headphones/speakers	Volume too low; Headphones/speakers not connected properly; Bluetooth not paired	Increase volume; Reconnect headphones/speakers; Pair Bluetooth device (refer to section 4.2)
Bluetooth device fails to pair	Device not in pairing mode; Player too far from device; Interference	Ensure device is in pairing mode; Move player closer; Reduce interference (e.g., other wireless devices)

7. SPECIFICATIONS

- **Brand:** Arafuna
- **Model Name:** CD5121B
- **Model Number:** CD5194B
- **Color:** Black
- **Connectivity Technology:** Auxiliary, Bluetooth, USB
- **Special Feature:** Portable
- **Number Of Discs:** 1
- **Supported Audio Format:** MP3
- **Media Format Type:** CD-R, CD, CD-RW
- **Compatible Devices:** Headphones, Bluetooth Speakers
- **Headphones Jack:** 3.5mm Jack (x2)
- **MP3 Player:** Yes (via TF Card)
- **Battery:** 1 Lithium Polymer battery required (2000mAh)
- **Item Weight:** 1.1 Pounds

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact Arafuna customer service directly. Keep your purchase receipt as proof of purchase.