

[Manuals.plus](#) /

› [momyeasy](#) /

› MOMYEASY 7-in-1 Baby Bottle Warmer Instruction Manual - Model 9600

momyeasy 9600

MOMYEASY 7-in-1 Baby Bottle Warmer Instruction Manual

Model: 9600

Brand: MOMYEASY

1. INTRODUCTION

Thank you for choosing the MOMYEASY 7-in-1 Baby Bottle Warmer. This versatile appliance is designed to simplify infant feeding by offering multiple functions including fast warming, breast milk defrosting, baby food heating, bottle sterilization, 24-hour temperature control, and timer reservation. Please read this manual thoroughly before use to ensure safe and optimal operation.



Image 1: The MOMYEASY 7-in-1 Baby Bottle Warmer displaying its various functions on the control panel.

2. PRODUCT OVERVIEW

The MOMYEASY 7-in-1 Baby Bottle Warmer is engineered for convenience and safety, providing a comprehensive solution for your baby's feeding needs. Its key functions include:

- **Fast Warming:** Heats formula milk quickly (3-8 minutes) while preserving nutrients.
- **Breast Milk Defrost:** Gently thaws frozen breast milk.
- **Baby Food Heating:** Warms baby food to an appropriate temperature.
- **Bottle High-Temperature Dry/Sterilization:** Sterilizes bottles and accessories using high-temperature steam.

- **24H Keep Warm:** Maintains a constant desired temperature for up to 24 hours.
- **Timer Reservation:** Allows scheduling of warming cycles.
- **Night Light Function:** Provides soft illumination for convenient night feeding.

The device features an intelligent temperature control system with multiple sensing probes to ensure precise temperature accuracy within 1°C (1.8°F).

3. SAFETY INSTRUCTIONS

To ensure safe operation and prevent injury or damage, please adhere to the following safety guidelines:

- Read all instructions before using the appliance.
- Do not immerse the main unit, cord, or plug in water or other liquids.
- Always supervise children when the appliance is in use.
- Unplug from the outlet when not in use and before cleaning. Allow to cool before handling.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Use only accessories recommended by the manufacturer.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot liquids.
- Always check the temperature of the milk or food before feeding your baby.
- This appliance is for household use only.

4. PACKAGE CONTENTS

Upon unpacking, ensure all items listed below are present and in good condition:

- MOMYEASY 7-in-1 Baby Bottle Warmer Main Unit
- Bottle Basket (for holding bottles/food jars)
- Lid
- User Manual



Fast/Thaw Warming



Food Heating



Night Light Design



Bottle Steaming



24H Keep Warm

Image 2: The main unit of the bottle warmer, along with the removable bottle basket and lid.

5. SETUP

1. **Initial Cleaning:** Before first use, clean all removable parts (bottle basket, lid) with warm soapy water. Wipe the main unit with a damp cloth. Do not immerse the main unit in water.
2. **Placement:** Place the bottle warmer on a stable, flat, and heat-resistant surface.
3. **Add Water:** Pour distilled water into the water tank of the main unit. Ensure the water level is between the MIN and MAX indicators.

For All Bottle & Bags For all baby food in all status



Baby Food Jar



Wide Neck Bottle



Bottle



Standard Bottle



Breast Milk Bags



Image 3: Demonstrating how to add water to the bottle warmer's reservoir.

4. **Insert Basket:** Place the bottle basket into the water tank.
5. **Plug In:** Connect the power cord to a suitable electrical outlet. The LCD display will light up.

6. OPERATING INSTRUCTIONS

The MOMYEASY Bottle Warmer features an intuitive control panel with an LCD display. The buttons include: Mode, Plus (+), Power, Minus (-), Timer, and Lamp.

General Operation:

1. **Power On/Off:** Press the 'Power' button to turn the unit on or off.

2. **Select Mode:** Press the 'Mode' button repeatedly to cycle through the available functions: Milk (Fast Warming), Thaw/Fast (Breast Milk Defrost), Food (Baby Food Heating), Sterilize (Bottle Sterilization), 24H Keep Warm.
3. **Adjust Temperature/Time:** Use the '+' and '-' buttons to adjust the target temperature or set the timer duration for specific modes.
4. **Start/Confirm:** Once a mode and settings are selected, the device will typically start automatically or require a press of the 'Power' button to confirm.

Specific Functions:

6.1 Fast Warming (Milk)

1. Place the bottle(s) with milk/formula into the bottle basket.
2. Ensure adequate water in the tank.
3. Press 'Mode' until the 'Milk' icon is selected.
4. Adjust the target temperature using '+' or '-' buttons (e.g., 40°C/104°F is a common feeding temperature).
5. The warmer will begin heating and maintain the set temperature.

Steam Sterilization Function

High Temp steam surround sterilization



Image 4: The bottle warmer actively heating a baby bottle, indicated by the display and steam.

6.2 Breast Milk Defrost (Thaw/Fast)

1. Place frozen breast milk bags or bottles into the basket.
2. Ensure adequate water in the tank.
3. Press 'Mode' until the 'Thaw/Fast' icon is selected.
4. The warmer will gently defrost the milk.

Gentle Water Bath Heating

Preserves Nutrients in Breast Milk



Image 5: Breast milk bags being gently defrosted in the bottle warmer.

6.3 Baby Food Heating (Food)

1. Place the baby food jar or container into the basket.
2. Ensure adequate water in the tank.
3. Press 'Mode' until the 'Food' icon is selected.
4. Adjust the target temperature using '+' or '-' buttons.
5. The warmer will heat the food to the set temperature.



Image 6: Baby food being warmed in the bottle warmer, preserving its nutrients.

6.4 Bottle Sterilization (Sterilize)

1. Place clean bottles, nipples, or accessories into the basket.
2. Ensure adequate water in the tank.
3. Press 'Mode' until the 'Sterilize' icon is selected.
4. The warmer will generate high-temperature steam to sterilize the items.



Precise Temperature Control

Protecting Baby Milk Nutrition



Image 7: The bottle warmer in sterilization mode, showing steam rising from the unit.

6.5 24H Keep Warm

1. After warming, the device can automatically switch to '24H Keep Warm' mode or be selected manually.
2. Press 'Mode' until the '24H Keep Warm' icon is selected.
3. The device will maintain the set temperature for up to 24 hours.

6.6 Timer Reservation

1. Select your desired warming mode (Milk, Thaw, Food).
2. Press the 'Timer' button.

3. Use the '+' and '-' buttons to set the desired delay time before the warming cycle begins.

6.7 Night Light Function

- Press the 'Lamp' button to activate the soft night light. This feature is useful for night feeding without disturbing your baby with bright room lights.

7. CLEANING AND MAINTENANCE

Regular Cleaning:

- Always unplug the appliance and allow it to cool completely before cleaning.
- Wash the bottle basket and lid with warm soapy water and rinse thoroughly. These parts are dishwasher safe.
- Wipe the exterior of the main unit with a damp cloth. Do not use abrasive cleaners or immerse the main unit in water.
- Empty any remaining water from the tank after each use.

Descaling:

Mineral deposits (limescale) can build up in the water tank over time, affecting performance. Descale the unit regularly (e.g., once a month or as needed).

1. Mix 50ml of white vinegar with 100ml of cold water.
2. Pour the mixture into the water tank.
3. Allow the mixture to soak for 30 minutes to 1 hour (do not turn on the appliance).
4. Pour out the mixture and rinse the tank thoroughly with clean water several times.
5. Wipe the heating plate with a damp cloth.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; Power outlet malfunction.	Ensure the power cord is securely plugged in. Test the outlet with another appliance.
Milk/Food not warming.	Insufficient water in tank; Incorrect mode selected; Incorrect temperature setting.	Add water to the tank. Select the correct mode. Adjust temperature setting.
Heating takes too long.	Too much water in tank; Limescale buildup.	Ensure water level is appropriate. Descale the unit as per cleaning instructions.

Problem	Possible Cause	Solution
Water leaks from the unit.	Overfilled water tank; Unit not placed on a flat surface.	Do not exceed the MAX water level. Place the unit on a stable, flat surface.

9. SPECIFICATIONS

- **Model Number:** 9600
- **Package Dimensions:** 9.24 x 8.56 x 7.36 inches
- **Item Weight:** 2.86 pounds
- **Material:** Food-grade PP safety material, BPA Free
- **Color:** White & Blue
- **Capacity:** 300 Milliliters (water tank)
- **Additional Features:** Baby Food Heating, Bottle High-Temperature Dry, Breast Milk Defrost, Fast Warming, Double Bottle Warmer, LCD Display, Night Light Function, Timer Reservation.
- **Dishwasher Safe Parts:** Bottle basket, lid.

10. WARRANTY AND SUPPORT

MOMYEASY products are designed for reliability and performance. For warranty information, technical support, or customer service inquiries, please refer to the contact details provided on the product packaging or visit the official MOMYEASY website. Keep your purchase receipt as proof of purchase for any warranty claims.