

Manuals.plus /

› Rollei /

› Rollei 5s/6s/7s/10s Plus Actioncam User Manual

## Rollei 5s/6s/7s/10s Plus

# Rollei 5s/6s/7s/10s Plus Actioncam User Manual

Comprehensive guide for setup, operation, and maintenance.

## INTRODUCTION

---

Welcome to the user manual for your Rollei 5s/6s/7s/10s Plus Actioncam. This manual provides essential information to help you get started, operate your camera effectively, maintain it, and troubleshoot common issues. Please read this manual thoroughly before using your action camera.

The Rollei Actioncam series is designed for capturing high-quality video and photos in various environments, from extreme sports to everyday adventures. Its robust design and intuitive interface make it an ideal companion for documenting your experiences.

## PACKAGE CONTENTS

---

Before proceeding, please verify that all items listed below are present in your package:

- Rollei 5s/6s/7s/10s Plus Actioncam Unit
- Waterproof Housing
- Rechargeable Battery
- USB Charging Cable
- Mounting Accessories (e.g., adhesive mounts, quick release buckle)
- User Manual (this document)

If any items are missing or damaged, please contact Rollei customer support immediately.

## SETUP

---

### 1. Charging the Battery

Before first use, fully charge the camera battery. Insert the battery into the camera. Connect the USB charging cable to the camera's USB port and the other end to a USB power adapter (not included) or a computer's USB port.

The charging indicator light will illuminate during charging and turn off when charging is complete. A full charge

typically takes approximately 2-3 hours.



Image: Rollei Actioncam connected to a USB cable, illustrating the charging process. The camera's screen shows a battery icon indicating charging status.

## 2. Inserting a MicroSD Card

The Rollei Actioncam requires a MicroSD card (Class 10 or higher, U3 recommended) for recording. Open the MicroSD card slot cover on the side of the camera. Insert the MicroSD card with the gold contacts facing down until it clicks into place.

To remove the card, gently push it in until it springs out.



Image: A hand demonstrating the insertion of a MicroSD card into the dedicated slot on the side of the Rollei Actioncam.

## 3. Powering On/Off

To power on the camera, press and hold the Power/Mode button for 3 seconds. The camera will beep and the screen will illuminate. To power off, press and hold the Power/Mode button again for 3 seconds.

## 4. Initial Settings

Upon first power-on, you may need to set the language, date, and time. Navigate through the menu using the Mode button and confirm selections with the Shutter/OK button.

# OPERATING THE CAMERA

---

## 1. Button Functions

- **Power/Mode Button:** Press and hold to power on/off. Short press to switch between video, photo, playback, and settings modes.
- **Shutter/OK Button:** Press to start/stop recording video, take a photo, or confirm a menu selection.
- **Up/Down Buttons (if applicable):** Navigate menu options or zoom in/out (depending on mode).

## 2. Video Recording

In video mode, press the Shutter/OK button once to begin recording. A red recording indicator will flash on the screen. Press the Shutter/OK button again to stop recording. The video file will be saved to the MicroSD card.



Image: The Rollei Actioncam's display showing the active video recording interface, including recording time and resolution settings.

## 3. Photo Capture

Switch to photo mode using the Mode button. Frame your shot and press the Shutter/OK button to take a picture. The photo will be saved to the MicroSD card.

## 4. Playback Mode

Enter playback mode to review your recorded videos and photos. Use the navigation buttons to scroll through files. Press Shutter/OK to play a video or view a photo in full screen.

## 5. Settings Menu

Access the settings menu to customize camera parameters such as video resolution, photo quality, white balance,

exposure, loop recording, time-lapse settings, and more. Refer to the on-screen prompts for specific options.

## MAINTENANCE

---

### 1. Cleaning the Camera

Wipe the camera body with a soft, damp cloth. For the lens, use a specialized lens cleaning cloth and solution. Avoid abrasive materials or harsh chemicals. Ensure the camera is dry before closing any ports or using it in wet conditions.

### 2. Battery Care

Store batteries in a cool, dry place. Do not expose them to extreme temperatures. If storing for extended periods, charge the battery to approximately 50% every few months to maintain battery health.

### 3. Waterproof Housing Care

After using the waterproof housing in saltwater, rinse it thoroughly with fresh water and allow it to air dry. Inspect the O-ring seal regularly for dirt, debris, or damage. Clean the O-ring and apply silicone grease if necessary to maintain its waterproof integrity.



Image: The Rollei Actioncam securely placed within its transparent waterproof housing, ready for underwater use.

## TROUBLESHOOTING

---

| Problem                                 | Possible Cause                                    | Solution   |
|---|---|--|
| Camera does not power on.               | Battery is depleted or not inserted correctly.    | Charge the battery. Ensure the battery is inserted with correct polarity.                          |
| Cannot record video/take photos.        | MicroSD card is full, corrupted, or not inserted. | Insert a MicroSD card. Format the card (this will erase all data). Use a Class 10 or higher card.  |
| Camera freezes or becomes unresponsive. | Software glitch or low battery.                   | Remove and reinsert the battery to reset. Ensure battery is charged. Update firmware if available. |
| Poor video/photo quality.               | Incorrect settings, dirty lens, or poor lighting. | Check resolution settings. Clean the lens. Ensure adequate lighting.                               |

If the problem persists after trying these solutions, please contact Rollei customer support.

## SPECIFICATIONS

---

*Note: Specifications are subject to change without prior notice.*

- **Video Resolution:** Up to 4K (3840x2160) at 30fps, 1080p at 60/30fps, 720p at 120/60fps
- **Photo Resolution:** Up to 16MP
- **Lens:** Wide-angle lens (e.g., 170-degree field of view)
- **Display:** 2.0-inch LCD screen
- **Storage:** MicroSD card, up to 128GB (Class 10/U3 recommended)
- **Battery:** Rechargeable Li-ion (e.g., 1050mAh)
- **Connectivity:** USB, Wi-Fi (for app control)

- **Waterproof:** Up to 30m (with waterproof housing)
- **Dimensions:** Approx. 59 x 41 x 29 mm
- **Weight:** Approx. 60g (without battery)

## WARRANTY AND SUPPORT

---

Rollei products come with a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging or visit the official Rollei website for detailed warranty terms and conditions specific to your region.

For technical support, service, or warranty claims, please contact Rollei customer service:

**Website:** [www.rollei.com/support](http://www.rollei.com/support)

**Email:** [support@rollei.com](mailto:support@rollei.com)

**Phone:** Please check the Rollei website for regional contact numbers.

When contacting support, please have your product model (Rollei 5s/6s/7s/10s Plus Actioncam) and proof of purchase ready.