

Tower T14028COP

Tower T14028COP Electric BBQ Grill Instruction Manual

Model: T14028COP | Brand: Tower

1. INTRODUCTION

Thank you for choosing the Tower T14028COP Copper Cerasure+ Indoor/Outdoor Electric BBQ Grill. This versatile appliance allows you to enjoy authentic barbeque-grilled meals both outdoors and indoors. Its innovative Cerasure ceramic copper plates ensure efficient cooking and easy cleaning. Please read this manual thoroughly before first use to ensure safe and optimal operation of your grill.



Image 1.1: The Tower T14028COP Electric BBQ Grill, showcasing its freestanding design and side tables.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.

- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors if rain is expected or during wet conditions.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

3. PRODUCT OVERVIEW & COMPONENTS

The Tower T14028COP Electric BBQ Grill is designed for convenience and performance. Key features include a Cerasure+ ceramic coating, precise temperature control, a non-stick grill plate, and a large cooking area.

2200W INDOOR/OUTDOOR ELECTRIC BBQ








-  Cersaure+ ceramic coating
-  Temperature Control
-  Non-stick grill plate
-  Large cooking area
-  2 in 1 BBQ

Image 3.1: Key features of the Tower Electric BBQ Grill.

Components:

- Main Grill Unit with Cersaure+ Grill Plate
- Adjustable Thermostat Control
- Drip Tray
- Freestanding Legs/Stand
- Side Tables (removable)
- Power Cord

4. ASSEMBLY INSTRUCTIONS

Your Tower Electric BBQ Grill requires some assembly before first use. Please follow these steps carefully:

1. Unpack all components from the packaging and ensure all parts are present.
2. Attach the freestanding legs to the main grill unit according to the diagrams provided in the packaging (if any). Ensure they are securely fastened.
3. Slide the drip tray into its designated slot beneath the grill plate.
4. Attach the side tables to the main grill unit, if desired. These are optional for use as a tabletop grill.
5. Ensure the grill plate is properly seated in the main unit.



Image 4.1: Assembled dimensions of the Tower Electric BBQ Grill.

Once assembled, place the grill on a stable, heat-resistant surface. Ensure adequate ventilation, especially when used indoors.

5. OPERATING YOUR GRILL

5.1 Pre-heating & Temperature Control

The grill features quick heat-up capabilities. Plug the appliance into a suitable power outlet. The indicator light will illuminate, signifying that the grill is heating. Use the adjustable temperature control knob to set your desired cooking temperature.



Image 5.1: Adjusting the temperature control for precise grilling results.

5.2 Cooking Guidelines

The large cooking area allows you to grill multiple items simultaneously, such as up to 8 chicken breasts. The ridged grill plate helps drain away excess fats and grease into the drip tray, promoting healthier cooking.

Large Cooking Area

Grills up to 8 chicken breasts at once



Image 5.2: The large cooking area of the grill, suitable for multiple food items.

5.3 Indoor/Outdoor Use (2-in-1 BBQ)

This grill offers the flexibility of being used as a freestanding outdoor BBQ or as a compact indoor tabletop grill. To convert for indoor use, simply remove the main grill unit from its stand and place it on a heat-resistant surface.

2-In-1 BBQ

Use outdoors as a BBQ or remove the grill and take indoors



Move Indoor



Image 5.3: The grill's versatile 2-in-1 design for outdoor and indoor use.

6. CLEANING & MAINTENANCE

Proper cleaning and maintenance will extend the life of your grill and ensure continued optimal performance. Always unplug the grill and allow it to cool completely before cleaning.

- **Grill Plate:** The Cerasure+ ceramic copper grill plate is non-stick, making cleaning effortless. It can be removed for easier washing. Wipe clean with a damp cloth or soft sponge and mild detergent. Avoid abrasive cleaners or scouring pads that could damage the non-stick coating.
- **Drip Tray:** The drip tray collects excess fats and juices. Remove and empty it after each use. Wash with warm soapy water.
- **Main Unit & Stand:** Wipe the exterior of the main unit and the stand with a damp cloth. Do not immerse the main unit in water.
- Ensure all parts are thoroughly dry before reassembling or storing the grill.

Non-Stick Grill Plate

Superior non-stick removable plates for healthier cooking and easier cleaning



Image 6.1: Cleaning the non-stick grill plate with ease.

7. TROUBLESHOOTING

If you encounter issues with your grill, please refer to the following table:

Problem	Possible Cause	Solution
Grill does not heat up.	Not plugged in; power outlet issue; thermostat not set.	Ensure power cord is securely plugged in. Check power outlet. Turn thermostat knob to a higher setting.
Food cooks unevenly.	Grill not fully pre-heated; temperature setting too low.	Allow grill to fully pre-heat until indicator light goes off (if applicable) or for at least 5-10 minutes. Increase temperature setting.

Problem	Possible Cause	Solution
Excessive smoke.	Accumulated grease/food residue; too much oil used.	Ensure grill plate and drip tray are clean before use. Use minimal oil as the Cerasure+ coating is non-stick.

8. TECHNICAL SPECIFICATIONS

Specification	Detail
Model Number	T14028COP
Product Dimensions	43.5 x 109 x 33.46 cm (L x W x H)
Weight	4.64 kg
Material	Alloy Steel
Finish Type	Non-Stick (Cerasure+ Ceramic Copper Coating)
Fuel Type	Electric
Special Features	Portable, Smokeless
Assembly Required	Yes

9. WARRANTY & CUSTOMER SUPPORT

Your Tower T14028COP Electric BBQ Grill comes with a 3-year guarantee, which includes a standard 1-year guarantee and a 2-year extension, subject to product registration online. Please refer to the product packaging or manufacturer's website for details on how to register your product.



Image 9.1: 3 Year Guarantee symbol.

Customer Support:

For technical assistance, warranty claims, or spare parts, please contact Tower customer support:

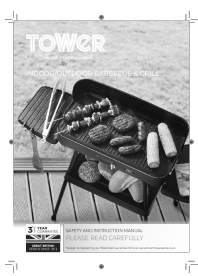
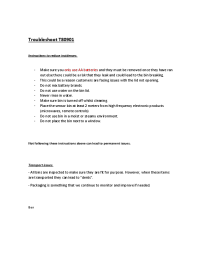


- **Website:** www.towerhousewares.co.uk

- **Email:** support@towerhousewares.co.uk
- **Phone:** Please check the Tower website for regional contact numbers.

Please have your model number (T14028COP) and proof of purchase ready when contacting customer support.

© 2023 Tower. All rights reserved.

Related Documents - T14028COP

	<p>Tower Indoor/Outdoor Barbecue & Grill T14028 User Manual</p> <p>Comprehensive safety and instruction manual for the Tower T14028 Indoor/Outdoor Barbecue & Grill. Learn about assembly, operation, cleaning, maintenance, troubleshooting, and warranty information.</p>
	<p>Troubleshooting Guide for Tower T80901 Sensor Bin</p> <p>This guide provides essential troubleshooting tips and maintenance advice for the Tower T80901 sensor bin to ensure optimal performance and longevity, covering common issues and preventative measures.</p>
	<p>Tower T17151 8 Litre Dual Basket Air Fryer User Manual</p> <p>Comprehensive user manual for the Tower T17151 8 Litre Dual Basket Air Fryer, covering safety information, operation, cooking functions (Smart & Match), troubleshooting, cleaning, and recipes. Learn how to use your dual zone air fryer efficiently.</p>
	<p>Tower T12001 Soup Maker: Safety, Instructions, and Recipes</p> <p>Comprehensive safety instructions, operating guide, troubleshooting tips, and recipes for the Tower T12001 Soup Maker. Learn how to use, clean, and maintain your appliance.</p>

Package contents/device parts

Package contents:

- 1 handle
- 1 shaft with 5
- 1 water activation cap
- 1 water activation tank
- 1 dirty water tank handle
- 1 Exhaust filter housing
- 1 dirty water tank
- 1 dirty water tank locking
- 1 water activation tank frame
- 1 carrying handle
- 1 exclusive water trigger
- 1 water cushion, 2x
- 1 water-rose pedal
- 1 overhead screw, 2x
- 1 cleaning solution
- 1 water sand
- 1 water candle

[Tower VC9389 Carpet Cleaner User Manual and Operating Guide](#)

Discover how to use, maintain, and troubleshoot your Tower VC9389 carpet cleaner with this comprehensive user manual. Includes safety, assembly, cleaning tips, and technical data.



Tower SmartStart Classic Aluminium Cookware Care and Use Manual

Comprehensive guide for the care and use of Tower SmartStart Classic Aluminium Cookware, including instructions, safety notes, and cleaning tips. Learn how to maintain your cookware for optimal performance and longevity.