

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Lovehoney](#) /

› [Lovehoney High Roller Remote Control Prostate Massager User Manual](#)

Lovehoney High Roller

Lovehoney High Roller Remote Control Prostate Massager User Manual

Model: High Roller

INTRODUCTION

This manual provides essential information for the safe and effective use of your Lovehoney High Roller Remote Control Prostate Massager. Please read these instructions thoroughly before first use and retain for future reference.

SAFETY INFORMATION

Important Safety Precautions:

- Always use with a good quality water-based anal lubricant.
- Never submerge the remote control in water. The main device is waterproof, but the remote is not.
- Charge the device using the provided USB cable only.
- Do not bend or twist the device excessively.
- Avoid contact with silicone-based lubricants, as these can damage the product's silicone material. Use only water-based lubricants.
- If you have a latex allergy, do not use this product.
- Always follow cleaning instructions to maintain hygiene and prevent infection.
- Discontinue use immediately if you experience any discomfort or pain.

PACKAGE CONTENTS

- Lovehoney High Roller Remote Control Prostate Massager
- Remote Control
- USB Charging Cable

SETUP

1. Charging the Device

Before first use, fully charge the prostate massager. Locate the charging port on the device. Connect the

provided USB charging cable to the device and plug the other end into a USB power source (e.g., computer, USB wall adapter). The indicator light will show charging status and turn solid when fully charged.



Image: The Lovehoney High Roller Prostate Massager being charged via its USB cable.

2. Remote Control Battery Installation

The remote control requires a button cell battery (included). Open the battery compartment on the back of the remote control and insert the battery, ensuring correct polarity. Close the compartment securely.

OPERATING INSTRUCTIONS

1. Powering On/Off the Device

- **To Wake/Unlock:** Double-press the power button on the massager itself. The device will briefly vibrate to indicate it is awake.
- **To Turn On:** Press and hold the power button on the massager until a light appears under the UKCA mark. The device will start vibrating.
- **To Turn Off:** Press and hold the power button on the massager until the device stops.
- **To Lock:** Double-press the power button again to return to locked mode, preventing accidental activation.

2. Using the Remote Control

Once the main device is powered on, the remote control can be used to operate it wirelessly. The remote allows for hands-free operation or partner control.

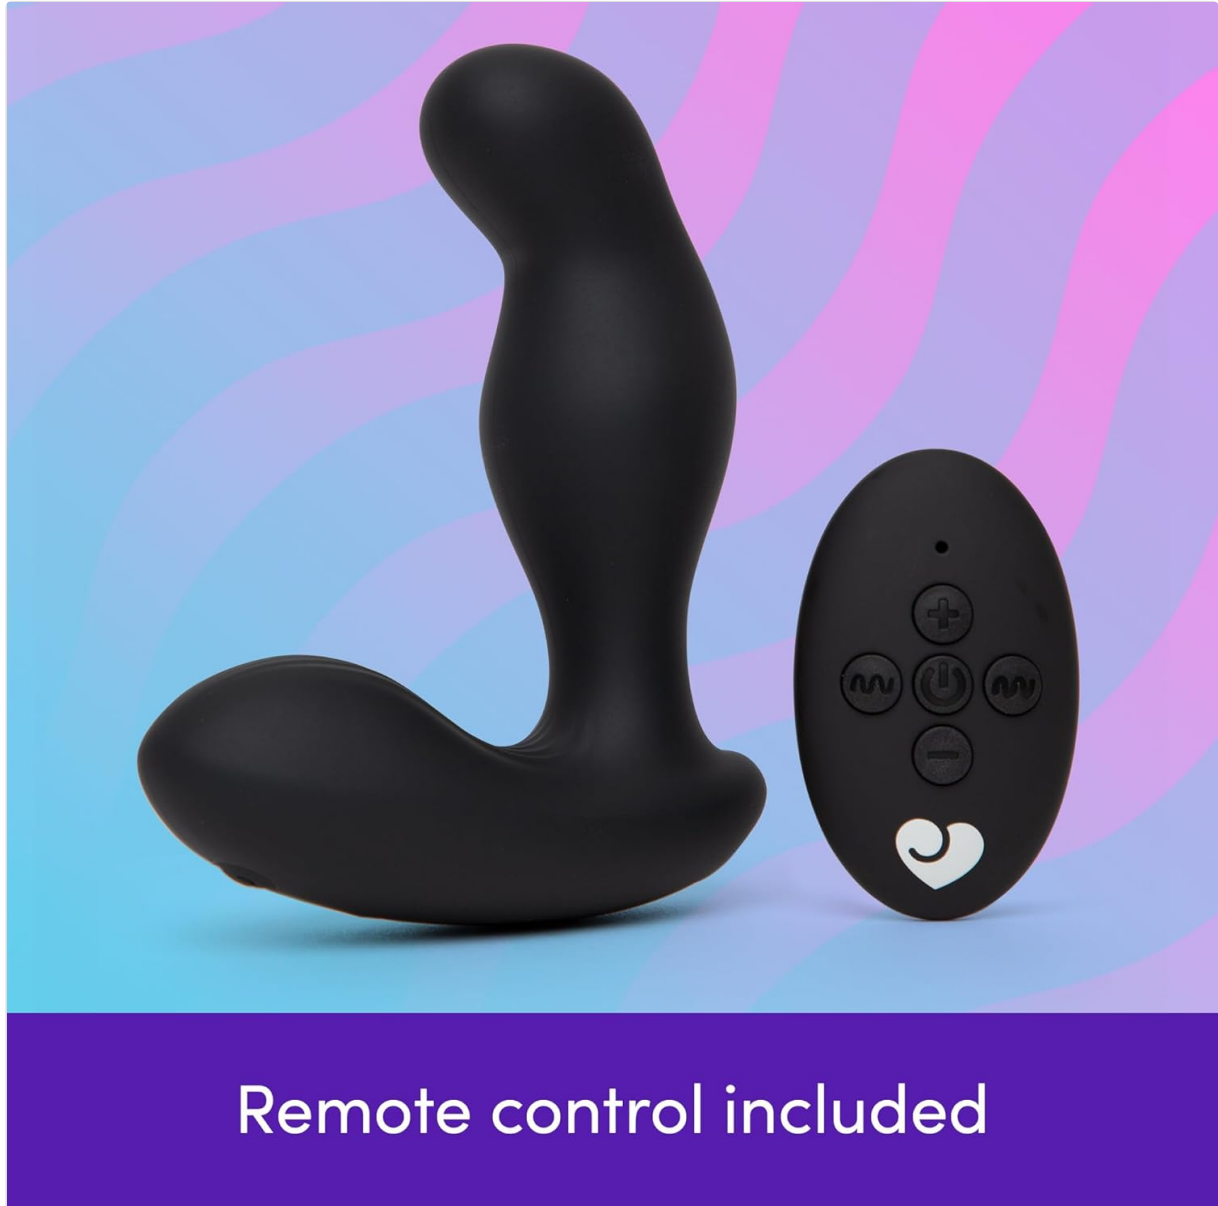


Image: The Lovehoney High Roller Prostate Massager shown alongside its remote control.

3. Modes and Speeds

The Lovehoney High Roller features 3 speeds and 7 patterns, offering a total of 10 different modes. Use the buttons on the device or remote to cycle through these settings and find your preferred intensity and pattern.

4. Application

Apply a generous amount of water-based lubricant to the device before insertion. The curved shaft and bulbous tip are designed for targeted prostate stimulation, while the flared base provides perineum massage.

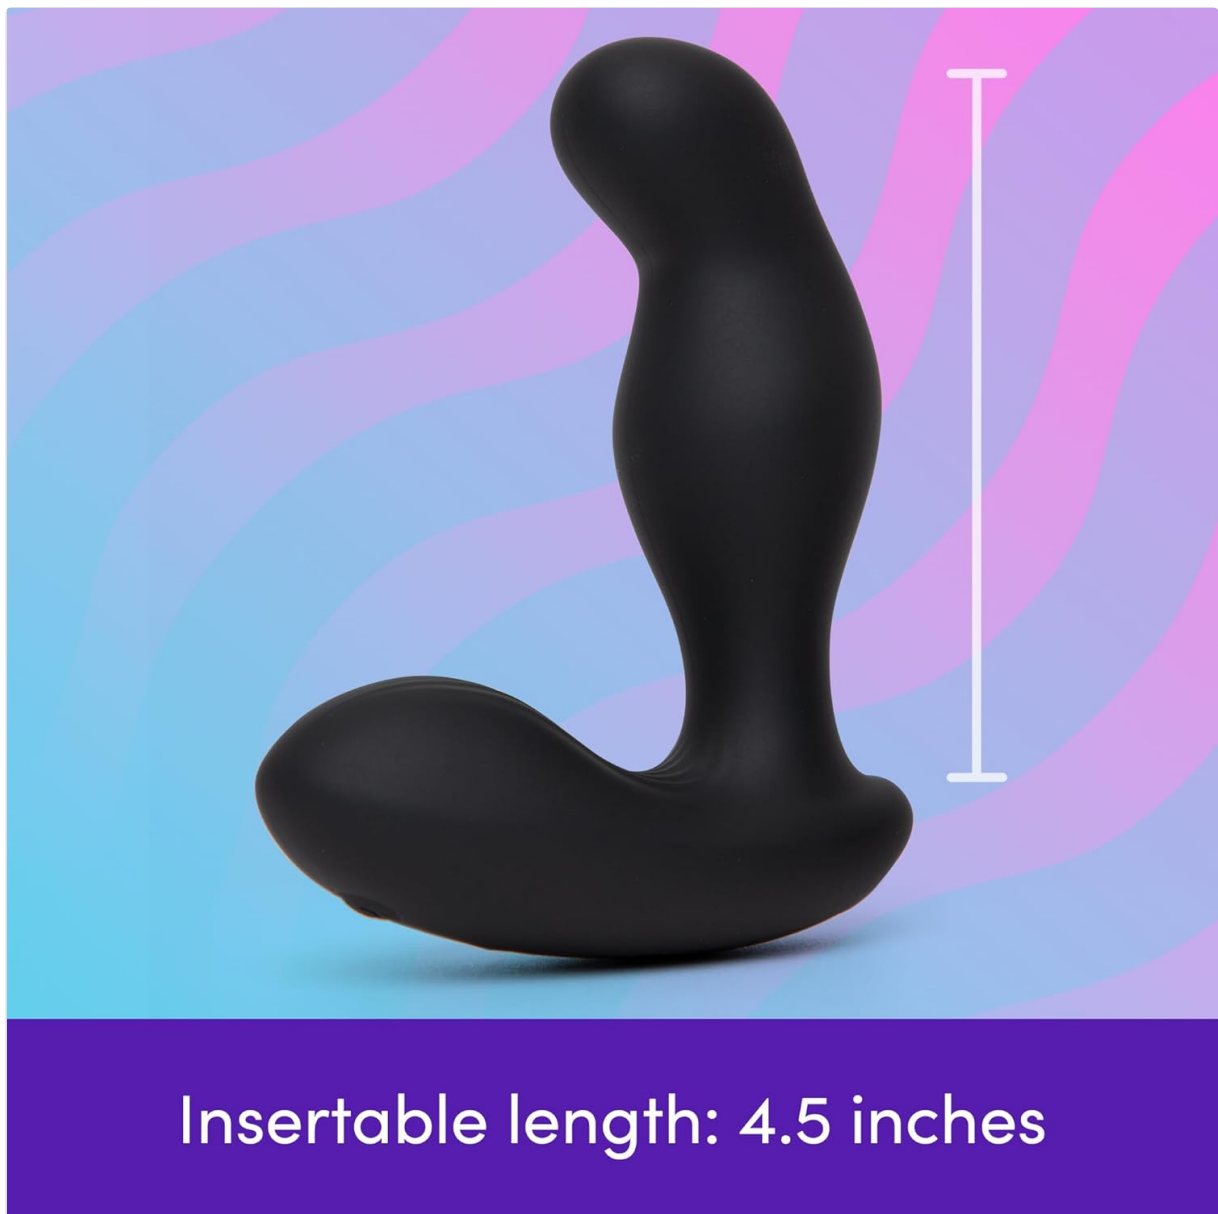


Image: The Lovehoney High Roller Prostate Massager, illustrating its 4.5-inch insertable length.

5. Product Video

Your browser does not support the video tag.

Video: An official Lovehoney demonstration of the High Roller Remote Control Prostate Massager, showcasing its features and operation.

MAINTENANCE

1. Cleaning

The prostate massager is 100% waterproof. Clean the device thoroughly before and after each use with warm water and a toy cleaner or mild soap. Rinse well and allow to air dry completely. Do not submerge the remote control.



Toy is 100% waterproof
(Note: remote is not)

Image: The Lovehoney High Roller Prostate Massager shown in water, highlighting its waterproof design.

2. Storage

Store the device and remote in a clean, dry place away from direct sunlight and extreme temperatures. Keep out of reach of children.

TROUBLESHOOTING

Device Not Turning On

- **Check Charge:** Ensure the device is fully charged. Connect it to the USB charging cable and allow sufficient time to charge.
- **Unlock Mode:** The device has a lock feature to prevent accidental activation. Double-press the power button on the massager to 'wake' or 'unlock' it. You should feel a brief vibration. Then, press and hold the power button to turn it on.
- **Remote Battery:** If using the remote, ensure its battery is correctly installed and not depleted.

SPECIFICATIONS

Feature	Detail
---------	--------

Product Dimensions	5.2 x 3.94 x 1.57 inches
Weight	7.05 ounces
Model Name	High Roller
Material	Silicone
Color	Black
Power Source	Rechargeable Lithium Ion batteries (2 included)
Waterproof	Yes (device only, remote is not)
Modes	10 (3 speeds & 7 patterns)

WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the packaging or contact Lovehoney directly through their official website or the retailer where the product was purchased. Keep your proof of purchase for any warranty claims.