

## RM-D626

# Generic Replacement Remote Control Instruction Manual

For Hitachi TV Models RM-D626, CLE-860A, CLE-865B, CLE-865A, CLE-866B, P6-P1, V2-U2, VS141, VM-102, RC-225

## 1. INTRODUCTION

---

This instruction manual provides comprehensive guidance for the setup, operation, maintenance, and troubleshooting of your new Generic replacement remote control. This remote is designed to be compatible with various Hitachi television models, offering a convenient and functional replacement for your original remote.

## 2. PRODUCT OVERVIEW

---

The Generic replacement remote control is engineered to replicate the functions of several Hitachi TV remote models, ensuring seamless integration with your television.

### 2.1 Compatible Models

- Hitachi RM-D626
- Hitachi CLE-860A
- Hitachi CLE-865B
- Hitachi CLE-865A
- Hitachi CLE-866B
- Hitachi P6-P1
- Hitachi V2-U2
- Hitachi VS141
- Hitachi VM-102
- Hitachi RC-225

### 2.2 Remote Control Layout

Familiarize yourself with the buttons and their corresponding functions on the remote control.



This image displays the front of the remote control, highlighting the power button, input selection, number pad, channel and volume controls, menu navigation, and special function buttons.



A detailed view of the remote control's front face, providing a clearer look at the button labels and layout, including the 'HUAYU RM-D626' branding.

## 3. SETUP

---

### 3.1 Battery Installation

Follow these steps to install batteries into your remote control:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards to open it.
3. Insert two 1.5V AA batteries, ensuring correct polarity (+ and -) as indicated inside the compartment.
4. Slide the battery cover back into place until it clicks securely.



This image illustrates the process of installing batteries. The back cover is removed, revealing the two AA battery slots with polarity indicators.



The rear side of the remote control, showing the ergonomic design and the battery compartment cover.

## 4. OPERATING INSTRUCTIONS

---

Once batteries are installed, the remote control is ready for use. Point the remote directly at your Hitachi TV.

### 4.1 Basic Functions

- **Power (Red Button):** Turns the television on or off.
- **Input (HDMI1, HDMI2, AV1-AV4, RGB):** Selects the desired video input source (e.g., DVD player, game console).
- **Number Pad (0-9):** Directly enters channel numbers for television viewing.
- **Channel Up/Down (CH+/CH-):** Navigates through television channels sequentially.
- **Volume Up/Down (VOL+/VOL-):** Adjusts the audio output level of the television.
- **Mute (Speaker with X):** Toggles the television sound on or off.
- **Menu:** Accesses the television's on-screen menu for settings and adjustments.
- **Navigation (Arrow Buttons & OK):** Used to move through menu options and confirm selections.

- **Exit/Return:** Exits current menus or returns to the previous screen.

## 4.2 Advanced Functions

- **S.MODE:** Selects various sound modes (e.g., Standard, Music, Movie).
- **P.MODE:** Selects various picture modes (e.g., Standard, Dynamic, Cinema).
- **SWIVEL:** If your TV supports it, this button may control a motorized swivel stand.
- **PHOTO:** Accesses the TV's photo viewer function, if available.
- **SEL:** A general select button, often used in conjunction with other functions or within specific menus.

## 5. MAINTENANCE

---

### 5.1 Cleaning

To clean your remote control, gently wipe the surface with a soft, dry cloth. Avoid using liquid cleaners, abrasive materials, or chemical solvents, as these can damage the remote's finish or internal components.

### 5.2 Battery Care

If the remote control will not be used for an extended period (e.g., one month or more), remove the batteries to prevent potential leakage, which can damage the remote. Replace old batteries promptly when the remote's performance diminishes.

## 6. TROUBLESHOOTING

---

If you encounter issues with your remote control, refer to the following table for common problems and solutions:

Issue	Possible Solution
Remote not responding.	<ul style="list-style-type: none"><li>• Check if batteries are installed with correct polarity.</li><li>• Replace old batteries with new ones.</li><li>• Ensure there are no obstructions between the remote control and the TV's infrared sensor.</li><li>• Confirm the remote is pointed directly at the TV.</li></ul>
Specific buttons not working.	<ul style="list-style-type: none"><li>• Clean the remote surface around the affected buttons to remove any dirt or debris.</li><li>• If the issue persists after cleaning and battery replacement, the remote may be faulty and require replacement.</li></ul>

## 7. SPECIFICATIONS

---

- **Brand:** Generic
- **Model:** RM-D626
- **Power Source:** Battery (2 x AA 1.5V)
- **Compatibility:** Designed for various Hitachi TV models (refer to Section 2.1 for a complete list).

## 8. IMPORTANT SAFETY INFORMATION

---

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Dispose of used batteries properly according to local regulations.
- Keep the remote control and batteries out of reach of small children to prevent choking hazards.
- Do not expose the remote control to direct sunlight, heat sources, or excessive moisture.