

Manuals.plus /

› VEGER /

› VEGER 30000mAh Portable Power Bank User Manual

## VEGER VEGER 30000mAh Power Bank

# VEGER 30000mAh Portable Power Bank User Manual

Model: VEGER 30000mAh Power Bank

## INTRODUCTION

Thank you for choosing the VEGER 30000mAh Portable Power Bank. This device is designed to provide reliable and fast charging for your electronic devices on the go. With its high capacity and multiple output ports, you can keep your smartphones, tablets, and other USB-powered devices charged throughout the day. Please read this manual carefully before using the product to ensure optimal performance and safety.

## PRODUCT OVERVIEW

The VEGER 30000mAh Portable Power Bank features a sleek design with an LED display for battery percentage, multiple output ports for simultaneous charging, and dual input options for convenient recharging.

### Key Features

- **High Capacity:** 30000mAh battery for extended power.
- **Fast Charging:** 3A output for quick device charging.
- **LED Display:** Digital screen shows precise battery percentage.
- **Multiple Outputs:** Three output ports (2x USB-A, 1x USB-C) to charge up to three devices simultaneously.
- **Dual Inputs:** Micro USB and USB-C input ports for recharging the power bank.
- **Universal Compatibility:** Compatible with a wide range of smartphones, tablets, and other USB-powered devices.
- **Slim Design:** Portable and easy to carry.

# Package Includes



This image shows the VEGER 30000mAh Portable Power Bank, a mesh carrying pouch, a USB charging cable, and a welcome guide/user manual.

- VEGER 30000mAh Portable Power Bank
- USB Charging Cable
- Mesh Carrying Pouch
- Welcome Guide / User Manual

## SETUP

### Initial Charge

Before first use, it is recommended to fully charge your VEGER Portable Power Bank. This ensures the battery is calibrated and ready for optimal performance.

1. Connect the provided USB charging cable to either the **Micro USB Input** or **USB-C Input** port on the power

bank.

2. Connect the other end of the cable to a USB wall charger (not included) or a computer's USB port. For faster charging, use a 5V/2A or higher output wall charger.
3. The LED display will show the charging percentage. The numbers will flash during charging and become solid 100 when fully charged.

## Recharging in 2 Ways



This image illustrates the two ways to recharge the power bank: via the Micro USB input or the USB-C input port.

### OPERATING INSTRUCTIONS

## Charging Your Devices

The VEGER Portable Power Bank can charge up to three devices simultaneously.

1. Identify the appropriate charging cable for your device (e.g., USB-A to Lightning, USB-A to USB-C, USB-C to USB-C).
2. Connect one end of your device's charging cable to one of the power bank's output ports **Output 1**, **Output 2**, or **USB-C Output**).
3. Connect the other end of the cable to your device.
4. The power bank will automatically begin charging your device. The LED display will show the remaining battery percentage of the power bank.

# Charge 3 Devices at the same time



This image demonstrates the power bank's ability to charge three devices at once, including a smartphone, another smartphone, and a tablet.

The 30000mAh capacity provides multiple charges for various devices:

# Charge times



This image illustrates the approximate number of full charges the 30000mAh power bank can provide for different devices, such as iPads, Samsung phones, and iPhones.

## Checking Battery Level

The integrated LED display shows the exact percentage of remaining battery power. Simply press the power button once to activate the display.



A close-up view of the power bank's LED digital display, showing a full charge of 100%.

## MAINTENANCE AND CARE

- **Storage:** Store the power bank in a cool, dry place away from direct sunlight and extreme temperatures.
- **Cleaning:** Use a soft, dry cloth to clean the surface of the power bank. Do not use harsh chemicals or abrasive materials.
- **Charging Cycle:** To prolong battery life, fully charge and discharge the power bank at least once every three months if not in regular use.
- **Avoid Drops:** Protect the power bank from drops, impacts, and excessive vibrations.
- **Water Exposure:** Keep the power bank away from water and high humidity.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Power bank not charging devices.	Low battery on power bank; faulty cable; device not compatible; power bank in standby mode.	Recharge the power bank; try a different charging cable; ensure device is compatible; press the power button to activate output.
Power bank not recharging.	Faulty input cable; charger not providing enough power; damaged input port.	Try a different charging cable and wall adapter; ensure wall adapter is 5V/2A or higher; contact support if port is damaged.
LED display not working.	Power bank completely discharged; internal fault.	Attempt to charge the power bank for several hours; if still unresponsive, contact customer support.
Slow charging.	Cable resistance; device input limit; multiple devices charging.	Use a high-quality, shorter cable; check your device's charging specifications; charge fewer devices simultaneously for faster charging.

## SPECIFICATIONS

Feature	Detail
Model	VEGER 30000mAh Power Bank
Battery Capacity	30000 Milliamp Hours (mAh)
Input Ports	Micro USB, USB Type C
Output Ports	2x USB-A, 1x USB Type C
Voltage	5 Volts
Special Features	Fast Charging, Portable Charger, LED Display
Product Dimensions	6.73 x 2.81 x 0.98 inches
Item Weight	1.28 pounds



This image provides a visual representation of the power bank's dimensions, highlighting its slim profile.

## WARRANTY AND SUPPORT

---

VEGER products come with a standard manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions. For technical support, troubleshooting assistance, or warranty claims, please contact VEGER customer service through the retailer's platform or the official VEGER website.

### **Contact Information:**

- **Online Support:** Visit the official VEGER website for FAQs and support resources.
- **Email:** Refer to your product packaging or welcome guide for customer service email.