

LELO Smart Wand 2 Medium

LELO Smart Wand 2 Medium Personal Wand Massager Instruction Manual

Model: Smart Wand 2 Medium (8380)

INTRODUCTION

The LELO Smart Wand 2 Medium is a versatile personal wand massager designed for muscle relaxation and tension release. This device features an updated design, ten massage patterns, and is suitable for all-over body use. It is waterproof and rechargeable, offering extended use and convenience.



Image: The LELO Smart Wand 2 Medium in Ocean Blue, presented alongside its elegant product packaging.

WHAT'S IN THE BOX

Upon opening your LELO Smart Wand 2 Medium package, you should find the following items:

SMART WAND™ 2 Medium
all-over body massager



WARRANTY CARD
verifies product authenticity

MANUAL
how to use guide



MOISTURIZER SACHET
water-based lubricant
5 ml / 0.17 fl. oz.



CHARGING CORD
USB cable



SATIN POUCH
for storage

Image: A visual representation of all items included in the LELO Smart Wand 2 Medium package: the massager, user manual, a sachet of water-based lubricant, a USB charging cable, a warranty card, and a satin storage pouch.

- LELO Smart Wand 2 Medium all-over body massager
- User Manual
- Moisturizer Sachet (5 ml / 0.17 fl. oz. water-based lubricant)
- USB Charging Cable
- Warranty Card
- Satin Pouch for storage

FEATURES

The LELO Smart Wand 2 Medium incorporates several design and functional enhancements for an optimal experience:



Image: A detailed diagram illustrating the key features of the LELO Smart Wand 2 Medium, including its extra-soft silicone material, 10 powerful modes, medium size for ease of use, cordless design, steadier handle for control, and suitability for all-over body massage.

- **Extra-Soft Silicone:** Body-safe and smooth for comfortable use.
- **10 Powerful Modes:** Offers a range of vibration patterns for deep relaxation.
- **Medium Size:** Designed for easier handling and versatile application.
- **Cordless and Hassle-Free:** Provides freedom of movement during use.
- **Steadier Handle:** Ensures stable and reliable control over intensities.
- **All-Over Body Massage:** Suitable for various areas to release tension.

Features



INCREDIBLE POWER

releases stress and relaxes your muscles



10 SETTINGS

from a teasing murmur to a satisfying pulse



WATERPROOF DESIGN

perfect for the bath and shower



EXTRA LONG-LASTING CHARGE

longer time for pleasure



GLOBAL BESTSELLER

loved by millions



UPGRADED INTERFACE

design that's simple to use



Image: A graphic listing additional features of the LELO Smart Wand 2 Medium, such as its incredible power for muscle relaxation, 10 distinct vibration settings, waterproof design for bath and shower use, extra long-lasting charge, status as a global bestseller, and an upgraded, simple-to-use interface.

- **Incredible Power:** Releases stress and relaxes muscles with 30% more concentrated power.
- **10 Settings:** From gentle murmurs to satisfying pulses.
- **Waterproof Design:** Fully waterproof for use in the bath or shower.
- **Extra Long-Lasting Charge:** Enjoy hours of use with a longer battery life.
- **Upgraded Interface:** Simple and intuitive design for ease of use.

SETUP

Initial Charging

Before first use, fully charge your LELO Smart Wand 2 Medium for 2 hours. Connect the provided USB charging cable to the device and a compatible USB power source.

Unlocking the Device

The device is shipped in a locked state. To unlock it, press and hold the **+** and **-** buttons simultaneously for 3 seconds until the light turns on.

OPERATING INSTRUCTIONS

Follow these steps to operate your LELO Smart Wand 2 Medium:

How to use

BEFORE FIRST USE

charge your device for 2 hours

TO TURN IT ON

press and hold the **+** button

THE LED LIGHTS WILL BLINK

to indicate the battery level

TO SWITCH BETWEEN 10 SETTINGS

press the **()** button

TO DECREASE OR INCREASE THE INTENSITY

use the **-** button

TO TURN IT OFF

press and hold the **()** button



Image: A visual guide detailing how to use the LELO Smart Wand 2 Medium, covering initial charging, how to turn it on, how LED lights indicate battery level, how to switch between 10 settings, how to decrease or increase intensity, and how to turn it off.

1. **To Turn On:** Press and hold the **+** button.
2. **Increase Vibration Strength:** Press the **+** button again.
3. **Switch Vibration Patterns:** Press the **()** button to cycle through the 10 available patterns.
4. **Decrease Vibration Strength:** Press the **-** button.
5. **To Turn Off:** Press and hold the **()** button.

The LED lights will blink to indicate the battery level when the device is turned on.

MAINTENANCE

Proper maintenance ensures the longevity and hygiene of your LELO Smart Wand 2 Medium:

- **Cleaning:** Always clean the device thoroughly before and after each use. Use LELO Premium Cleaning Spray for best results. If the spray is not available, wash the device with lukewarm water and mild soap.
- **Drying:** Pat dry with a lint-free cloth or towel.
- **Storage:** Store the device in its satin pouch in a cool, dry place, away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

If you encounter any issues with your LELO Smart Wand 2 Medium, please refer to the following common solutions:

Problem	Possible Solution
Device does not turn on.	Ensure the device is fully charged. Unlock the device by pressing and holding the + and - buttons simultaneously for 3 seconds.
Vibrations feel weak or inconsistent.	Ensure the device is fully charged. This device is designed as a 'rumbling' type massager, which provides deep, powerful vibrations rather than a high-frequency 'buzzing' sensation. Confirm you are cycling through all 10 patterns to find your preferred intensity.
Device does not charge.	Check that the USB charging cable is securely connected to both the device and a working USB power source. Try a different USB port or adapter.
Buttons are unresponsive.	Ensure the device is unlocked. If locked, press and hold + and - simultaneously for 3 seconds.

SPECIFICATIONS

Feature	Detail
Brand	LELO
Model Name	SMART WAND 2 Medium
Item Model Number	8380
Color	Ocean Blue
Material	Silicone
Product Dimensions	8.27 x 3.35 x 1.77 inches
Weight	5.47 ounces
Batteries	1 Lithium Polymer battery (included)
Bulb Voltage	110 volts (for charging adapter, not device operation)

Feature	Detail
Waterproof	Yes

WARRANTY AND SUPPORT

Your LELO Smart Wand 2 Medium is backed by comprehensive support and warranty:

- **Warranty:** The LELO Smart Wand 2 comes with a 1-year LELO warranty.
- **Quality Guarantee:** LELO also provides a 10-year quality guarantee, ensuring long-term product reliability.
- **Customer Support:** For any further questions, technical assistance, or warranty claims, please contact LELO customer support through their official website or the retailer where the product was purchased.

© 2025 LELO. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question