

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [ARCADE1UP](#) /

› [Arcade1Up X-Men 4-Player Arcade Machine with Riser and Stool Instruction Manual](#)

**ARCADE1UP 195570001950**

# Arcade1Up X-Men 4-Player Arcade Machine with Riser and Stool Instruction Manual

Model: 195570001950

## 1. INTRODUCTION

This manual provides essential information for the setup, operation, and maintenance of your Arcade1Up X-Men 4-Player Arcade Machine. Please read these instructions carefully before assembly and use to ensure proper functionality and safety.

The Arcade1Up X-Men machine brings classic arcade action to your home, featuring three iconic Marvel games: **X-Men**, **Captain America** and **The Avengers**, and **Avengers in Galactic Storm**. It supports up to four players simultaneously and includes Live WIFI for online play.



*Image 1.1: The Arcade1Up X-Men 4-Player Arcade Machine, showcasing its vibrant X-Men artwork, control panel, and included riser and stool.*

## 2. SAFETY INFORMATION

Please observe the following safety guidelines:

- Keep the machine away from water or excessive moisture.
- Ensure the machine is placed on a stable, level surface.
- Do not attempt to open or modify the internal components. Refer to qualified service personnel for repairs.
- Use only the provided power adapter.
- Supervise children during play.

## 3. WHAT'S IN THE Box

Your Arcade1Up X-Men package includes:

- Arcade Game Machine

- Custom Arcade Game Riser
- Adjustable Stool
- Light-Up Marquee

## 4. SETUP

### 4.1 Assembly

The Arcade1Up X-Men machine requires assembly. Follow the detailed instructions provided in the separate assembly guide included with your product. It is recommended to use hand tools for assembly to prevent damage to components. The assembled machine, including the custom 13-inch riser, stands approximately 5 feet tall.

### 4.2 Power Connection

Once assembled, plug the machine into a standard AC outlet. Ensure the power switch is in the 'OFF' position before connecting to power.



*Image 4.1: Front view of the Arcade1Up X-Men machine with its custom riser, ready for play.*

## 5. OPERATING INSTRUCTIONS

---

### 5.1 Powering On/Off

Locate the power switch on the control panel. Flip the switch to the 'ON' position to power on the machine. To power off, flip the switch back to 'OFF'.

### 5.2 Game Selection

The machine includes three games: **X-Men**, **Captain America** and **The Avengers**, and **Avengers in Galactic Storm**. Use the joysticks to navigate the game selection menu on the screen. Press the designated 'Attack' or 'Jump' button (typically Player 1's primary action button) to select a game.

### 5.3 Controls

The Arcade1Up X-Men machine features a 4-player control panel with real-feel joysticks and buttons. Each player has dedicated controls for movement, attack, jump, and mutant power.

- **Joystick:** Controls character movement.
- **Attack Button:** Performs standard attacks.
- **Jump Button:** Makes your character jump.
- **Mutant Power Button:** Activates special mutant abilities.



Image 5.1: Close-up view of the 4-player control panel with joysticks and action buttons for X-Men, Captain America, and Avengers games.

## 5.4 Volume Control

Adjust the game volume using the dedicated volume control buttons located on the control panel. Press '+' to increase volume and '-' to decrease volume.

## 5.5 Live WIFI Features

This machine is equipped with Live WIFI, allowing you to connect with other Arcade1Up players online. Follow the on-screen prompts to set up your internet connection and access online features such as leaderboards and multiplayer matches.

## 6. MAINTENANCE

### 6.1 Cleaning

To clean the machine, use a soft, dry cloth. For stubborn marks, a slightly damp cloth with mild soap can be used, followed by immediate drying. Avoid abrasive cleaners or solvents that may damage the artwork or screen.

## 6.2 General Care

Periodically check all connections and screws to ensure they are secure. Keep the machine in a cool, dry environment away from direct sunlight to prevent fading of artwork and damage to electronic components.

## 7. TROUBLESHOOTING

- **No Power:** Ensure the power cord is securely plugged into both the machine and a working AC outlet. Check the power switch position.
- **No Sound:** Verify the volume control is not set to minimum or muted. Check any headphone connections if applicable.
- **Controls Unresponsive:** Restart the machine. If the issue persists, ensure all internal connections are secure (refer to assembly guide if comfortable checking).
- **Online Connectivity Issues:** Check your home Wi-Fi network connection. Ensure the machine is within range of your router.

For persistent issues not covered here, please contact Arcade1Up customer support.

## 8. SPECIFICATIONS

Feature	Detail
Brand	ARCADE1UP
Model Number	195570001950
Product Dimensions (with Riser)	58.50 H x 24.50 D x 31.50 W inches
Item Weight	104 pounds
Screen Type	17-inch Color LCD
Games Included	X-Men, Captain America and The Avengers, Avengers in Galactic Storm
Player Support	Up to 4 simultaneous players
Connectivity	Live WIFI
Power Source	AC Outlet

## 9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your product or visit the official Arcade1Up website. The manufacturer is Arcade 1Up.

