



Manuals.plus /

- › ETONIMERR /
- › ETONIMERR Brushed Gold Wall Sconce Instruction Manual

ETONIMERR 5cb8461f-a176-4d54-ac8d-86a2ed4f31a9

ETONIMERR Brushed Gold Wall Sconce Instruction Manual

Model: 5cb8461f-a176-4d54-ac8d-86a2ed4f31a9

1. INTRODUCTION

Thank you for purchasing the ETONIMERR Brushed Gold Wall Sconce. This manual provides essential information for the safe installation, operation, and maintenance of your new lighting fixture. Please read these instructions thoroughly before beginning installation and retain them for future reference.

This wall sconce features a brushed gold finish and a clear glass shade, designed for indoor use. It is compatible with E26 bulbs (not included) and supports dimmable functionality with a compatible dimmer switch.

2. SAFETY INFORMATION

WARNING: Risk of Electric Shock. Disconnect power at the fuse box or circuit breaker before installation or servicing.

- Ensure the electrical supply is turned off at the main circuit breaker before installation.
- All electrical connections must be in accordance with local codes, ordinances, or the National Electric Code (NEC).
- If you are not familiar with electrical wiring, consult a qualified electrician.
- Use only E26 base bulbs, maximum 60W.
- Do not exceed the maximum wattage specified.
- Handle glass components with care to prevent breakage.
- This fixture is designed for indoor use only.

3. PACKAGE CONTENTS

Verify that all components are present before beginning installation.

- Wall Sconce Fixture (Brushed Gold)
- Clear Glass Shade

- Mounting Hardware (screws, wire nuts, mounting plate)
- Instruction Manual



Image: All components included in the package.

4. SPECIFICATIONS

Brand	ETONIMERR
Model Number	5cb8461f-a176-4d54-ac8d-86a2ed4f31a9
Dimensions (L x W x H)	7.4" x 4.7" x 10.2"
Material	Glass, Metal
Finish Type	Brushed Gold
Shade Material	Clear Glass
Bulb Base	E26
Max Wattage	60 Watts
Voltage	110 Volts
Light Source Type	Incandescent, LED, CFL, Halogen (E26)
Special Features	Adjustable, Anti-Rust, Dimmable (with compatible bulb/switch)
Indoor/Outdoor Usage	Indoor
Item Weight	1.76 Pounds (0.8 Kilograms)



Image: Product dimensions diagram.

5. INSTALLATION INSTRUCTIONS

Before you begin, ensure the power is turned off at the circuit breaker. It is recommended to have a second person assist with installation.

Tools Required (Not Included):

- Phillips head screwdriver
- Flathead screwdriver
- Wire strippers
- Electrical tape
- Safety glasses

Installation Steps:

1. **Prepare the Mounting Surface:** Turn off the power at the main circuit breaker. Remove the existing fixture (if any) and its mounting plate.
2. **Attach the Mounting Plate:** Secure the provided mounting plate to the junction box using the screws from your junction box. Ensure the plate is firmly attached.



Image: Detail of the round base mount.

3. Make Electrical Connections:

- Connect the **black** wire from the fixture to the **black** (live) wire from the junction box using a wire nut.
- Connect the **white** wire from the fixture to the **white** (neutral) wire from the junction box using a wire nut.
- Connect the **ground** wire from the fixture to the **ground** wire from the junction box (usually bare copper or green) using a wire nut.

Ensure all connections are secure and covered with electrical tape if necessary.



Image: Electrical wire connection using wire nuts.

4. **Mount the Fixture:** Carefully tuck the wires into the junction box. Align the fixture base with the mounting plate and secure it with the provided screws.



Image: Mounted wall sconce.

5. **Install the Bulb:** Screw an E26 base bulb (not included, max 60W) into the socket.



Image: Installing the glass shade.

6. **Attach the Glass Shade:** Carefully place the clear glass shade over the bulb and secure it according to the fixture design (usually by screwing a retaining ring or similar mechanism).
7. **Restore Power:** Turn the power back on at the circuit breaker. Test the light fixture.

The fixture can be installed with the glass shade facing either upwards or downwards, depending on your preference and the desired lighting effect.



Image: Installation flexibility (up or down orientation).

6. OPERATION

Once installed, the ETONIMERR Wall Sconce operates like any standard wall-mounted light fixture. Control is typically via a wall switch connected to the fixture's circuit.

Dimmable Functionality:

This fixture is dimmable. To utilize this feature, you must use a dimmable E26 bulb and a compatible dimmer switch (both sold separately). Follow the manufacturer's instructions for the dimmer switch and bulb for proper operation.

Your browser does not support the video tag.

Video: Demonstration of the ETONIMERR Brushed Gold Wall Sconce in various room settings, including living room, dining room, bathroom, hallway, stairway, and bedroom, showcasing its versatility and aesthetic appeal.

7. MAINTENANCE

Cleaning:

- Always disconnect power before cleaning.
- Wipe the fixture with a soft, dry cloth.
- Do not use abrasive cleaners, solvents, or polishes as they may damage the finish.
- The glass shade can be removed and washed with mild soap and water, then dried thoroughly before reinstallation.

Bulb Replacement:

- Ensure the power is off and the bulb has cooled completely before attempting to replace it.
- Carefully unscrew the old bulb from the E26 socket.
- Screw in a new E26 bulb (max 60W).
- Restore power and test the new bulb.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Light does not turn on.	No power to the fixture. Loose wire connections. Faulty bulb.	Check circuit breaker and wall switch. Turn off power, check all wire connections. Replace bulb with a known good one.
Light flickers.	Loose bulb. Incorrect bulb type for dimmer. Loose wire connections.	Tighten bulb. Ensure dimmable bulb is used with dimmer switch. Turn off power, check all wire connections.
Glass shade is damaged.	Shipping damage or accidental breakage.	Contact ETONIMERR customer support for a free replacement glass shade. (Refer to warranty section for contact details).

9. WARRANTY AND SUPPORT

ETONIMERR is committed to providing high-quality products. If you encounter any issues or have questions regarding your wall sconce, please contact our customer support.

For damaged glass shades, ETONIMERR offers free replacement. To request a replacement, log in to your purchase account, locate your order ID, and click "Contact Seller."

Additional protection plans may be available for purchase through your retailer. Please refer to your purchase documentation for details on extended warranties.

