

[manuals.plus](#) /

› [Imetec](#) /

› [Imetec Eco Rapid Electric Heater 2000W Instruction Manual](#)

Imetec 4034

Imetec Eco Rapid Electric Heater 2000W

Model: 4034 - Instruction Manual

1. INTRODUCTION

Thank you for choosing the Imetec Eco Rapid Electric Heater 2000W. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new heater. Please read this manual thoroughly before first use and keep it for future reference.



Figure 1.1: Imetec Eco Rapid Electric Heater and its packaging. This image shows the heater in its original box, highlighting its compact design and the brand logo.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons.

- Read all instructions before using this heater.
- Do not use this heater outdoors.
- This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces.
- Always unplug the heater when not in use.
- Do not operate any heater with a damaged cord or plug, or after the heater malfunctions or has been dropped or damaged in any manner.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
- To disconnect heater, turn controls to OFF, then remove plug from outlet.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an

electric shock or fire, or damage the heater.

- To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
- A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.
- Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
- Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).



Figure 2.1: Safety System Icon. This icon represents the integrated safety features designed to protect users during operation.

3. PACKAGE CONTENTS

Carefully unpack your Imetec Eco Rapid Electric Heater and check that all items are present and in good condition. If any items are missing or damaged, contact customer support.

- Imetec Eco Rapid Electric Heater (Model 4034)
- Instruction Manual

4. PRODUCT OVERVIEW

Familiarize yourself with the components of your Imetec Eco Rapid Electric Heater.



Figure 4.1: Front view of the Imetec Eco Rapid Electric Heater. This image displays the main body, air vents, and control panel on the side.

Control Panel (Refer to Figure 4.2)



4 niveaux de température réglables

Figure 4.2: Close-up of the control panel. This image shows the two rotary knobs and the indicator light.

1. **Power/Mode Selector Knob:** Used to turn the heater ON/OFF and select heating modes.
2. **Thermostat Control Knob:** Used to set the desired room temperature.
3. **Power Indicator Light:** Illuminates when the heater is operating.
4. **Air Vents:** Located on the front and top for heat emission.

5. SETUP

Follow these steps to set up your heater for first use.

1. **Placement:** Place the heater on a firm, level surface. Ensure it is at least 1 meter (3 feet) away from walls, furniture, curtains, and other flammable materials. Do not place it directly under a power outlet.
2. **Power Connection:** Ensure the heater is switched OFF (Power/Mode Selector Knob set to '0'). Plug the power cord into a suitable 230V AC wall outlet. Do not use extension cords or power strips.

6. OPERATING INSTRUCTIONS

Your Imetec Eco Rapid Electric Heater offers multiple temperature settings and a thermostat for optimal

comfort.

6.1 Powering On and Selecting Mode

1. Turn the **Power/Mode Selector Knob** to one of the following settings:
 - **Setting 1 (Low Heat):** Approximately 1200W for gentle heating.
 - **Setting 2 (High Heat):** Approximately 2000W for rapid heating.
 - **Setting 3 (Fan Only):** Circulates air without heat.
 - **Setting 4 (Turbo Ventilation):** Provides rapid heat distribution.
2. The Power Indicator Light will illuminate, indicating the heater is active.



Figure 6.1: Heater with icons indicating ultra-rapid heating and turbo ventilation. These features contribute to quickly reaching the desired temperature.



Figure 6.2: Turbo Ventilation Icon. This indicates the heater's ability to quickly circulate warm air.

6.2 Setting the Thermostat

1. Once a heating mode is selected, turn the **Thermostat Control Knob** clockwise to the maximum setting.
2. When the room reaches your desired temperature, slowly turn the Thermostat Control Knob counter-clockwise until you hear a "click" and the Power Indicator Light turns off.
3. The heater will now automatically maintain this temperature, cycling ON and OFF as needed.



Figure 6.3: Thermostat Icon. This symbol represents the heater's adjustable thermostat function.



Figure 6.4: Four Temperature Levels Icon. This indicates the heater offers multiple heat settings for user preference.

6.3 Energy Saving Operation

The Imetec Eco Rapid heater is designed with low energy consumption technology.



Consommation d'énergie
réduite à 40 %

Figure 6.5: Heater with a "Low Consumption" icon. This highlights the product's energy-efficient design, potentially reducing energy usage by up to 40%.



Figure 6.6: Energy Consumption Reduction Icon. This graphic indicates a significant reduction in energy usage, up to 40%.

6.4 Shutting Down

To turn off the heater, rotate the **Power/Mode Selector Knob** to the '0' (OFF) position. Unplug the heater from the wall outlet when not in use for extended periods.

7. MAINTENANCE

Regular cleaning and proper care will ensure the longevity and efficient operation of your heater.

7.1 Cleaning

1. Always unplug the heater and allow it to cool completely before cleaning.

2. Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.
3. Use a vacuum cleaner with a brush attachment to gently remove dust from the air intake and exhaust vents.
4. Never immerse the heater in water or allow water to drip into the interior.

7.2 Storage

When storing the heater, keep it in a cool, dry place, preferably in its original packaging, to protect it from dust and damage.

8. TROUBLESHOOTING

If you experience issues with your heater, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Heater does not turn on.	No power, plug not fully inserted, power switch OFF, thermostat set too low.	Check power outlet, ensure plug is secure, turn Power/Mode Selector to a heat setting, adjust thermostat higher.
Heater produces no heat.	Fan-only mode selected, thermostat set too low.	Select a heat mode (Setting 1 or 2), increase thermostat setting.
Heater cycles ON and OFF too frequently.	Thermostat set too close to room temperature, heater overheating.	Adjust thermostat slightly higher or lower. Ensure vents are not blocked.
Unusual noise or smell.	Dust accumulation, new unit smell, internal malfunction.	Clean vents. New unit smell is normal for first few uses. If persistent or strong, unplug and contact support.

If the problem persists after trying these solutions, please contact Imetec customer support.

9. SPECIFICATIONS

Technical details for the Imetec Eco Rapid Electric Heater Model 4034.

- **Brand:** Imetec (Bellissima)
- **Model Number:** 4034
- **Power:** 2000 Watts (Max)
- **Voltage:** 230 Volts
- **Dimensions (L x W x H):** 69.5 x 18 x 43 cm (27.4 x 7.1 x 16.9 inches)
- **Weight:** 4 Kilograms (8.8 lbs)
- **Number of Speed Settings:** 4 (including fan only)
- **Special Features:** Silent operation, Low energy consumption technology, Thermostat, Turbo ventilation
- **Heating Element Type:** Ceramic
- **Form Factor:** Pedestal (Floor-standing)
- **Indoor/Outdoor Use:** Indoor



Figure 9.1: Silent Operation Icon. This graphic indicates the heater's quiet performance during use.

10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or visit the official Imetec website. Keep your proof of purchase for any warranty claims.

Online Support: www.imetec.com