

Manuals.plus /

› Bosch /

› Bosch MUMS2VM00 Series 2 Kitchen Machine User Manual

Bosch MUMS2VM00

Bosch MUMS2VM00 Series 2 Kitchen Machine User Manual

Model: MUMS2VM00

INTRODUCTION

This manual provides essential information for the safe and efficient operation, maintenance, and care of your Bosch MUMS2VM00 Series 2 Kitchen Machine. Please read these instructions thoroughly before first use and keep them for future reference.

IMPORTANT SAFETY INSTRUCTIONS

- Always unplug the appliance from the power supply before assembly, disassembly, or cleaning.
- Do not immerse the motor unit in water or other liquids.
- Keep hands and utensils away from moving parts during operation to prevent injury.
- Ensure all attachments are securely fitted before operating the machine.
- This appliance is intended for household use only.
- Children should be supervised to ensure they do not play with the appliance.

PRODUCT COMPONENTS

The Bosch MUMS2VM00 Kitchen Machine comes with several key components designed for various culinary tasks.

- **Motor Unit:** The main body housing the motor and control dial.
- **Stainless Steel Mixing Bowl:** A 3.8-liter capacity bowl for mixing ingredients.
- **Dough Hook:** For kneading heavy doughs like bread or pizza dough.
- **Beater (Mixing Whisk):** For mixing lighter batters, creams, and sauces.
- **Whisk (Balloon Whisk):** For whipping egg whites, cream, and light mixtures.
- **Splash Guard:** To prevent ingredients from splashing out of the bowl during operation.



Image: Bosch MUMS2VM00 Kitchen Machine with its included dough hook, beater, and whisk attachments.

The image above displays the main unit of the Bosch MUMS2VM00 Kitchen Machine along with its three primary attachments: the dough hook, the beater (mixing whisk), and the balloon whisk. These accessories are designed to cover a wide range of mixing and kneading needs.

SETUP AND FIRST USE

1. Unpacking

1. Carefully remove all components from the packaging.
2. Remove any protective films or packaging materials.
3. Clean all removable parts (mixing bowl, attachments, splash guard) before first use as described in the 'Care and Maintenance' section.
4. Place the motor unit on a clean, stable, and level surface. Ensure adequate ventilation around the appliance.



Image: The Bosch MUMS2VM00 Kitchen Machine positioned on a wooden kitchen counter, ready for use.

This image shows the Bosch MUMS2VM00 Kitchen Machine set up on a kitchen counter, demonstrating its compact size and stable placement. It is ready for the mixing bowl and attachments to be added.

2. Assembling the Machine

1. Ensure the appliance is unplugged.
2. Lift the mixer arm by pressing the release button (usually located on the side or top of the motor unit).
3. Place the stainless steel mixing bowl onto the base, twisting it clockwise until it locks securely into place.
4. Select the desired attachment (dough hook, beater, or whisk). Align the attachment with the drive shaft and push it upwards, then rotate slightly until it clicks into place.
5. Lower the mixer arm until it locks into its operating position.
6. If using, place the splash guard over the bowl.

OPERATING INSTRUCTIONS

1. Attaching Accessories

Proper attachment of accessories ensures optimal performance and safety.



Image: A hand demonstrating the attachment of a whisk to the mixer arm of the Bosch Kitchen Machine.

This image illustrates the process of attaching an accessory, specifically a whisk, to the mixer arm. The arm is in the raised position, allowing for easy and secure attachment of the tool.



Image: A close-up of a hand removing a dough hook from the Bosch Kitchen Machine's attachment point.

The image above shows a hand detaching a dough hook from the machine. This demonstrates the ease of changing accessories after use or when switching tasks.

2. Speed Control

The Bosch MUMS2VM00 features 7 speed settings plus a turbo function for precise control over your mixing tasks.



Image: A detailed view of the speed control dial, showing settings from 1 to 7 and the turbo function.

This close-up image highlights the speed control dial, which allows users to select from 7 distinct speeds and activate the turbo function for maximum power. The clear numbering ensures easy adjustment during operation.

- **Settings 1-2:** For gentle mixing, folding, and slow stirring. Ideal for incorporating dry ingredients or delicate mixtures.
- **Settings 3-4:** For general mixing, creaming butter and sugar, or preparing light batters.
- **Settings 5-7:** For whipping cream, egg whites, or kneading heavier doughs.
- **Turbo (Pulse) Function:** Provides short bursts of maximum power for quick mixing or incorporating ingredients.

3. Mixing and Kneading

1. Add your ingredients to the mixing bowl.
2. Plug the appliance into a suitable power outlet.
3. Turn the speed control dial to the desired setting. Start with a lower speed and gradually increase if needed to prevent splashing.
4. Allow the machine to mix until the desired consistency is achieved. The 3D PlanetaryMixing action ensures thorough mixing.
5. Once finished, turn the speed dial to '0' and unplug the appliance.

6. Lift the mixer arm and remove the attachment and bowl.



Image: The Bosch Kitchen Machine actively mixing ingredients in its stainless steel bowl.

This image captures the Bosch Kitchen Machine in operation, demonstrating its mixing capabilities. The design allows for efficient and thorough blending of ingredients within the bowl.

CARE AND MAINTENANCE

1. Cleaning

Regular cleaning ensures the longevity and hygiene of your kitchen machine.

- **Motor Unit:** Wipe the motor unit with a damp cloth. Do not use abrasive cleaners or immerse it in water.
- **Mixing Bowl and Attachments:** The stainless steel mixing bowl, dough hook, beater, and whisk are generally dishwasher-safe. Refer to the specific care instructions for each attachment.
- **Splash Guard:** Wash with warm soapy water or place in the dishwasher.



Image: Kitchen machine parts, including the mixing bowl and attachments, placed inside a dishwasher for cleaning.

This image shows various components of a kitchen machine, such as the mixing bowl and attachments, being cleaned in a dishwasher. This highlights the convenience of dishwasher-safe parts for easy maintenance.

2. Storage

Store the appliance and its accessories in a clean, dry place when not in use. Ensure the power cord is neatly wrapped.

TROUBLESHOOTING

If you encounter issues with your Bosch MUMS2VM00, consult the table below for common problems and solutions.

| Problem | Possible Cause | Solution |
|----------------------------------|--|--|
| Appliance does not start. | Not plugged in; mixer arm not locked; speed dial not at '0'. | Check power connection; ensure mixer arm is fully lowered and locked; turn speed dial to '0' before starting. |
| Attachments not mixing properly. | Attachment not correctly fitted; too much/too little ingredient. | Ensure attachment is securely clicked into place; adjust ingredient quantities according to recipes. |
| Loud noise during operation. | Overload; improper assembly. | Reduce load; check that all parts are correctly assembled. If noise persists, contact customer support. |
| Machine stops during operation. | Overheating protection activated. | Unplug the machine and let it cool down for at least 30 minutes before restarting. Reduce load for future use. |

TECHNICAL SPECIFICATIONS

| Feature | Specification |
|------------------------|---|
| Model Number | MUMS2VM00 |
| Brand | Bosch |
| Power | 900 Watts |
| Voltage | 240 Volts |
| Bowl Capacity | 3.8 Liters |
| Material | Stainless Steel (Bowl), Plastic/Metal (Housing) |
| Number of Speeds | 7 + Turbo |
| Dimensions (L x W x H) | 27.7 x 26.6 x 26.6 cm |
| Weight | 4.4 Kilograms |
| Special Feature | 3D PlanetaryMixing |

WARRANTY AND SUPPORT

Your Bosch MUMS2VM00 Kitchen Machine is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including warranty period and coverage details.

For technical assistance, spare parts, or service inquiries, please contact Bosch customer support. Contact information can typically be found on the official Bosch website or in the documentation provided with your appliance.

