

Manuals.plus /

› [Mintu](#) /

› Lint Filter Replacement For General Electric (GE) & HotPoint Dryers GTD75GCPL0DG GTD75GCSL0WS GTD65EBSJ4WS
GTD65EBPL1DG GTD75ECPL1DG GTD75ECSL1WS GTD84ECPN0DG GTD84GCSN0WS GTD84ECPN1DG GTD84GCPN0DG

Mintu WEO3X23881 GTD42EASJ2WW

Mintu Lint Filter Replacement Instruction Manual

For General Electric (GE) & HotPoint Dryers

INTRODUCTION

This instruction manual provides essential information for the proper installation, operation, and maintenance of your Mintu Lint Filter Replacement. This filter is designed to effectively capture lint and debris, ensuring optimal performance and safety of your General Electric (GE) and HotPoint dryers. Regular maintenance of the lint filter is crucial for efficient drying and to prevent fire hazards.



Image 1: Front view of the Mintu Lint Filter Replacement. This image shows the overall shape and mesh screen of the filter.

COMPATIBLE DRYER MODELS

This Mintu Lint Filter Replacement is compatible with a wide range of General Electric (GE) and HotPoint dryer models. Please verify your dryer's model number against the list below to ensure compatibility.

General Electric (GE) Dryer Models:

- GTD33EASK0WW, GTD33GASK0WW, GTD33PASK0WW
- GTD42EASJ0WW, GTD42EASJ1WW, GTD42GASJ0WW, GTD42GASJ1WW, GTD42GASJ2WW
- GTD45EASJ0WS, GTD45EASJ1WS, GTD45EASJ2WS, GTD45GASJ0WS, GTD45GASJ1WS, GTD45GASJ2WS
- GTD65EBSJ0WS, GTD65EBSJ1WS, GTD65EBSJ2WS, GTD65EBSJ3WS, GTD65EBSJ4WS
- GTD65GBSJ0WS, GTD65GBSJ1WS, GTD65GBSJ2WS, GTD65GBSJ3WS
- GTD65EBPL0DG, GTD65GBPL0DG, GTD65EBPL1DG
- GTD75ECPL0DG, GTD75ECSL0WS, GTD75GCPL0DG, GTD75GCSL0WS
- GTD75ECPL1DG, GTD75ECSL1WS
- GTD84ECPN0DG, GTD84GCSN0WS, GTD84ECPN1DG, GTD84GCPN0DG, GTD84ECSN1WS
- GTX22EASK0WW, GTX22GASK0WW, GTX33EASK0WW, GTX33GASK0WW
- GTX42EASJ0WW, GTX42EASJ1WW, GTX42EASJ2WW, GTX42GASJ0WW, GTX42GASJ1WW, GTX42GASJ2WW

- GTX60EBSJ0WS, GTX65EBSJ0WS, GTX65EBSJ1WS, GTX65EBSJ2WS
- GTX65GBSJ0WS, GTX65GBSJ1WS, GTX65GBSJ2WS

HotPoint Dryer Models:

- HTX21EASK0WW, HTX21GASK0WW, HTX21PASK0WW
- HTX24EASK0WW, HTX24GASK0WW, HTX24EASK0WS, HTX24GASK0WS

This list is not exhaustive. If your model number is not listed, please compare your existing lint filter with the product images or contact Mintu customer support for verification.

INSTALLATION INSTRUCTIONS

Follow these steps to safely replace your dryer's lint filter.

1. **Safety First:** Before beginning any installation or maintenance, ensure your dryer is unplugged from the electrical outlet or that the circuit breaker for the dryer is turned off. This prevents accidental startup and electrical shock.
2. **Locate the Existing Filter:** The lint filter is typically located inside the dryer door opening, either at the bottom or top.
3. **Remove the Old Filter:** Grasp the handle of the existing lint filter and pull it straight out. If it's stuck, gently wiggle it from side to side while pulling.
4. **Inspect the Filter Housing:** Before inserting the new filter, inspect the filter housing for any accumulated lint or debris. Use a vacuum cleaner attachment to remove any buildup.
5. **Insert the New Filter:** Align the Mintu Lint Filter Replacement with the opening in the dryer. Gently push the filter all the way into the housing until it is seated firmly. Do not force it.
6. **Test Fit:** Ensure the filter is flush with the dryer opening and does not protrude. Close the dryer door to confirm it latches properly.
7. **Restore Power:** Plug the dryer back into the electrical outlet or turn the circuit breaker back on.



Image 2: Top view of the Mintu Lint Filter Replacement. This image highlights the mesh screen and the frame of the filter.

OPERATING INSTRUCTIONS

Once installed, the lint filter operates automatically as part of your dryer's normal cycle. Its primary function is to capture lint and debris from your clothes as they dry, preventing them from entering the dryer's exhaust system and reducing drying efficiency or posing a fire risk.

Always ensure the lint filter is properly seated before starting a drying cycle.

MAINTENANCE AND CARE

Regular cleaning of your lint filter is essential for optimal dryer performance and safety.

Daily Cleaning:

- After every load of laundry, pull out the lint filter.
- Peel off any accumulated lint from the screen. Dispose of the lint in a waste bin.
- Reinsert the clean filter firmly into its housing.

Deep Cleaning (Monthly or as Needed):

Over time, fabric softener residue or detergent buildup can clog the mesh screen, even if it appears clean. This can reduce airflow and drying efficiency.

1. Remove the lint filter from the dryer.
2. Gently scrub the mesh screen with a soft brush (like a toothbrush) and warm, soapy water.
3. Rinse the filter thoroughly under running water to remove all soap residue.
4. Allow the filter to air dry completely before reinserting it into the dryer. Ensure it is completely dry to prevent mildew or damage.



Image 3: Side view of the Mintu Lint Filter Replacement. This image shows the curved profile and the sturdy frame of the filter.

TROUBLESHOOTING

If you encounter issues related to your lint filter, consider the following common problems and solutions:

Problem	Possible Cause	Solution
Dryer takes too long to dry clothes.	Clogged lint filter (even if it looks clean).	Perform a deep cleaning of the lint filter as described in the Maintenance section. Ensure the filter is fully dry before reinserting.
Lint on clothes after drying.	Lint filter not properly seated or damaged.	Ensure the filter is pushed all the way in. Inspect the filter for any tears or holes in the mesh. Replace if damaged.
Burning smell from dryer.	Excessive lint buildup in the dryer vent or filter housing.	Immediately unplug the dryer. Clean the lint filter and the filter housing thoroughly. Inspect the dryer's exhaust vent for blockages. If the smell persists, contact a qualified technician.

PRODUCT SPECIFICATIONS

Brand: Mintu

Model Number: WEO3X23881 GTD42EASJ2WW

Part Type: Lint Filter Replacement

Compatible Appliances: General Electric (GE) and HotPoint Dryers

First Available: June 29, 2021

WARRANTY AND SUPPORT

Money Back Guarantee:

Mintu offers a money-back guarantee within 30 days from the date of purchase. If you are not satisfied with your product, a refund will be issued. Please retain your proof of purchase for all warranty claims.

Customer Support:

For further assistance, technical support, or inquiries regarding compatibility, please contact Mintu customer service through the retailer where the product was purchased or visit the official Mintu store page on Amazon for contact information.

[Visit the Mintu Store on Amazon](#)

© 2023 Mintu. All rights reserved.

General Electric (GE) and HotPoint are registered trademarks of their respective owners. This product is a compatible replacement part and not an OEM product.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0987MQ77X>

More documents and user manuals: <https://manuals.plus/>