



Manuals.plus /

› ALLIMITY /

› ALLIMITY 6-in-1 Replacement Sound Bar Remote Control User Manual

ALLIMITY BJKJ-6IN1-AH59-02767A-C-AH81-JKJBEU

ALLIMITY 6-in-1 Replacement Sound Bar Remote Control User Manual

Model: BJKJ-6IN1-AH59-02767A-C-AH81-JKJBEU

PRODUCT OVERVIEW

This ALLIMITY 6-in-1 replacement remote control is designed to be compatible with a wide range of Samsung Sound Bar and Speaker Systems. It offers a straightforward, pre-programmed solution for controlling your audio devices without the need for complex setup.

The remote is a direct replacement for several original Samsung remote models, including AH59-02767A, AH59-02767C, AH81-09773A, AH81-09748A, AH81-11678A, and WIR113001-C201.



Figure 1: Front view of the ALLIMITY 6-in-1 Replacement Sound Bar Remote Control.

SETUP

Battery Installation

The remote control requires two (2) AAA alkaline batteries for operation. Batteries are not included with the remote.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or in the direction indicated by an arrow to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.







Figure 2: Rear view of the remote control with the battery compartment open, showing where to insert AAA batteries.

Once batteries are installed, the remote is ready for use. No additional programming or setup is required.

OPERATING INSTRUCTIONS

This replacement remote control is designed for simple, direct use with compatible Samsung Sound Bar and Speaker Systems. It functions immediately upon battery installation.





Figure 3: Detailed view of the remote control's buttons.

Key Functions:

- **Power Button (⏻):** Turns the sound bar or speaker system on or off.
- **Pair Button (🔗):** Used for Bluetooth pairing with compatible devices. Refer to your sound bar's manual for specific pairing instructions.
- **Play/Pause Button (▶||):** Controls media playback (play/pause) when connected to a compatible source.
- **Mute Button (🔇):** Mutes or unmutes the audio output.
- **Sound Mode Button:** Cycles through available sound modes (e.g., Standard, Surround, Game, Adaptive Sound).
- **Settings/Gear Button (⚙️):** Accesses sound bar settings or advanced options.
- **Volume Up/Down (VOL):** Adjusts the main volume level.
- **Woofer Level (WOOFER):** Adjusts the bass level of the connected subwoofer.
- **Soundbar Button:** May be used to select the soundbar input or switch control focus to the soundbar.

For specific functionalities of your sound bar or speaker system, please refer to the original product's user manual.

COMPATIBILITY

This ALLIMITY replacement remote control is compatible with a wide range of Samsung Sound Bar and Speaker System models. Below is a list of some compatible models:

- **Replaces Remote Models:** AH59-02767A, AH59-02767C, AH81-09773A, AH81-09748A, AH81-11678A, WIR113001-C201
- **Compatible Sound Bar/Speaker System Models:**
 - HW-T510, HW-T550, HW-S40T, HW-S41T, HW-T45C, HW-T50M, HW-R60M, HW-R650, HW-T450, HW-T60C, HW-T650, HW-R47M, HW-T60M, HW-R450, HW-T420, HW-R50C, HW-R550
 - HW-N650, HW-N550, HW-N450, HW-NM65C, HW-N950, HW-N850
 - HW-Q70T, HW-Q800T, HW-Q850T, HW-Q90R, HW-Q80R, HW-Q70R, HW-Q6CR, HW-Q60R, HW-Q6CT, HW-Q60T, HW-Q67CT, HW-Q950T, HW-Q900T
 - And many regional variations (e.g., /ZA, /ZC, /XY, /XU, /ZF, etc.) of the above models.

If your original remote control model number or sound bar model number is listed above, this replacement remote should function correctly.

SPECIFICATIONS

Feature	Detail
Brand	ALLIMITY
Model Number	BJKJ-6IN1-AH59-02767A-C-AH81-JKJBEU
Compatible Remote Models	AH59-02767A, AH59-02767C, AH81-09773A, AH81-09748A, AH81-11678A, WIR113001-C201
Power Source	2 x AAA Batteries (not included)
Product Dimensions	6 x 2 x 0.6 inches
Item Weight	1.62 ounces
Color	Black
Special Feature	No Programming Required

TROUBLESHOOTING

- **Remote not responding:**
 - Ensure batteries are inserted correctly with the correct polarity (+/-).
 - Replace old or depleted batteries with new AAA alkaline batteries.
 - Ensure there are no obstructions between the remote control and the sound bar's infrared receiver.
 - Verify that the sound bar is powered on.
- **Some buttons not working:**
 - This remote is pre-programmed for specific Samsung models. Ensure your sound bar model is listed in the compatibility section.
 - Clean the remote's surface and buttons with a soft, dry cloth to remove any debris that might be obstructing button presses.

MAINTENANCE

To ensure the longevity and proper functioning of your remote control, follow these simple maintenance guidelines:

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners, sprays, or abrasive materials, as they may damage the remote.
- **Battery Care:** If the remote will not be used for an extended period (e.g., more than a month), remove the batteries to prevent leakage and potential damage to the remote.
- **Storage:** Store the remote in a cool, dry place, away from direct sunlight, extreme temperatures, and high humidity.
- **Avoid Drops:** Protect the remote from physical impact and drops, which can damage internal components.

WARRANTY AND SUPPORT

For information regarding warranty coverage or technical support, please contact the seller or manufacturer directly.

Details are typically provided with your purchase documentation or on the product listing page.
Keep your purchase receipt or order number handy when contacting support for faster assistance.