

[Manuals.plus](#) /

› [STEAMONE](#) /

› SteamOne Karl XL Garment Steamer User Manual

STEAMONE XL400B

SteamOne Karl XL Garment Steamer User Manual

Model: XL400B | Brand: STEAMONE

INTRODUCTION

Thank you for choosing the SteamOne Karl XL Garment Steamer. This powerful and compact device is designed to effortlessly smooth wrinkles and refresh your garments with the power of steam. With its rapid heat-up time and efficient steam output, it provides a convenient solution for maintaining your wardrobe. Please read this manual carefully before first use to ensure safe and optimal operation of your new garment steamer.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before using the garment steamer.
- Use the appliance only for its intended use.
- To protect against the risk of electric shock, do not immerse the appliance in water or other liquids.
- Always turn off and unplug the appliance from the electrical outlet before filling or emptying the water tank, and when not in use.
- Do not operate the appliance with a damaged cord or plug, or if the appliance has been dropped or damaged.
- Keep the cord away from heated surfaces.
- Do not direct steam at people, animals, or electrical appliances. Steam is hot and can cause burns.
- Use distilled or demineralized water to prevent mineral buildup and extend the life of your steamer.
- Always ensure the water tank is securely attached before operating.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

PRODUCT OVERVIEW AND COMPONENTS

Familiarize yourself with the parts of your SteamOne Karl XL Garment Steamer and its included accessories.



Figure 1: SteamOne Karl XL Garment Steamer and its accessories, including a fabric brush, silk brush, suction hook, and travel bag.

Technische Spezifikationen

SteamOne-Dampf beseitigt 99,99% aller Viren, Keime und Bakterien*.
(*Von unabhängigen Labors getestet.)

ON/OFF LED-Knopf
2 Leistungsstufen:
Max und Eco

Dampf auf Abruf dank
des Abzugs, mit dem der
Dampfausstoß gesteuert
werden kann.

Sohle aus rostfreiem
Edelstahl

Abnehmbarer
400-ml-Wassertank
mit großer Öffnung
für einfaches Befüllen



Saughaken



Fusselbürste



Seidenbürste



Flaschenanschluss



Transporttasche

Figure 2: Detailed diagram illustrating the main components such as the stainless steel soleplate, ON/OFF LED button, steam trigger, removable 400ml water tank, and included accessories like the suction hook, lint brush, silk brush, bottle connector, and transport bag.

Main Components:

- **Stainless Steel Soleplate:** The heated surface that emits steam.
- **Water Tank (400ml):** Removable tank for filling with water.
- **ON/OFF LED Button:** Power control with indicator light.
- **Steam Trigger:** Activates steam on demand.
- **Ergonomic Handle:** Designed for comfortable grip.
- **Power Cord (1.9m):** For electrical connection.

Included Accessories:

- **Fabric Brush:** For thicker fabrics and removing lint.
- **Silk Brush:** Gentle care for delicate fabrics like silk.
- **Suction Hook:** For hanging garments during steaming.
- **Travel Bag:** For convenient storage and transport.
- **Bottle Connector:** Allows use with standard water bottles for extended steaming or travel.

SETUP

1. **Unpack the Steamer:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.
2. **Fill the Water Tank:**
 - Remove the 400ml water tank from the base of the steamer.
 - Open the tank cap and fill with distilled or demineralized water. Do not exceed the maximum fill line.
 - Securely close the tank cap and reattach the water tank to the steamer base until it clicks into place.

3. **Connect to Power:** Plug the power cord into a standard 220V AC electrical outlet. The LED indicator light will illuminate.

OPERATING INSTRUCTIONS

Getting Started:

1. **Power On:** Press the ON/OFF LED button. The steamer will begin to heat up. It is ready for use in approximately 30 seconds.
2. **Select Steam Level:** Your steamer offers two power levels. Press the power button to cycle between Max and Eco modes, indicated by the LED.
3. **Prepare Garment:** Hang the garment on a hanger. For best results, use the included suction hook to secure the hanger to a door or wall.

Steaming Techniques:



Figure 3: Demonstrates the SteamOne Karl XL in use, effectively steaming a blue shirt. The powerful 2000W steam output ensures quick wrinkle removal.



Figure 4: Illustrates the versatility of the SteamOne Karl XL, suitable for various fabric types including cotton, wool, polyester, jeans, silk, linen, and muslin.

- **General Steaming:** Hold the steamer head close to the fabric, but not touching, and press the steam trigger. Move the steamer in a downward motion, allowing the steam to relax the fibers and remove wrinkles.
- **For Stubborn Wrinkles:** Gently press the soleplate against the fabric while steaming. The stainless steel soleplate with lamellae is designed for deeper steam penetration.
- **Using Brushes:** Attach the fabric brush for heavier materials like coats or upholstery, or the silk brush for delicate items. These brushes help to open the fabric weave for better steam penetration and can remove lint.
- **Antibacterial Function:** The powerful steam (98°C, 30g/min) eliminates 99.99% of viruses, germs, and bacteria from your garments, providing a hygienic refresh.
- **Automatic Shut-off:** The steamer features an automatic shut-off system for safety when the water tank is empty or if left inactive for a period.

The 400ml tank provides approximately 27 minutes of continuous steaming, depending on the steam level selected.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your SteamOne Karl XL Garment Steamer.

After Each Use:

- **Empty Water Tank:** Always unplug the steamer and allow it to cool down completely. Remove the water tank and empty any remaining water. This prevents mineral buildup and bacterial growth.
- **Clean Soleplate:** Wipe the stainless steel soleplate with a soft, damp cloth to remove any residue. Do not use abrasive cleaners or scouring pads.

Descaling (Monthly or as needed):

If you notice reduced steam output or white residue, descaling may be necessary. While using distilled water minimizes this, it may still occur over time.

1. Ensure the steamer is unplugged and cool.
2. Fill the water tank with a mixture of 50% white vinegar and 50% distilled water.
3. Plug in the steamer and allow it to heat up.
4. Steam the solution until the tank is about half empty, directing steam into a sink or bucket.
5. Unplug and let it cool for 30 minutes.
6. Repeat the steaming process with the remaining solution.
7. Empty the tank and rinse thoroughly with fresh distilled water.
8. Fill with fresh distilled water and steam until no vinegar odor remains.

Storage:

Store the steamer in a cool, dry place. Ensure the water tank is empty and the appliance is completely dry before storing. Use the provided travel bag for compact and protected storage.

TROUBLESHOOTING

Before contacting customer support, please refer to the following common issues and their solutions.

Problem	Possible Cause	Solution
No steam or low steam output.	Water tank is empty or low. Steamer not heated sufficiently. Mineral buildup (calcification).	Refill water tank. Wait 30 seconds for the steamer to heat up. Perform descaling procedure (see Maintenance section).
Water leaking from the soleplate.	Water tank not properly seated. Overfilled water tank. Steamer not hot enough.	Ensure water tank is securely attached. Do not overfill the tank. Allow steamer to fully heat up before use.
Steamer does not turn on.	Not plugged in. Power outlet issue. Automatic shut-off activated.	Check power cord connection. Test outlet with another appliance. Unplug and replug the steamer to reset.

Problem	Possible Cause	Solution
Steam has an unusual odor.	New appliance odor. Residue in water tank or internal components.	This is normal for first few uses. Empty and clean water tank. Run a cycle with fresh distilled water.

TECHNICAL SPECIFICATIONS



Figure 5: Visual representation of the SteamOne Karl XL's compact dimensions (150mm width, 198mm height) and its 400ml removable water tank capacity.

Feature	Specification
Model Number	XL400B

Feature	Specification
Brand	STEAMONE
Power	2000 Watts
Voltage	220 Volts (AC)
Water Tank Capacity	400 Milliliters
Steam Output	30 g/min
Heat-up Time	Approx. 30 seconds
Autonomy	Approx. 27 minutes (with 400ml tank)
Dimensions (L x W x H)	26.5 x 12 x 21 cm
Item Weight	1.46 Kilograms
Material	Stainless Steel (soleplate)

WARRANTY AND SUPPORT

SteamOne products are manufactured to high-quality standards. For information regarding warranty coverage, please refer to the warranty card included with your product or visit the official SteamOne website. If you encounter any issues that cannot be resolved using the troubleshooting guide, or require further assistance, please contact SteamOne customer service. You can often find support contact information on the brand's official website: www.steamone.com