

Craig CMP840

Craig CMP840 10.1-inch Tablet

INSTRUCTION MANUAL

[Introduction](#)[Product Overview](#)[Setup](#)[Operation](#)[Maintenance](#)[Troubleshooting](#)[Specifications](#)[Warranty & Support](#)

1. Introduction

This manual provides essential instructions for the proper setup, operation, and maintenance of your Craig CMP840 10.1-inch Quad Core Tablet with Keyboard Case and Headphones. Please read this manual thoroughly before using your device to ensure optimal performance and longevity. Keep this manual for future reference.

2. Product Overview

The Craig CMP840 is a 10.1-inch tablet designed for entertainment, professional, and educational use. It features a quad-core processor, Android 9 Pie operating system, and comes bundled with a protective keyboard case and stereo headphones.

Included Components

- Craig CMP840 10.1-inch Tablet
- 10.1-inch Keyboard Case
- Stereo Headphones
- USB Charging Cable
- AC/USB Adapter

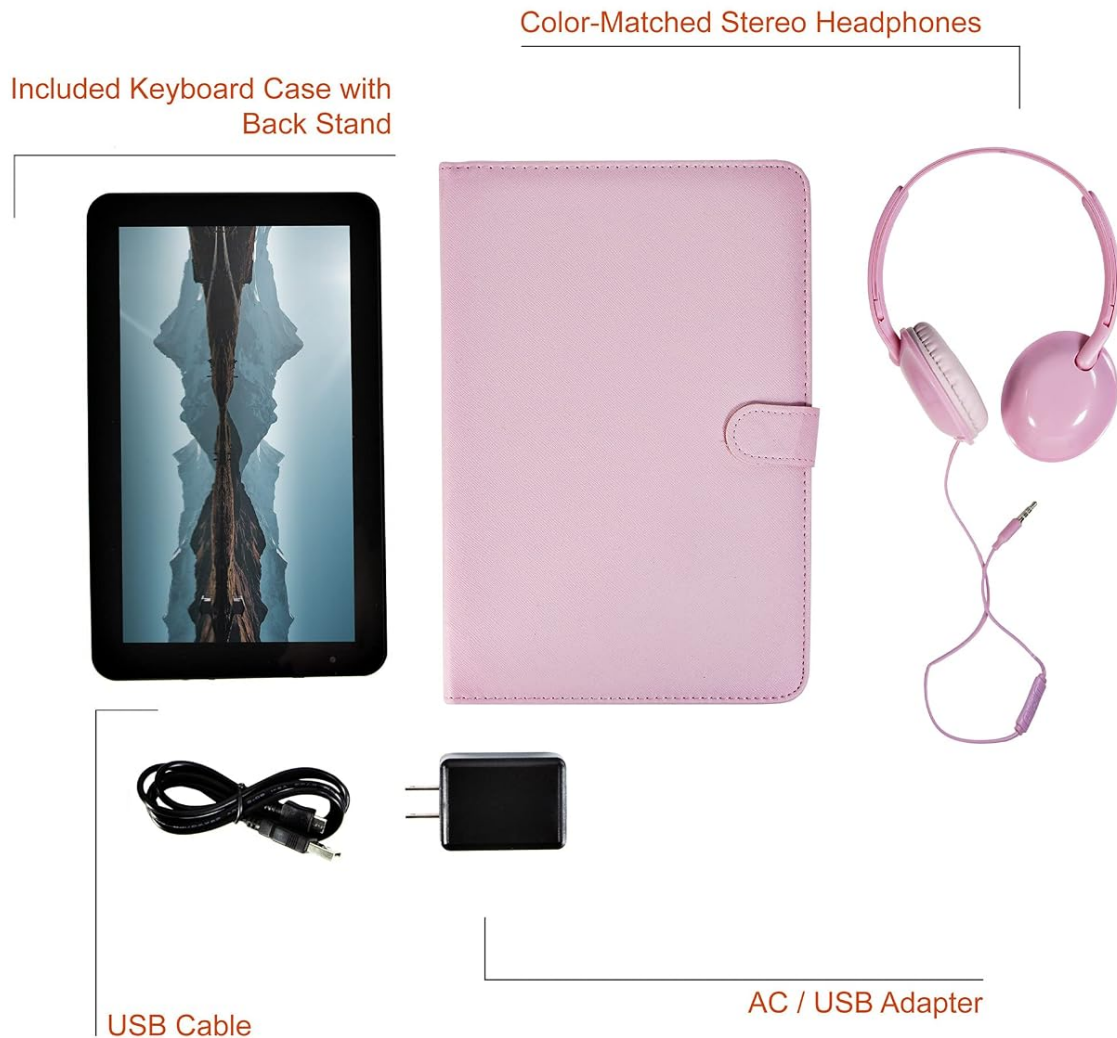


Figure 2.1: All included accessories for the Craig CMP840 tablet bundle.

Key Features

- **Display:** 10.1-inch color capacitive touch screen with 1024 x 600 resolution.
- **Processor:** Allwinner Quad Core 1.2 GHz.
- **Operating System:** Android 9 Pie.
- **Memory:** 1 GB RAM, 16 GB internal flash memory.
- **Connectivity:** Wi-Fi (802.11n), Bluetooth, Micro-USB port, Micro SD card slot, 3.5mm stereo headphone jack.
- **Camera:** Front camera with HD 720p video capture resolution.
- **Accessories:** Detachable keyboard case with back stand, color-matched stereo headphones.



1.2 GHz Quad Core Processor

Powered By: Google Android 9 Pie



16 GB Flash Memory

1 GB RAM

Micro-USB, Micro SD Card,
3.5mm Stereo Headphone Jack Ports

10.1 in. Touch Screen

Figure 2.2: Key features and specifications of the Craig CMP840 tablet.

3. Setup

3.1 Charging the Tablet

Before first use, fully charge the tablet. Connect the USB charging cable to the tablet's Micro-USB port and the AC/USB adapter. Plug the adapter into a power outlet. The charging indicator will illuminate. A full charge may take several hours.



Figure 3.1: Tablet connected to charging cable within the keyboard case.

3.2 Powering On/Off

- **To Power On:** Press and hold the Power button (typically located on the side or top edge) until the screen lights up.
- **To Power Off:** Press and hold the Power button until a menu appears. Select "Power off" and confirm.
- **To Restart:** From the power menu, select "Restart."

3.3 Initial Setup

Upon first power-on, the tablet will guide you through the initial setup process. This includes selecting your language, connecting to a Wi-Fi network, and signing in with or creating a Google account. A Google account is necessary to download apps from the Google Play Store.

3.4 Connecting the Keyboard Case

Place the tablet into the keyboard case, ensuring it is securely held by the corner clips. The keyboard connects via a Micro-USB cable that plugs into the tablet's Micro-USB port. No Bluetooth pairing is required for the keyboard.

3.5 Connecting Headphones

Plug the 3.5mm audio jack of the included headphones into the tablet's headphone port. The tablet will automatically switch audio output to the headphones.



Figure 3.2: Included stereo headphones.

4. Operating the Tablet

4.1 Basic Touchscreen Gestures

- **Tap:** Select an item or open an app.
- **Tap & Hold:** Access contextual menus or move icons.
- **Swipe:** Navigate between screens or scroll through content.
- **Pinch-to-Zoom:** Zoom in or out on images and web pages.

4.2 Using the Keyboard Case

Once connected, the physical keyboard can be used for typing, navigation, and executing shortcuts. The keyboard case also features a built-in kickstand for comfortable viewing angles.



Figure 4.1: Tablet in keyboard case with kickstand extended.

4.3 Accessing Applications

All pre-installed applications are accessible from the home screen or the app drawer. To download new applications, open the Google Play Store app and search for desired content. A Google account and Wi-Fi connection are required.

4.4 Wi-Fi Connectivity

To connect to a Wi-Fi network:

1. Go to **Settings > Network & Internet > Wi-Fi**.
2. Toggle Wi-Fi **On**.
3. Select your desired network from the list.
4. Enter the password if prompted and tap **Connect**.

4.5 Storage Management

The tablet comes with 16 GB of internal storage. You can expand storage by inserting a Micro SD card into the dedicated slot. To manage storage, go to **Settings > Storage**.

4.6 Using the Camera

The tablet features a front-facing camera. Open the Camera app to take photos or record videos. Adjust settings within the app for different modes and effects.

5. Maintenance

5.1 Cleaning the Device

Use a soft, lint-free cloth to clean the screen and body of the tablet. For stubborn smudges, slightly dampen the cloth with water or a screen-cleaning solution. Avoid harsh chemicals or abrasive materials.

5.2 Battery Care

- Avoid exposing the tablet to extreme temperatures.
- Do not leave the tablet fully discharged for extended periods.
- Use only the provided charging cable and adapter.

5.3 Software Updates

Periodically check for system updates to ensure your tablet has the latest features and security patches. Go to **Settings > System > Advanced > System update**.

5.4 Storage Optimization

To maintain performance, regularly clear unnecessary files, uninstall unused apps, and transfer large media files to an external Micro SD card or cloud storage.

6. Troubleshooting

If you encounter issues with your tablet, refer to the following common solutions:

Problem	Solution
Tablet does not power on	Ensure the tablet is fully charged. Press and hold the Power button for at least 10-15 seconds.
Slow performance or apps crashing	Close unused apps, clear cache, free up storage space, or restart the tablet. Consider a factory reset if issues persist (backup data first).
Wi-Fi connection issues	Ensure Wi-Fi is enabled. Restart your router and the tablet. Re-enter Wi-Fi password. Check if other devices can connect to the network.
Keyboard not responding	Ensure the Micro-USB cable from the keyboard is securely connected to the tablet's port. Try disconnecting and reconnecting.
No sound from headphones	Ensure headphones are fully plugged into the 3.5mm jack. Check volume settings on the tablet. Test with another pair of headphones if available.
Screen unresponsive	Restart the tablet. If the issue persists, a factory reset might be necessary.

Factory Reset

A factory reset will erase all data on your tablet and restore it to its original factory settings. This can resolve persistent software issues. **Backup all important data before proceeding.** To perform a factory reset, go to **Settings > System > Advanced > Reset options > Erase all data (factory reset)**.

7. Specifications

Feature	Detail
Model Number	CMP840

Feature	Detail
Display Size	10.1 inches
Display Resolution	1024 x 600
Processor	Allwinner Quad Core 1.2 GHz
RAM	1 GB DDR3 SDRAM
Internal Storage	16 GB
Operating System	Android 9 Pie
Connectivity	Wi-Fi (802.11n), Bluetooth, USB
Ports	Micro-USB, Micro SD Card Slot, 3.5mm Headphone Jack
Camera	Front (HD 720p video capture)
Included Components	Tablet, Keyboard Case, Headphones, USB Charging Cable, AC/USB Adapter
Item Weight	0.02 kg (tablet only)

8. Warranty & Support

8.1 Warranty Information

This Craig CMP840 tablet is covered by a **90-day manufacturer's limited warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized repairs, or normal wear and tear. Please retain your proof of purchase for warranty claims.

8.2 Customer Support

For further assistance, technical support, or warranty inquiries, please refer to the official Craig website or contact their customer service department. Contact information can typically be found on the manufacturer's packaging or website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question