Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Vacmaster /
- Vacmaster Wet/Dry Vacuum with Detachable Blower 6 Gallon 5 Peak HP VBVB611PF 1101 Instruction Manual

Vacmaster VBVB611PF 1101

Vacmaster Wet/Dry Vacuum with Detachable Blower

MODEL: VBVB611PF 1101 - INSTRUCTION MANUAL

1. Important Safety Instructions

Read and understand all safety warnings and instructions before operating this vacuum cleaner. Failure to follow the warnings and instructions may result in electric shock, fire, and/or serious injury. Keep this manual for future reference.

- Do not leave the appliance when plugged in. Unplug from outlet when not in use and before servicing.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not use without filters in place.
- Turn off all controls before unplugging.
- · Use extra care when cleaning on stairs.
- Use only proper grounding outlets.

2. Product Overview and Included Components

The Vacmaster VBVB611PF 1101 is a versatile 6-gallon wet/dry vacuum with a detachable 5 Peak HP motor that converts into a handheld blower. This section details the components included with your purchase.



NOTE: The hose and accessories for this vacuum are 1-1/4" (3.2 cm) diameter.

Image 2.1: The Vacmaster VBVB611PF 1101 Wet/Dry Vacuum with its full set of accessories. This includes the main unit, hose, extension wands, crevice tool, floor brush, blower adapter, blower tube, foam wet filter, and cartridge filter.

Included Accessories:

- Foam Wet Filter: For wet pickup operations.
- Cartridge Filter: For dry pickup operations.
- Blower Adapter: Connects the blower tube to the motor unit for handheld blower use.
- Blower Tube: Directs airflow during blower operation.
- Crevice Tool: For cleaning in tight spaces and corners.
- Extension Wands: Three pieces to extend reach for floor cleaning or high areas.
- Hose: Flexible hose for vacuuming and connecting accessories.
- Floor Brush: For general floor cleaning.

3. Setup and Assembly

Follow these steps to assemble your Vacmaster wet/dry vacuum.

3.1 Attaching the Casters

- 1. Invert the collection tank.
- 2. Insert the four caster feet into the slots on the bottom of the tank.
- 3. Secure each caster with a screw using a screwdriver (not included).

3.2 Filter Installation

The type of filter used depends on whether you are performing wet or dry vacuuming.



Image 3.1: The Vacmaster VBVB611PF 1101 unit showing the motor head detached from the collection tank, ready for filter installation or blower conversion.

For Dry Vacuuming:

1. Ensure the collection tank is empty and clean.

- 2. Place the cartridge filter over the filter cage on the motor head.
- 3. Secure the cartridge filter with the filter cap by twisting it clockwise.
- 4. Do **not** use the foam filter for dry vacuuming.

For Wet Vacuuming:

- 1. Remove the cartridge filter and filter cap if installed.
- 2. Slide the foam wet filter over the filter cage on the motor head.
- 3. Ensure the foam filter completely covers the filter cage.
- 4. Do not use the cartridge filter for wet vacuuming.

3.3 Attaching the Motor Head

- 1. Align the motor head with the collection tank.
- 2. Press down firmly until the motor head is seated properly.
- 3. Secure the motor head by latching the two side clips. Ensure they snap into place for a secure seal.



Image 3.2: A hand demonstrating the one-hand release mechanism to detach the motor unit from the vacuum base, facilitating conversion to a blower or filter access.

3.4 Attaching the Hose and Accessories

- 1. Insert the larger end of the hose into the vacuum port on the collection tank. Twist to secure.
- 2. Attach desired accessories (extension wands, floor brush, crevice tool) to the smaller end of the hose.

4. Operating Instructions

This section details how to operate your Vacmaster wet/dry vacuum for various cleaning tasks.

4.1 Powering On/Off

Plug the power cord into a grounded electrical outlet. The vacuum is equipped with a simple ON/OFF switch located on the motor head. Press 'I' for ON and 'O' for OFF.

4.2 Dry Vacuuming

Ensure the cartridge filter is correctly installed for dry pickup. Attach the hose and desired dry vacuuming accessories. Turn the unit ON and proceed with cleaning dry debris.



Image 4.1: A person using the Vacmaster vacuum with extension wands and floor brush to clean dry debris from a garage floor, demonstrating its powerful suction.

4.3 Wet Vacuuming

Ensure the foam wet filter is correctly installed and the cartridge filter is removed. Attach the hose and appropriate wet vacuuming accessories. Turn the unit ON and proceed with cleaning liquid spills. Empty

the tank regularly to prevent overflow.



Image 4.2: A person using the Vacmaster vacuum to quickly pick up a liquid spill on a wooden floor, highlighting its wet pickup capability.

4.4 Detachable Blower Operation

The motor head can be detached and used as a handheld blower.

- 1. Unlatch the two side clips and remove the motor head from the collection tank.
- 2. Attach the blower adapter to the exhaust port on the motor head.
- 3. Attach the blower tube to the blower adapter.
- 4. Plug in the power cord and turn the unit ON to use as a blower.



Image 4.3: A person using the detachable motor unit as a handheld blower to clear leaves from a patio, demonstrating its powerful 190 MPH blowing capability.

5. Maintenance

Regular maintenance ensures optimal performance and extends the life of your Vacmaster vacuum.

5.1 Emptying the Collection Tank

After wet or dry use, unlatch the motor head and carefully lift it off. Dispose of collected debris or liquids. Clean the inside of the tank with water and mild soap if necessary, then dry thoroughly before reassembly.

5.2 Filter Cleaning and Replacement

Cartridge Filter (Dry Use):

- Tap the filter gently to remove loose dust.
- For deeper cleaning, rinse the filter under running water. Allow it to air dry completely before reinstallation.
- Replace the filter if it is damaged or if suction power significantly decreases after cleaning.

Foam Wet Filter (Wet Use):

• Rinse the foam filter under running water to remove debris.

• Squeeze out excess water and allow it to air dry completely before storage or next use.

5.3 Hose and Accessory Storage

The unit features on-board storage for the hose, power cord, and some accessories. Wrap the hose around the top of the unit and secure the power cord. Store smaller accessories in the designated slots on the caster feet.

ON-BOARD HOSE, CORD & ACCESSORY STORAGE



Image 5.1: The Vacmaster VBVB611PF 1101 demonstrating its on-board hose, cord, and accessory storage, along with key dimensions and features like detachable motor and large locking latches.

6. Troubleshooting

If you encounter issues with your Vacmaster vacuum, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Vacuum will not turn on	No power to outlet Power cord not plugged in Faulty switch	Check circuit breaker/fuse Ensure cord is securely plugged in Contact customer service

Problem	Possible Cause	Solution
Poor suction or blowing	Clogged hose/accessories Full collection tank Incorrect/clogged filter Loose motor head seal	Clear obstructions Empty tank Clean/replace filter; ensure correct filter for task Secure motor head latches
Motor runs hot	Clogged filter Restricted airflow	Clean/replace filter Check hose and ports for blockages
Water leaking from unit	Foam filter not installed for wet use Tank overfilled Loose motor head seal	Install foam filter Empty tank Secure motor head latches

7. Specifications

Key technical specifications for the Vacmaster VBVB611PF 1101 Wet/Dry Vacuum.

• Model Name: VBVB611PF 1101

• Capacity: 6 Gallons

• Motor Horsepower: 5 Peak HP

Wattage: 1200 wattsAmperage: 10.5 Amps

• Maximum Suction (Water Lift): 70 Inches

• Airflow (CFM): 70 CFM

• Max Blowing Speed: 190 MPH

• Hose Length: 7 Feet

• Power Cord Length: 10 Feet

• Noise Level: 75 Decibels

• Product Dimensions (L x W x H): 13" x 14" x 19"

• Item Weight: 13.45 pounds

Filter Type: Cartridge (dry), Foam (wet)
 Connectivity Technology: Corded Electric

8. Warranty Information

For detailed warranty information, please refer to the warranty card included with your product packaging or visit the official Vacmaster website. Keep your purchase receipt as proof of purchase for any warranty claims.

9. Customer Support

If you require further assistance or have questions not covered in this manual, please contact Vacmaster customer service. Contact details can typically be found on the product packaging or the official Vacmaster website.

Related Documents - VBVB611PF 1101



Vacmaster VOA407S 4 Gallon Wet/Dry Vacuum Operator's Manual

Comprehensive operator's manual for the Vacmaster VOA407S 4 Gallon Wet/Dry Vacuum. Covers essential safety guidelines, step-by-step assembly, detailed operation instructions for dry vacuuming, wet vacuuming, and blower functions, maintenance procedures, troubleshooting common issues, and a complete parts list with diagrams.



Vacmaster VWM510 5 Gallon Wet/Dry Vacuum Operator's Manual

Operator's manual for the Vacmaster VWM510 5 Gallon Wet/Dry Vacuum. Includes safety instructions, assembly, operation guides for dry, wet, and blower modes, maintenance, troubleshooting, and parts list.



Vacmaster VJF608PF 0201 6 Gallon Wet/Dry Vacuum Operator's Manual

Operator's manual for the Vacmaster VJF608PF 0201 6 Gallon Wet/Dry Vacuum, covering safety instructions, assembly, operation, maintenance, and troubleshooting.



Vacmaster 5 Gallon Wet/Dry Vacuum Operator's Manual VOC508S 1101

Comprehensive operator's manual for the Vacmaster 5 Gallon Wet/Dry Vacuum, Model VOC508S 1101. Includes detailed instructions for assembly, dry and wet vacuuming, blower operation, maintenance, troubleshooting, and safety guidelines.



Vacmaster VQ1530SFDC Wet and Dry Vacuum Cleaner User Manual

Comprehensive user manual for the Vacmaster VQ1530SFDC 30L 1500W wet and dry vacuum cleaner, covering safety, assembly, operation, maintenance, troubleshooting, and technical specifications.



Vacmaster VQ1530SFDC Wet and Dry Vacuum Cleaner: Powerful 30L 1500W Shop Vac

Explore the Vacmaster VQ1530SFDC, a versatile 30L 1500W wet and dry vacuum cleaner designed for effective cleaning of liquids and dry debris. This comprehensive user manual provides essential safety information, assembly instructions, operation guidelines, maintenance tips, and troubleshooting solutions for optimal performance and longevity.

[pdf] User Manual Instructions Warranty Accessories

Wet Dry Vacuum Operator's ManualRead and understand this manual before use Keep for future reference 6 Gallon Model No VBVB611PF 1101 Manualvbvb611pf1101manualvacmaster product images manuals vbvb611pf1101manual srsltid

AfmBOoownIHZowbBmok5XeoXxxqgwvalAvuEBsoIMpZTkD1prt5XHfuB ManualWet Manualvacmaster AfmBOoownlHZowbBmok5XeoXxxqgwvalAvuEBsoIMpZTkD1prt5XHfuBvacmaster AfmBOort5fJ0 spHSbriLSegPtT Hqp84PLmuPerK cwxIYaE Mnro19 ManualThis covers warranty safety assembly dry liquid vacuum operation more Read 1101Read

AfmBOoqlh13YCLYtFEIBMFkHwVK1V6NTLRxMn7IMF7Nmip4OD1V25ILrvacmaster ManualModel Manual Suzhou Cleva Electric Appliance Co Ltd NO 8 Ting Rong Street 215122 China Page 2 2vacmaster Mnro19vacmaster AfmBOopGGvuydoOeb

ntvCMIYm7eQ8uTKXNC0enqT36WSbtUTn3LbUIK ManualOperator ntvCMIYm7eQ8uTKXNC0engT36WSbtUTn3LbUIKvacmaster AfmBOopMZitxNqJVw o46 QAdol ENgOc6MYMsNR2hQhkjwV14XlqfSn ENgOc6MYMsNR2hQhkjwV14XlqfSnvacmaster

AfmBOopzLwe1uKFLvjMKpJ saMFI1ljC4xNyZ1K3YrY18rrbigmE3sBg

saMFI1IjC4xNyZ1K3YrY18rrbigmE3sBgvacmaster

AfmBOoplz8D33fG2j2D1rYoKovC0jGRZH8httgugb6Gp9Rrfi7HK5sHh ||| ||| Wet/Dry Vacuum Operator s Manual 6 Gallon Model No. VBVB611PF 1101 FOR YOUR SAFETY Read and understand this manual before use. Keep this manual for future reference. Suzhou Cleva Electric Appliance Co., Ltd. NO.8 Ting Rong Street 215122 Suz || Wet/Dry Vacuum Operator s Manual 6 Gallon Model No. VBVB611PF 1101 FOR YOUR SAFETY Read and understand this manual before use. Keep this manual for future reference. Suzhou Cleva Electric Appliance Co., Ltd. NO.8 Ting Rong Street 215122 Suz ||| Wet/Dry Vacuum Operator s Manual 6 Gallon Model No. VBVB611PF 1101 FOR YOUR SAFETY Read and understand this manual before use. Keep this manual for future reference. Suzhou Cleva Electric Appliance Co., Ltd. NO.8 Ting Rong Street 215122 Suz ||| Wet/Dry Vacuum Operator s Manual 6 Gallon Model No. VBVB611PF 1101 FOR YOUR SAFETY Read and understand this manual before use. Keep this manual for future reference. Suzhou Cleva Electric Appliance Co., Ltd. NO.8 Ting Rong Street 215122 Suz ||| Wet/Dry Vacuum Operator s Manual 6 Gallon Model No. VBVB611PF 1101 FOR YOUR SAFETY Read and understand this manual before use. Keep this manual for future reference. Suzhou Cleva Electric Appliance Co., Ltd. NO.8 Ting Rong Street 215122 Suz ||| Wet/Dry Vacuum Operator s Manual 6 Gallon Model No. VBVB611PF 1101 FOR YOUR SAFETY Read and understand this manual before use. Keep this manual for future reference. Suzhou Cleva Electric Appliance Co., Ltd. NO.8 Ting Rong Street 215122 Suz

Wet/Dry Vacuum Operator s Manual 6 Gallon Model No. VBVB611PF 1101 FOR YOUR SAFETY Read and understand this manual before use. Keep this manual for future reference. Suzhou Cleva Electric Appliance Co., Ltd. NO.8 Ting Rong Street 215122 Suzhou, China Replacement Filters Accessories available ...

lang:en score:40 filesize: 9.28 M page_count: 17 document date: 2021-01-06



Operator's Manual









[pdf] User Manual Instructions Warranty Accessories

VBVB611PF 1101 Manual EN 20230417 B175 User Vacmaster 6 Gallon 5 Peak HP Wet Dry Shop Vacuum 1 4 Inch Hose Powerful Suction with Detachable Blower Tools Home Improvement C1KSrWeu2cL m media amazon images I |||

Wet/Dry Vacuum Aspirateur Sec et Humide Operator s Manual Manuel d utilisation 6 Gallon / 23 L Model No. Rfrence de modle **VBVB611PF 1101** FOR YOUR SAFETY Read and understand this manual before use. Keep this manual for future reference. POUR GARANTIR VOTRE SCURIT Lisez et comprenez ce manuel avant ... lang:fr score:39 filesize: 5.76 M page_count: 18 document date: 2023-06-16



[pdf] User Manual Instructions Warranty Accessories

Operator's Manual Syndigo 5 Place the power head back onto collection tank REMOVING CLEANING CARTRIDGE FILTER 1 Unlock and remove filter retainer by turning the original content syndigo asset 1b94ca67 1004 4be0 963c 5fd2708b929a |||

Wet/Dry Vacuum Operator s Manual 6 Gallon Model No. **VBVB611PF 1101** FOR YOUR SAFETY Read and understand this manual before use. Keep this manual for future reference. Suzhou Cleva Electric Appliance Co., Ltd. NO.8 Ting Rong Street 215122 Suzhou, China Replacement Filters Accessories available at...

lang:en score:25 filesize: 9.28 M page_count: 17 document date: 2021-01-06