

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Ourlife](#) /

› **Ourlife Kids Camera Instruction Manual - Model Kids Camera**

## Ourlife Kids Camera

# Ourlife Kids Camera Instruction Manual

Model: Kids Camera

Brand: Ourlife

## INTRODUCTION

This manual provides detailed instructions for the safe and effective use of your Ourlife Kids Camera. Please read this manual thoroughly before operating the device and retain it for future reference. This digital camera is designed for children aged 3-12, offering 1080P HD video recording, 12-megapixel photos, and various creative features.

## PRODUCT OVERVIEW

The Ourlife Kids Camera is a compact and durable digital camera featuring a 2.0-inch IPS screen, designed for ease of use by children. It supports photo capture, video recording, and includes fun filters, frames, and an MP3 music player.



Image: Front and back view of the Ourlife Kids Camera in pink and yellow, alongside an Ourlife TF Card.

## Key Features:

- 12 Megapixel Photos & 1080P HD Video:** Capture high-quality images and videos.
- 2.0-inch IPS Screen:** Provides clear viewing from various angles.
- Built-in MP3 Music Player:** Enjoy music directly on the device.
- Creative Effects:** Includes 8 special effects filters and 10 funny frames.
- Advanced Shooting Modes:** Features burst shooting and interval timer shooting.
- Durable Design:** Made from high-grade, shockproof silicone material.
- Rechargeable Battery:** Built-in 3.7V lithium battery for extended use.
- Expandable Storage:** Supports up to 32GB SD card (8GB card included).

## SETUP

### 1. Initial Activation & Charging

Before first use, locate the battery protection switch at the bottom of the camera. Slide it to the 'ON' position. Then, fully charge the camera using the provided USB cable. The charging port is located on the side of the camera.



Image: Close-up view of the camera's bottom, highlighting the power switch.

### 2. Inserting the SD Card

The camera comes with an 8GB SD card. Locate the SD card slot on the side of the camera. Gently insert the SD card until it clicks into place. To remove, push the card in slightly until it springs out.

### 3. Attaching the Lanyard

Attach the included neck lanyard to the designated loops on the camera for added security and portability.

Your browser does not support the video tag.

Video: Demonstrates the Ourlife Kids Camera, highlighting its compact size and available colors (pink and blue).

## OPERATING INSTRUCTIONS

### 1. Power On/Off

Press and hold the power button (usually located on the top or back) to turn the camera on or off. The screen will display the Ourlife logo upon startup.



Shop now

Image: Diagram illustrating the camera's buttons, lens, screen, SD card slot, and Micro USB port.

## 2. Taking Photos

From the main menu, select the camera icon. Use the navigation buttons to adjust settings if desired. Press the shutter button (top right) to take a photo. The camera supports both front and rear lenses for selfies and regular photos.

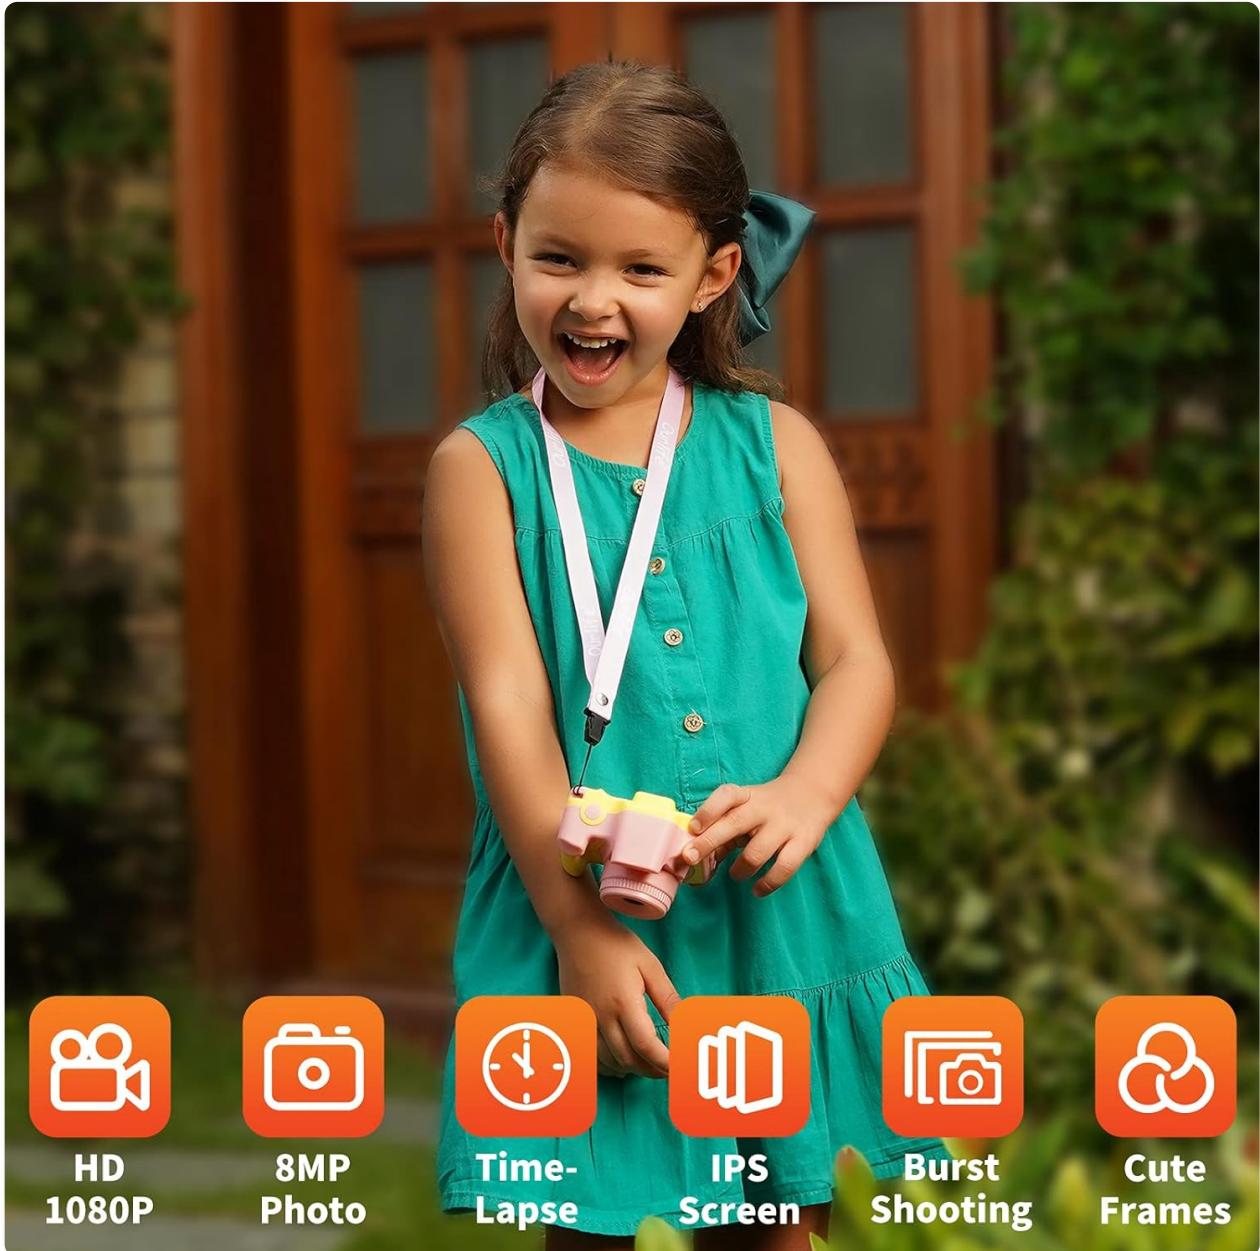


Image: A young child smiling while holding and operating the Ourlife Kids Camera outdoors.

### 3. Recording Videos

Select the video camera icon from the main menu. Press the shutter button to start recording and press it again to stop. Videos are saved to the SD card.

### 4. Using Filters and Frames

While in photo mode, use the left and right navigation buttons to cycle through 8 special effects filters and 10 funny frames. These effects are applied in real-time on the screen.



Image: The camera screen showing a grid of images with various filters applied, demonstrating the creative effects.

# Lovely Photos

10 Funny Frames



Image: The camera screen showcasing a photo of two children with a 'Make A Wish' frame applied, illustrating the funny frames feature.

## 5. Burst Shooting & Interval Timer

Access these advanced shooting modes through the camera's menu settings. Burst shooting captures multiple photos in quick succession, while the interval timer allows for delayed photo capture (e.g., 3, 5, or 10 seconds).



[Shop now](#)

Image: A visual demonstration of the timed photo feature, showing a child posing for pictures taken at 3, 5, and 10-second intervals.

## 6. MP3 Music Player

Select the music icon from the main menu to access the MP3 player. You can load MP3 files onto the SD card for playback.

## 7. Playback

Select the playback icon to view your captured photos and videos. Use the navigation buttons to browse through your media.

Your browser does not support the video tag.

Video: A short promotional video showcasing the Ourlife Kids Camera in use by children, highlighting its features and ease of handling.

## MAINTENANCE

### 1. Charging

Charge the camera using the provided USB cable. Ensure charging is done by adults or under adult supervision. A full charge provides approximately 1.5-2 hours of continuous photo time.

### 2. Cleaning

Wipe the camera body with a soft, dry cloth. Avoid using liquid cleaners or abrasive materials. Keep the lens clean for optimal photo quality.

### 3. Storage

Store the camera in a cool, dry place away from direct sunlight and extreme temperatures when not in use.

## TROUBLESHOOTING

## Camera Not Turning On:

- Ensure the battery protection switch at the bottom is in the 'ON' position.
- Check if the battery is charged. Connect the camera to a power source using the USB cable.

## Poor Photo/Video Quality:

- Ensure the camera lens is clean and free from smudges.
- Check lighting conditions. Optimal results are achieved in well-lit environments.

## SD Card Not Detected:

- Ensure the SD card is inserted correctly and fully into the slot.
- Try reinserting the SD card.
- Format the SD card (this will erase all data, so back up important files first).

## SPECIFICATIONS

Feature	Detail
Brand	Ourlife
Model Name	Kids Camera
Photo Sensor Resolution	12 MP
Video Resolution	1080p
Screen Size	2 Inches (IPS LCD)
Optical Zoom	4x
Digital Zoom	4x
Connectivity Technology	USB
Hardware Interface	Secure Digital Card, USB
Memory Storage Capacity	32 GB (Max, 8GB Card Included)
Battery	Built-in 3.7V Rechargeable Lithium Battery
Continuous Shooting	30 FPS
Item Weight	86 Grams
Color	Pink

## WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your product packaging or visit the official Ourlife website. Keep your purchase receipt as proof of purchase.

Your browser does not support the video tag.

Video: Showcases the Ourlife Kids Camera as a tool for young photographers, emphasizing its features and suitability for children.

© 2026 Ourlife. All rights reserved.