

[Manuals.plus](#) /

› [Baby Einstein](#) /

› Baby Einstein Together in Tune Piano & Guitar Bundle Instruction Manual

## Baby Einstein 12863

# Baby Einstein Together in Tune Piano & Guitar Bundle Instruction Manual

Model: 12863

## INTRODUCTION

---

The Baby Einstein Together in Tune Piano & Guitar Bundle offers a unique musical experience for infants and toddlers. This set includes a Magic Touch wooden piano and a Magic Touch guitar, designed to connect wirelessly for collaborative play. The instruments feature innovative Magic Touch technology, allowing for real instrument sounds with gentle taps. This manual provides essential information for safe and effective use of your musical toy set.




Image: The Baby Einstein Together in Tune Piano and Guitar Bundle, showcasing both instruments.

## SAFETY INFORMATION

- Always supervise children during play.
- Ensure all battery compartments are securely closed.
- Do not immerse instruments in water. Wipe clean only.
- Inspect toys regularly for any damage. Discontinue use if damaged.
- Recommended for children ages 12 months and up.

## PACKAGE CONTENTS

- 1 x Baby Einstein Magic Touch Wooden Piano
- 1 x Baby Einstein Magic Touch Guitar
- 3 x AA batteries (included for each instrument)

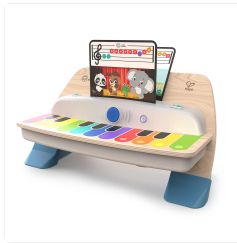

Magic Touch Piano



Magic Touch Guitar

## SETUP

---

### Battery Installation

1. Locate the battery compartment on the underside of each instrument.
2. Using a screwdriver, open the battery compartment cover.
3. Insert 3 AA batteries into each instrument, ensuring correct polarity (+/-).
4. Replace the battery compartment cover and secure it with the screw.

*Note: Batteries are included for initial use. Replace with new AA alkaline batteries when needed.*

### Power On/Off and Volume Control

Each instrument features an Off/Low/High volume control switch. Slide the switch to the desired volume level or to turn the instrument off when not in use.



Image: Close-up of the piano showing the power/volume switch.

## OPERATING INSTRUCTIONS

---

### Magic Touch Technology

The Magic Touch technology allows children to create music with a gentle tap on the painted keys or frets. There are no physical buttons to press, making it easy for small hands to activate sounds.



Piano keys respond to touch.



Guitar frets respond to touch.

## Music Modes

The instruments feature 4 distinct music modes:

- **Discover Mode:** Explore different sounds and play popular melodies.
- **Perform Mode:** Layer musical riffs to create unique compositions.
- **Playful Mode:** Add fun and silly sounds, including animal noises.
- **Band Mode:** Connect wirelessly with other Together in Tune instruments for group play.



Image: A toddler engaging with the Magic Touch Piano in Discover Mode.

## Wireless Connection (Band Mode)

To enable Band Mode and connect the piano and guitar wirelessly:

1. Ensure both the piano and guitar are powered on.
2. Press the "Connect" button on each instrument. A light indicator will confirm connection.
3. Once connected, the instruments will harmonize automatically, allowing children to play together.

The wireless link operates via radio signals within a specific range. For optimal performance, keep instruments relatively close to each other.



Image: Two children playing the piano and guitar, demonstrating wireless connection.

## Pre-programmed Melodies

The instruments include 10 popular melodies, such as "Baa, Baa, Black Sheep" and "Wheels on the Bus." These can be played in Discover Mode, providing a foundation for musical exploration.

Your browser does not support the video tag.

Video: Demonstration of the Baby Einstein Together in Tune Piano features and sounds.

## MAINTENANCE

- To clean, wipe the surfaces of the instruments with a damp cloth.

- Do not use abrasive cleaners or harsh chemicals.
- Ensure instruments are completely dry before storing or allowing children to play.
- Store in a cool, dry place away from direct sunlight.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Instrument not producing sound.	<ul style="list-style-type: none"> <li>◦ Power switch is off.</li> <li>◦ Volume is set to low.</li> <li>◦ Batteries are depleted or incorrectly installed.</li> </ul>	<ul style="list-style-type: none"> <li>◦ Slide the power/volume switch to "Low" or "High".</li> <li>◦ Check battery compartment for correct installation and replace batteries if necessary.</li> </ul>
Instruments not connecting wirelessly.	<ul style="list-style-type: none"> <li>◦ Instruments are too far apart.</li> <li>◦ Connection button not pressed on both.</li> </ul>	<ul style="list-style-type: none"> <li>◦ Move instruments closer together.</li> <li>◦ Ensure the "Connect" button is pressed on both the piano and guitar.</li> </ul>
Sound is distorted or intermittent.	<ul style="list-style-type: none"> <li>◦ Low battery power.</li> <li>◦ Interference from other electronic devices.</li> </ul>	<ul style="list-style-type: none"> <li>◦ Replace batteries.</li> <li>◦ Move instruments away from other electronics.</li> </ul>

## SPECIFICATIONS

- **Brand:** Baby Einstein
- **Model Number:** 12863
- **UPC:** 074451128637
- **Material Type:** Wood
- **Color:** Red, Blue (referring to guitar and piano accents)
- **Item Dimensions:** Approximately 15 x 15 x 15 inches (for the bundle)
- **Item Weight:** 2.29 Pounds (for the bundle)
- **Battery Type:** AA Alkaline
- **Number of Batteries:** 3 AA batteries required per instrument (6 total, included)
- **Recommended Age:** 12 months to 36 months
- **Number of Keys (Piano):** 19
- **Operation Mode:** Automatic, Touch-activated
- **Educational Objective:** Support early childhood development through musical interaction and play

## WARRANTY AND SUPPORT

For warranty information or product support, please refer to the manufacturer's official website or contact their customer service department. Keep your purchase receipt for warranty claims.

Manufacturer: Kids2, Inc.

