

Giantex GT24898PI-PE

Giantex Portable Washing Machine GT24898PI-PE User Manual

Full Automatic Washer and Spinner Combo

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using this appliance to ensure safe and efficient operation. Keep this manual for future reference.

- **Electrical Safety:** Ensure the washing machine is connected to a properly grounded 120V power outlet. Do not use extension cords.
- **Water Connection:** Connect the water inlet hose securely to a faucet. Ensure there are no leaks before starting operation.
- **Drainage:** Position the drain hose correctly to prevent water leakage and ensure proper drainage.
- **Child Safety:** This appliance features a child lock function. Activate it to prevent accidental operation by children. Do not allow children to play with or in the washing machine.
- **Lid Safety:** The washing machine programs will automatically pause if the lid is opened during operation. Close the lid securely to resume.
- **Placement:** Place the washing machine on a stable, level surface. Adjust the feet as needed to ensure stability.
- **Overloading:** Do not overload the machine beyond its 8 lbs capacity. Overloading can affect washing performance and damage the appliance.

2. PRODUCT OVERVIEW

The Giantex Portable Washing Machine is a compact, full-automatic appliance designed for small living spaces such as apartments, dorms, and RVs. It combines washing and spinning functions in one unit.

Key Features:

- **Capacity:** 8 lbs (1.0 cu.ft)
- **Programs:** 6 wash programs (Normal, Heavy, Gentle, Rapid, Soak, Spin)

- **Water Levels:** 6 adjustable water levels
- **Control Panel:** Multifunctional touch control panel with LED display
- **Safety:** Child lock and automatic pause when lid is open
- **Drainage:** Built-in drain pump and drain hose
- **Interior:** Stainless steel inner tub with honeycomb hole design
- **Additional Features:** Washboard design for deep cleaning, lint filter, damped slow drop cover.

Components:

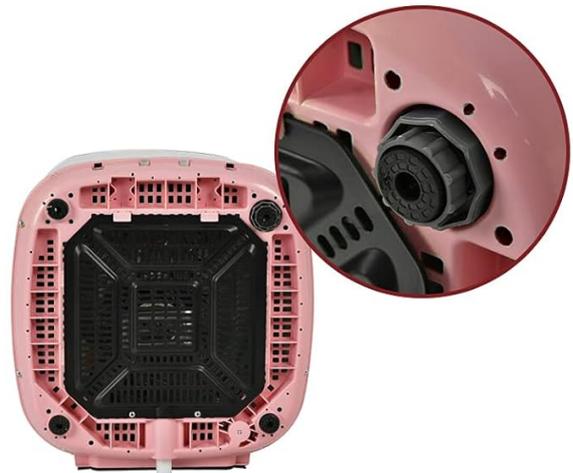


Figure 2.1: Front view of the Giantex Portable Washing Machine.



Adjustable foot

Adjust the height as needed to make it more stable



Rat Guard

Prevent rat from entering and destroy the chassis cables



Damped slow drop cover

Damping technology prevents clipping hands

Stainless Steel Tub

Honeycomb hole design,
quick dehydration



Detergent box

Add detergent to wash clothes
deeply

Figure 2.2: Rear view showing adjustable feet for stability and a rat guard to protect internal cables.

8 LBS Wash & Spin Capacity

360°Washing & Spinning Fast



Lint Filter

Collect cotton fiber & dirt



Washboard

Rub the clothes and spray the water to clean deeply

Figure 2.3: Details of the damped slow drop cover, stainless steel tub with honeycomb design, and detergent box.

6 Wash Programs & 6 Water Levels

Meet Your Different Washing Needs

Normal
37mins

Heavy
47mins

Gentle
26mins

Rapid
13mins

Soak
95 mins

Spin



Figure 2.4: Illustration of the 8 lbs wash and spin capacity, along with the lint filter and washboard for effective cleaning.

1.0 Cu.ft Large Capacity

Wash Multiple Clothes at Once



T-shirt



Jeans



Bed Sheet



Curtain



Figure 2.5: Close-up of the control panel displaying the 6 wash programs and 6 water level options.

3. SETUP AND INSTALLATION

Follow these steps to properly set up your Giantex Portable Washing Machine.

3.1 Unpacking

Carefully remove the washing machine from its packaging. Inspect for any damage during transit. Retain packaging materials for potential future transport or service.

3.2 Placement

Place the washing machine on a firm, level surface. Ensure there is adequate space around the unit for ventilation and hose connections. Adjust the adjustable feet at the bottom of the machine to ensure it is perfectly level and stable, preventing excessive vibration during operation.

3.3 Water Inlet Connection

Connect the provided water inlet hose to a suitable faucet. The machine comes with a faucet adapter to fit various faucet types. Ensure the connection is tight to prevent leaks.



Figure 3.1: Guide for connecting the faucet adapter to different faucet types.

3.4 Drain Hose Setup

Attach the drain hose to the designated outlet on the back of the machine. Secure the hose to prevent it from dislodging during drainage. The drain hose can be directed into a sink, bathtub, or other suitable drainage point.

3.5 Power Connection

Plug the power cord into a grounded 120V electrical outlet. Ensure the power cord is not pinched or damaged.

4. OPERATING INSTRUCTIONS

Operating your Giantex Portable Washing Machine is straightforward. Follow these steps for optimal washing results.

4.1 Loading Laundry

Open the top lid. Place your clothes loosely into the stainless steel inner tub. Do not pack clothes tightly, as this can hinder proper washing and spinning. The maximum load capacity is 8 lbs.

Product Information

8lbs

Rate capacity of wash and spin

270W

Rated Wash input power

200W

Rated spin input power

800 RPM

rotate speed



Figure 4.1: Example of clothes loaded into the 1.0 Cu.Ft capacity tub.

4.2 Adding Detergent

Add the appropriate amount of laundry detergent directly into the detergent box or directly into the tub with the clothes. Refer to your detergent's instructions for recommended amounts.

4.3 Selecting Program and Water Level

Close the lid securely. Press the 'Power' button to turn on the machine. Use the 'Program' button to cycle through the 6 available wash programs: Normal, Heavy, Gentle, Rapid, Soak, Spin. Use the 'Water Level' button to select one of the 6 water levels (1-6) suitable for your load size.

4.4 Starting the Wash Cycle

Once your desired program and water level are selected, press the 'Start/Pause' button to begin the wash cycle. The LED display will show the remaining time.

4.5 Child Lock Function

To activate the child lock, press and hold the 'Child Lock' button (if available, or refer to specific model instructions for activation). This will disable the control panel to prevent accidental changes. To deactivate, press and hold the button again.

4.6 Video Guide: How to Use The Washing Machine

For a visual guide on operating the washing machine, please watch the official video below:

Video 4.1: Official Giantex video demonstrating the usage of the portable washing machine. This video covers basic operation and features.

5. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your washing machine.

5.1 Cleaning the Lint Filter

The lint filter collects cotton fiber and dirt during the wash cycle. It should be cleaned regularly, ideally after every few washes, to maintain efficiency. Locate the lint filter inside the tub, remove it, clean it under running water, and reinsert it.

5.2 Cleaning the Exterior

Wipe the exterior of the machine with a soft, damp cloth. Avoid using abrasive cleaners or solvents that could damage the finish.

5.3 Tub Cleaning

Periodically run a self-clean cycle (if available) or a normal wash cycle with hot water and a washing machine cleaner to remove detergent residue and prevent odors.

5.4 Winterization (if applicable)

If storing the machine in a cold environment, ensure all water is drained from the hoses and tub to prevent freezing and damage.

6. TROUBLESHOOTING

If you encounter issues with your washing machine, refer to the following common problems and solutions:

| Problem | Possible Cause | Solution |
|---------------------------|---|---|
| Machine does not start | No power; Lid not closed; Child lock active | Check power connection; Close lid securely; Deactivate child lock. |
| Water leakage | Loose hose connections; Damaged hose | Tighten all hose connections; Inspect hoses for damage and replace if necessary. |
| Excessive vibration/noise | Uneven surface; Overloaded tub; Unbalanced load | Adjust feet to level machine; Reduce load size; Redistribute clothes evenly in the tub. |
| Water not draining | Drain hose kinked/blocked; Drain pump issue | Check drain hose for kinks or blockages; Contact customer support if pump is faulty. |
| Clothes not clean | Too much laundry; Insufficient detergent; Incorrect program | Reduce load size; Use recommended detergent amount; Select appropriate wash program. |

If the problem persists after trying these solutions, please contact Giantex customer support.

7. SPECIFICATIONS

| Feature | Detail |
|---------------------|--|
| Brand | Giantex |
| Model Number | GT24898PI-PE |
| Item Weight | 47 pounds |
| Product Dimensions | 18.5 x 19.5 x 31.5 inches (D x W x H) |
| Capacity | 8 Pounds (1.0 cu.ft) |
| Max Spin Speed | 800 RPM |
| Installation Type | Freestanding |
| Special Features | Child Lock |
| Color | Pink & White |
| Control Console | Touch |
| Standard Cycles | 6 (Normal, Heavy, Gentle, Rapid, Soak, Spin) |
| Access Location | Top Load |
| Voltage | 120 Volts |
| Certification | Energy Star |
| Material Type | Tempered Glass, Polypropylene, Stainless Steel, Aluminum |
| Included Components | Drain Hose, Faucet Adapter, Power Cord |

8. WARRANTY AND SUPPORT

For warranty information, please refer to the documentation included with your purchase or visit the official Giantex website. For technical support or service inquiries, please contact Giantex customer service.