

bblüv Umidö - Fahrenheit

bblüv Umidö 3-in-1 Ultrasonic Humidifier & Air Purifier

Model: Umidö - Fahrenheit (B0151-F)
User Manual

INTRODUCTION

Thank you for choosing the bblüv Umidö 3-in-1 Ultrasonic Humidifier & Air Purifier. This device is designed to enhance your indoor environment by providing optimal humidity levels, purifying the air, and allowing for aromatherapy. Its intelligent features and quiet operation make it ideal for bedrooms, nurseries, and offices. Please read this manual thoroughly before use to ensure proper operation and maintenance.





Image: The bblüv Umidö humidifier, a sleek white unit with a digital display showing '48%' and a remote control resting beside it.

PRODUCT FEATURES

The bblüv Umidö is equipped with advanced features for your comfort and convenience:

- **3-in-1 Functionality:** Humidifier, Air Purifier, and Aroma Diffuser.
- **Ultrasonic Cool Mist:** Provides a fine, cool mist for comfortable humidification.
- **Intelligent Humidistat:** Automatically maintains desired humidity levels.
- **Long Runtime:** Up to 28 hours of continuous operation with a 4 L (1 gallon) tank.
- **Quiet Operation:** Operates at an ultra-low noise level of 35dB for undisturbed sleep.
- **Top-Fill Design:** Easy and convenient water refilling.
- **Automatic Shut-off:** Safety feature activates when the water tank is empty.
- **Timer Function:** Programmable timer for up to 8 hours.
- **Remote Control:** For convenient operation from a distance.
- **No Filters Required:** Simplifies maintenance.

Compact & Intelligent Design

Including Multiple Features



Image: A diagram illustrating the compact and intelligent design of the Umidö, highlighting its 4.2L tank capacity, 25 m² coverage, 28-hour runtime, and 3 mist output levels. Dimensions are shown as 8.2 inches (20.8 cm) high and 7.4 inches (18.8 cm) wide.

PACKAGE CONTENTS

Upon opening your bblüv Umidö package, please ensure all the following items are present:

- bblüv Umidö Humidifier Unit
- Remote Control
- Instruction Manual (this document)

SETUP

1. **Unpack the Unit:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.
2. **Choose a Location:** Place the humidifier on a firm, flat, water-resistant surface at least 6 inches (15 cm) away from walls and furniture. Ensure it is not placed directly on carpet or near heat sources.
3. **Fill the Water Tank:**
 - Remove the top lid of the humidifier.
 - Fill the tank with clean, cool tap water. Distilled or demineralized water is recommended to prevent mineral buildup. Do not exceed the maximum fill line.

- Replace the top lid securely.



Image: A close-up showing how to easily refill the top-fill tank of the humidifier.

4. **Connect to Power:** Plug the power cord into a suitable electrical outlet. The unit will enter standby mode.

OPERATING INSTRUCTIONS

The Umidō can be operated using the touch controls on the unit or the included remote control.

Power On/Off

- Touch the power icon on the unit's display or press the power button on the remote control to turn the humidifier on or off.

Adjusting Mist Output

- The Umidō offers 3 mist output levels. Touch the mist icon on the unit or press the mist button on the remote to cycle through the levels (Low, Medium, High).

Intelligent Humidistat & Auto Mode

- The built-in humidity sensor detects the current room humidity.
- To activate Auto Mode, touch the auto icon on the unit or press the auto button on the remote. The humidifier will automatically adjust mist output to maintain a comfortable humidity level.

Timer Function

- Set the operating time using the timer function. Touch the timer icon on the unit or press the timer button on the remote to select desired operating hours (up to 8 hours).

Aromatherapy Function

- Locate the essential oil container on the side of the unit.
- Add a few drops of your favorite essential oil to the container. Do not add essential oils directly into the water tank.
- The aroma will diffuse with the mist.

Ultimate Comfort & Wellness

Enhanced Air Quality & Soothing Aroma



Ultra
Quiet



Essential
Oil area



Auto
Turnoff



Image: The Umidō humidifier operating quietly in a nursery, emphasizing its ultra-quiet operation, essential oil diffusion capability, and automatic shut-off feature for ultimate comfort and wellness.

MAINTENANCE

Regular cleaning is essential to ensure optimal performance and hygiene of your humidifier. The Umidō is designed for easy maintenance as it requires no filters.

1. Daily Maintenance:

- Before refilling, empty any remaining water from the tank.
- Wipe the inside of the tank with a clean cloth.

2. Weekly Cleaning:

- Unplug the unit and empty all water from the tank and base.
- Clean the water tank and base with a soft brush and mild detergent. Rinse thoroughly with clean water.
- To remove mineral buildup, fill the tank with a mixture of equal parts white vinegar and water. Let it soak for 30 minutes, then rinse thoroughly.
- Wipe the exterior of the unit with a soft, damp cloth. Do not immerse the main unit in water.

3. **Storage:** When not in use for extended periods, clean the unit thoroughly, ensure it is completely dry,

and store it in a cool, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No mist or low mist output	Water tank empty or low Mineral buildup on transducer Mist outlet blocked	Refill water tank Clean transducer with a soft brush Ensure mist outlet is clear
Unit not turning on	Power cord not plugged in No power at outlet Water tank not properly seated	Check power connection Test outlet with another device Ensure tank is correctly placed
Unusual odor	Stagnant water New unit odor	Clean water tank and base thoroughly Operate for a few hours in a well-ventilated area

SPECIFICATIONS

Feature	Detail
Model Name	Umidö - Fahrenheit
Capacity	4 Liters (1 Gallon)
Runtime	Up to 28 hours
Coverage Area	Up to 269 sq. ft. (25 sq. m)
Operation Mode	Ultrasonic
Product Dimensions	18.8D x 18.8W x 20.8H Centimetres (7.4 in. Ø x 8.2 in.)
Color	White
Material	Plastic
Manufacturer	bblüv
Special Features	Humidity sensor, Aroma diffuser, Automatic shut-off

 
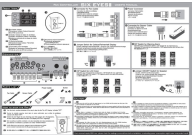 
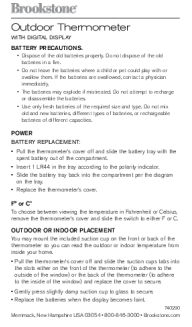 

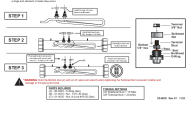 

WARRANTY AND SUPPORT

The bblüv Umidö 3-in-1 Ultrasonic Humidifier & Air Purifier comes with a**1-year manufacturer's guarantee** from the date of purchase. This warranty covers defects in materials and workmanship under normal use.

For warranty claims, technical support, or any questions regarding your product, please contact bblüv customer service. Please have your proof of purchase and product model information ready when contacting support.

For more information, visit the official bblüv website or contact their customer support channels.

Related Documents - Umidö - Fahrenheit

 <p>FILMIS</p>	<p>FILMIS IKEA Clock, Thermometer, and Alarm Clock User Guide</p> <p>Concise guide to setting up and using the FILMIS clock, thermometer, and alarm clock from IKEA. Learn about time formats, alarm settings, snooze function, light, and temperature display in Celsius or Fahrenheit.</p>
	<p>Six Eyes II Fan Controller User Manual</p> <p>User manual for the Six Eyes II fan controller, detailing its front view, connectors, parts list, and operational instructions. Includes information on fan speed and temperature indicators, control knobs, jumper switches for Celsius/Fahrenheit display and LCD color, DIP switches for warning alarms, and a speaker ON/OFF switch. Provides cautions regarding fan compatibility and safe operation.</p>
	<p>Brookstone Outdoor Thermometer User Manual and Warranty Information</p> <p>This document provides instructions for using the Brookstone Outdoor Thermometer, including battery replacement, placement, and temperature unit selection. It also details the one-year limited warranty offered by Brookstone.</p>
	<p>Fahrenheit FHT 125PRMR Motherboard Replacement Guide</p> <p>A step-by-step guide on how to replace the motherboard in a Fahrenheit FHT 125PRMR hair straightener, detailing the tools required and the process for disassembly and reassembly.</p>
	<p>SpaDepot Heater Technical Facts and Installation Guide</p> <p>Comprehensive technical specifications for spa heaters, including amperage, voltage, ohms measurements, temperature rise calculations, Ohm's Law, and Fahrenheit/Celsius conversion methods. Also provides step-by-step installation instructions for SpaDepot heater elements with parts and torque specifications.</p>
	<p>YIHUA 882D ESD-Safe 2-in-1 Soldering and Hot Air Rework Station Operation Instructions</p> <p>Comprehensive operation instructions for the YIHUA 882D ESD-Safe 2-in-1 Soldering and Hot Air Rework Station. Learn about its specifications, applications, product diagram, detailed operation procedures for both soldering and hot air functions, advanced features like temperature calibration and fail-safe protection, maintenance tips, and troubleshooting guidance.</p>