

[manuals.plus](#) /

- › [Member's Mark](#) /
- › [Member's Mark Gourmet Kitchen Appliance Set for Kids Instruction Manual](#)

Member's Mark 980328662

Member's Mark Gourmet Kitchen Appliance Set for Kids Instruction Manual

Model: 980328662

1. INTRODUCTION

Thank you for choosing the Member's Mark Gourmet Kitchen Appliance Set for Kids. This set is designed to provide hours of imaginative play, allowing children to mimic real-life kitchen activities with safe, child-friendly appliances. This manual provides essential information for the proper setup, operation, and care of your new toy set.

The set includes a toy coffee maker, mixer, blender, and toaster, each with interactive features to enhance the play experience.



Image 1.1: Children engaging in imaginative play with the kitchen appliance set.

2. SAFETY INFORMATION

Please read all safety instructions before allowing children to play with the set. Keep this manual for future reference.

- **Recommended Age:** This toy set is suitable for children aged 3 years and older.
- **Adult Supervision:** Always supervise children during play, especially when using water with the coffee maker and blender.
- **Water Use:** The coffee maker and blender are designed for use with clean, cold water only. Do not use hot water or other liquids.
- **Choking Hazard:** The set contains small parts (e.g., coffee pods). Keep these away from children under 3 years of age.
- **Cleaning:** Refer to the 'Maintenance' section for proper cleaning instructions.
- **Damage:** If any part of the set is damaged, discontinue use immediately to prevent injury.

3. PACKAGE CONTENTS

Carefully unpack all items and ensure all components are present:

- 1x Toy Coffee Maker
- 1x Toy Mixer with detachable base and mixing bowl
- 1x Toy Blender
- 1x Toy Toaster
- 2x Toy Coffee Pods
- 1x Toy Coffee Cup
- Batteries (pre-installed)



Image 3.1: The complete kitchen appliance set as packaged.

4. SETUP

Minimal assembly is required to prepare the set for play. Batteries are included and pre-installed for immediate use.

1. Remove all components from the packaging.
2. Place the coffee maker, mixer, blender, and toaster on a flat, stable surface.
3. Ensure all small accessories like coffee pods and the cup are within reach for play.



Image 4.1: The kitchen appliance set arranged for play.

5. OPERATING INSTRUCTIONS

5.1. Toy Coffee Maker

1. Open the water reservoir lid on top of the coffee maker.
2. Carefully pour clean, cold water into the reservoir. Do not overfill.
3. Insert one of the toy coffee pods into the designated slot.
4. Place the toy coffee cup under the dispenser.
5. Press the 'Start' button to activate the coffee maker. It will simulate brewing coffee with safe, non-heated water.



Image 5.1.1: Filling the toy coffee maker with water.

5.2. Toy Mixer

1. Place the mixing bowl under the mixer's beaters.
2. The mixer can be used on its stand or detached for handheld play. To detach, gently lift the mixer unit from its base.
3. Press the button on the mixer to activate the spinning beaters, simulating mixing action.



Image 5.2.1: The toy mixer in operation.

5.3. Toy Blender

1. Open the lid of the blender.
2. Pour clean, cold water into the blender pitcher.
3. Securely close the lid.
4. Press and hold the button on the blender base. The blender will light up and the blades will spin, simulating blending. Release the button to stop.

5.4. Toy Toaster

1. Insert the toy bread slices into the toaster slots.
2. Turn the dial on the front of the toaster to set the desired 'toast level'.
3. Push down the lever on the side of the toaster.
4. After a short period, the toast will pop up, simulating real toaster action.



Image 5.4.1: Operating the toy toaster.

6. MAINTENANCE

Proper care will extend the life of your toy set.

- **Cleaning:** Wipe all surfaces with a damp cloth. Do not immerse electronic components (mixer, blender, coffee maker) in water.
- **Drying:** Ensure all parts, especially those that come into contact with water, are thoroughly dried before storage.
- **Storage:** Store the set in a clean, dry place away from direct sunlight and extreme temperatures.
- **Water Drainage:** After playing with water, empty the coffee maker and blender completely and allow them to air dry.

7. TROUBLESHOOTING

If you encounter any issues, refer to the following common solutions:

Problem	Possible Cause	Solution
Appliance (Mixer, Blender, Coffee Maker) does not turn on or function.	Batteries are depleted.	While batteries are pre-installed, if functionality ceases, it may indicate battery depletion. Consult the product packaging or manufacturer's website for information on battery replacement, if applicable.
Coffee maker or blender leaks water.	Overfilled reservoir/pitcher or improper sealing.	Ensure water is filled to the recommended level. Check that lids and seals are properly closed.
Toaster lever does not stay down or toast does not pop up.	Mechanism obstruction or wear.	Check for any foreign objects obstructing the slots or lever. Ensure the lever is pushed down completely.

If problems persist, contact customer support.

8. SPECIFICATIONS

- Model Number:** 980328662
- Brand:** Member's Mark
- Material:** Plastic
- Recommended Age:** 3 years and up
- Educational Objectives:** Imagination Development
- Batteries:** Included (pre-installed)
- Product Dimensions:** Approximately 49.28 x 24.89 x 13.21 cm (package dimensions)
- Product Weight:** Approximately 1.45 kg (package weight)

9. WARRANTY AND SUPPORT

This product is covered by a standard manufacturer's warranty against defects in materials and workmanship. For specific warranty details, please refer to the product packaging or contact Member's Mark customer service.

For further assistance, troubleshooting, or to inquire about replacement parts, please visit the official Member's Mark website or contact their customer support line.