

IKON IK-DIM210

IKON IK-DIM210 Ice Cream Maker User Manual

Model: IK-DIM210

1. INTRODUCTION

Thank you for purchasing the IKON IK-DIM210 Ice Cream Maker. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your appliance. Please read these instructions thoroughly before first use and retain them for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons. These include:

- Read all instructions before operating the appliance.
- To protect against electric shock, do not immerse the motor unit, cord, or plug in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before assembling or disassembling parts, and before cleaning.
- Avoid contact with moving parts. Keep hands, hair, clothing, as well as spatulas and other utensils away from the mixing paddle during operation to reduce the risk of injury and/or damage to the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not use the appliance for anything other than its intended use.
- Never put the freezer bowl in the freezer if it is wet on the outside.
- Do not wash the freezer bowl in the dishwasher.

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your IKON IK-DIM210 Ice Cream Maker:

1. **Motor Unit:** Contains the motor that drives the mixing paddle.
2. **Lid:** Transparent lid with an opening for adding ingredients.
3. **Mixing Paddle:** Attaches to the motor unit and churns the ingredients.
4. **Freezer Bowl:** Double-insulated bowl containing a cooling liquid, which must be pre-frozen.
5. **Outer Bowl/Housing:** The main body that holds the freezer bowl.



Image: The IKON IK-DIM210 Ice Cream Maker, showcasing its compact design and primary components including the motor unit, lid, and freezer bowl.

4. SETUP

4.1 Before First Use

1. Unpack the ice cream maker and all its components.
2. Wash the freezer bowl, mixing paddle, and lid in warm, soapy water. Rinse thoroughly and dry completely. Do not wash the motor unit in water.
3. Wipe the motor unit with a damp cloth.

4.2 Freezing the Bowl

The freezer bowl must be completely frozen before you begin making ice cream. The freezing process typically takes 8 to 12 hours, depending on your freezer's temperature.

- Place the empty freezer bowl in the back of your freezer where the temperature is coldest.
- Ensure the freezer temperature is set to -18°C (0°F) or lower.
- For best results, store the freezer bowl in the freezer at all times, so it's ready for use whenever you desire.

5. OPERATING INSTRUCTIONS

5.1 Preparing Ingredients

Prepare your ice cream, sorbet, or frozen yogurt mixture according to your recipe. Ensure all ingredients are chilled to refrigerator temperature (4°C / 40°F) before adding them to the machine. This helps achieve the best consistency.

5.2 Assembly and Churning

1. Place the frozen freezer bowl into the outer housing.
2. Insert the mixing paddle into the center hole of the freezer bowl.
3. Place the motor unit on top of the lid, ensuring it locks securely into place.
4. Plug the appliance into a suitable electrical outlet (220-240V, 50-60Hz).
5. Turn on the ice cream maker. The mixing paddle will begin to rotate.
6. Slowly pour your chilled ice cream mixture through the opening in the lid.
7. Allow the machine to churn for approximately 15-25 minutes, or until the mixture reaches your desired consistency. Churning time may vary based on the recipe and room temperature.
8. Once churning is complete, turn off the machine and unplug it.
9. Remove the motor unit and lid. Carefully lift out the mixing paddle.
10. Use a rubber spatula to scrape the finished ice cream from the freezer bowl into an airtight container for storage.

6. CLEANING AND MAINTENANCE

Proper cleaning ensures the longevity and hygiene of your ice cream maker.

1. Always unplug the appliance before cleaning.
2. Disassemble the motor unit, lid, mixing paddle, and freezer bowl.
3. Wash the lid, mixing paddle, and freezer bowl in warm, soapy water. Rinse thoroughly and dry immediately.
4. **Do not place the freezer bowl in the dishwasher.** The extreme heat can damage the bowl and its cooling liquid.
5. Wipe the motor unit with a damp cloth. Never immerse the motor unit in water or any other liquid.
6. Ensure all parts are completely dry before reassembling or storing.

7. Store the ice cream maker in a clean, dry place. You may store the freezer bowl in the freezer for convenience.

7. TROUBLESHOOTING

If you encounter issues with your ice cream maker, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Ice cream is not freezing or is too soft.	Freezer bowl not sufficiently frozen. Ingredients were not chilled. Too much mixture.	Ensure freezer bowl is frozen for 8-12 hours. Chill ingredients thoroughly. Do not exceed the maximum capacity (1.85L).
Machine does not start.	Appliance not plugged in. Motor unit not properly assembled.	Check power connection. Ensure motor unit is securely locked onto the lid.
Mixing paddle stops during operation.	Mixture is too thick. Too much mixture.	Ensure mixture consistency is appropriate for churning. Reduce the amount of mixture if it exceeds capacity.
Loud noise during operation.	Mixing paddle or motor unit not properly seated.	Check that all components are correctly assembled and securely in place.

If the problem persists after attempting these solutions, please contact customer support.

8. SPECIFICATIONS

Technical details for the IKON IK-DIM210 Ice Cream Maker:

- **Model:** IK-DIM210
- **Capacity:** 1.85 Liters
- **Power:** 120 Watts
- **Voltage:** 220-240V
- **Frequency:** 50-60Hz
- **Manufacturer:** IKON

9. WARRANTY AND CUSTOMER SUPPORT

This product is covered by a manufacturer's warranty against defects in materials and workmanship. For specific warranty terms and conditions, please refer to the warranty card included with your purchase or contact your retailer.

For technical assistance, troubleshooting beyond this manual, or to inquire about replacement parts, please contact IKON customer support. Contact information can typically be found on the product packaging or the manufacturer's official website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question