

[Manuals.plus](#) /

› [PowerLocus](#) /

› PowerLocus P1 Kids Bluetooth Headphones User Manual

PowerLocus P1

PowerLocus P1 Kids Bluetooth Headphones User Manual

Model: P1

1. INTRODUCTION

Thank you for choosing PowerLocus P1 Kids Bluetooth Headphones. These headphones are designed with your child's safety and enjoyment in mind, featuring an 85dB volume limit for hearing protection, comfortable design, and versatile connectivity options. Please read this manual carefully to ensure proper use and maintenance of your headphones.



Image 1: PowerLocus P1 Kids Bluetooth Headphones and included protective case.

2. WHAT'S IN THE BOX

- 1x PowerLocus P1 Kids Wireless Headphones
- 1x 3.5mm Audio Cable
- 1x USB Charging Cable
- 1x Hard Shell Protective Case

OUR PACKAGE INCLUDES:



1x PowerLocus P1 Kids
Wireless Headphones



3.5mm
Audio Cable



USB
Charging Cable



Elegant Hard Shell
Carry Case

Image 2: All items included in the PowerLocus P1 Kids Bluetooth Headphones package.

3. SETUP

3.1 Charging the Headphones

Before first use, fully charge the headphones. Connect the provided USB Charging Cable to the charging port on the headphones and to a compatible USB power source. A full charge takes approximately 2 hours and provides up to 15 hours of wireless playtime.

3.2 Powering On/Off

Press and hold the Power button (usually marked with a power symbol) on the headphone ear cup for a few seconds to turn the headphones on or off.

3.3 Bluetooth Pairing

1. Ensure the headphones are powered off.
2. Press and hold the Power button until the LED indicator light flashes, indicating pairing mode.
3. On your device (smartphone, tablet, PC), enable Bluetooth and search for available devices.
4. Select "PowerLocus P1" from the list of devices.

5. Once connected, the LED indicator will stop flashing or show a steady light. The Bluetooth range is up to 36 feet (10 meters).

3.4 Wired Connection

For a wired connection, use the provided 3.5mm Audio Cable. Plug one end into the headphone's 3.5mm jack and the other end into your audio device's headphone jack. This mode is useful when the battery is low or for devices without Bluetooth.

3.5 Micro SD Card Playback

Insert a Micro SD card loaded with MP3 music files into the designated slot on the headphone ear cup. The headphones will automatically detect and begin playing music from the card, allowing for independent music playback without an external device.

4. OPERATING INSTRUCTIONS

4.1 Volume Control and Playback

The headphones feature on-ear controls for easy management:

- **Volume Up/Down:** Use the dedicated volume buttons (+/-).
- **Play/Pause:** Press the Play/Pause button to start or stop audio.
- **Next/Previous Track:** Use the track skip buttons to navigate through your music.



Image 3: On-ear control buttons for PowerLocus P1 Headphones.

4.2 85dB Volume Limit

The PowerLocus P1 headphones are equipped with a maximum volume limit of 85dB to protect children's hearing. This is a globally recognized safe listening level for kids.



Image 4: Child wearing headphones, highlighting the 85dB volume limit for hearing protection.

4.3 Microphone and Hands-Free Mode

The headphones include external and built-in microphones. In Bluetooth mode, you can answer/decline incoming calls and use voice assistant functions directly from the headphones. This feature is also available in wired mode for compatible devices.

4.4 FM Radio Functionality

To use the FM radio, press the dedicated FM/MP3 button. Use the track skip buttons to scan for stations. Ensure you are in an area with good radio reception.

5. MAINTENANCE

5.1 General Care

The headphones are made from faux leather and plastic. They are **not water resistant**, so avoid

exposure to liquids. Store them in the provided hard shell protective case when not in use to prevent damage, especially during travel.



Image 5: Foldable design for easy storage and portability.

5.2 Cleaning

Wipe the headphones with a soft, dry cloth. Do not use abrasive cleaners or solvents. Keep the ear cushions clean and dry.

6. TROUBLESHOOTING

- **No Power:** Ensure the headphones are fully charged.
- **No Sound:** Check the volume level on both the headphones and the connected device. Ensure the headphones are properly paired via Bluetooth or connected via the audio cable.
- **Pairing Issues:** Make sure the headphones are in pairing mode (flashing LED). Turn off and on Bluetooth on your device, then try pairing again. Move closer to the device to ensure you are within the Bluetooth range.
- **Micro SD Card Not Playing:** Ensure the Micro SD card is inserted correctly and contains compatible MP3 audio files.

7. SPECIFICATIONS

Feature	Specification
Model Name	P1
Connectivity Technology	Wireless (Bluetooth 5.3), Wired (3.5mm Jack)
Bluetooth Range	Up to 36 feet (10 meters)

Battery Life	Up to 15 Hours
Charging Time	2 Hours
Volume Limit	85 dB (Hearing Protection)
Microphone	Built-in and External
Special Features	Foldable, Lightweight, Micro SD Card Support, FM Radio
Material	Faux Leather, Plastic
Item Weight	165 Grams (5.8 ounces)
Water Resistance	Not Water Resistant

8. OFFICIAL PRODUCT VIDEO

Video 1: An official overview of the PowerLocus P1 Kids Bluetooth Headphones, showcasing its features and design.

9. WARRANTY AND SUPPORT

PowerLocus P1 Kids Bluetooth Headphones come with a **2-year warranty**. If you encounter any issues or have questions regarding your product, please contact PowerLocus customer support for assistance. Refer to the contact information provided in your product packaging or visit the official PowerLocus website.