

Manuals.plus /

› WINFLIKE /

› WINFLIKE HTR-A10E Replacement Remote Control for Haier LED LCD TV User Manual

WINFLIKE HTR-A10E

WINFLIKE HTR-A10E Replacement Remote Control User Manual

For Haier LED LCD TV Models: LE32K6000T, LE40K6000TF, LE43K6000TF, and others.

1. INTRODUCTION

This manual provides comprehensive instructions for the WINFLIKE HTR-A10E Replacement Remote Control. This remote is designed to function as a direct replacement for your original Haier LED LCD TV remote, offering easy and full access to all necessary buttons without requiring complex programming.

Compatible Haier LED LCD TV Models include:

- LE32K6000T
- LE40K6000TF
- LE43K6000TF
- LE24K6000S
- LE32K6000S
- LE32N1620W
- LE32N1620
- LE40K6000SF
- LE43K6000SF
- LE50K6000SF
- LE24K6500SA
- LE32K6500SA
- LE43K6500SA
- HTR-A10

2. SETUP AND BATTERY INSTALLATION

The HTR-A10E remote control operates using infrared (IR) technology and does not require any programming or pairing with your television. Simply install the batteries, and the remote will be ready for use.

2.1 Battery Requirements

- Two (2) AAA batteries are required.
- Use new alkaline batteries for optimal performance and longevity.

2.2 Installation Steps

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery compartment cover securely.

Note: Batteries are not included with the remote control.





Image: Angled view of the WINFLIKE HTR-A10E Replacement Remote Control, showing its ergonomic design and button layout.

3. OPERATING THE REMOTE CONTROL

Once batteries are installed, the remote control is ready to operate your compatible Haier LED LCD TV. Point the remote directly at the TV's infrared receiver for best results.

3.1 Key Functions Overview





Image: Front view of the WINFLIKE HTR-A10E Replacement Remote Control, highlighting all buttons and their labels.

- **Power Button (Red):** Turns the TV on or off.
- **P.MODE / S.MODE:** Picture Mode / Sound Mode selection.
- **SOURCE:** Selects input source (HDMI, AV, etc.).
- **Number Buttons (0-9):** Direct channel selection.
- **Q.VIEW / INFO / GUIDE:** Quick View, Information display, TV Program Guide.
- **MENU / OK / Navigation Arrows:** Access TV menu, confirm selections, navigate through menus.
- **BACK / EXIT:** Return to previous screen or exit current menu.
- **VOL +/-:** Adjust volume up or down.
- **CH ^ / v:** Change channels up or down.
- **APP STORE / TOOL / APP:** Access smart TV features or tools (if supported by TV).
- **FAV / CLIST:** Favorite channels / Channel list.
- **Media Control Buttons (Play, Pause, Stop, Rewind, Fast Forward):** Control media playback.
- **Colored Buttons (Red, Green, Yellow, Blue):** Functionality varies by TV model and context (e.g., teletext, smart TV features).

For specific functions of each button, refer to your Haier LED LCD TV's original user manual.

4. MAINTENANCE

Proper care and maintenance will ensure the longevity and reliable operation of your remote control.

4.1 Cleaning

- Wipe the remote control with a soft, dry cloth.
- For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaner.
- Do not use harsh chemicals, solvents, or abrasive cleaning pads, as these can damage the remote's surface or internal components.

4.2 Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type (AAA alkaline). Do not mix old and new batteries, or different types of batteries.

4.3 Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage, which can damage the remote.

5. TROUBLESHOOTING

If you experience issues with your HTR-A10E remote control, try the following troubleshooting steps:

1. Remote Not Responding:

- Ensure the remote is pointed directly at the TV's IR receiver.
- Check if there are any obstructions between the remote and the TV.
- Replace the batteries with new AAA alkaline batteries.
- Verify that the battery terminals are correctly aligned (+ and -).

2. Limited Functionality:

- Confirm your TV model is listed as compatible in the Introduction section.
- Some advanced smart TV features or specific buttons might require the original TV remote or may not be fully supported by a universal replacement remote.

3. Interference:

- Bright lights, especially fluorescent or LED lighting, can sometimes interfere with IR signals. Try operating the remote in different lighting conditions.

If the problem persists after trying these steps, please contact customer support for further assistance.

6. SPECIFICATIONS

Brand	WINFLIKE
Model Name	HTR-A10E
Model Number	HTR-A10E
Connectivity Technology	Infrared (IR)
Compatible Devices	Haier LED LCD Televisions (Specific models listed in Introduction)
Special Features	Ergonomic, Lightweight, No Programming Required
Color	Black
Number of Batteries Required	2
Battery Type	AAA
Maximum Range	33 Feet (approx. 10 meters)
Button Quantity	38
Item Weight	0.06 Kilograms (approx. 2.1 ounces)
Item Dimensions (L x W x H)	6"L x 2"W x 0.5"H (approx. 15.24cm x 5.08cm x 1.27cm)

7. SUPPORT AND CONTACT INFORMATION

If you have any questions regarding the WINFLIKE HTR-A10E Replacement Remote Control, or require further assistance, please contact WINFLIKE customer support through the retailer where the product was purchased.

For the most up-to-date support information, please refer to the official WINFLIKE website or your purchase documentation.