

Super General KSGW82

Super General Semi-Automatic Twin-Tub Washing Machine

MODEL: KSGW82

1. Introduction

Thank you for choosing the Super General KSGW82 Semi-Automatic Twin-Tub Washing Machine. This manual provides essential information for the safe and efficient operation, installation, and maintenance of your appliance. Please read it thoroughly before use and keep it for future reference.

This 8 kg capacity, top-load washing machine is designed for daily laundry needs, featuring a durable plastic body and a powerful motor for effective cleaning and spinning.

2. Safety Instructions

To prevent injury to yourself and others, and to avoid property damage, please observe the following safety precautions:

- **Electrical Safety:** Ensure the power supply matches the machine's requirements (230V, 50Hz). Do not use extension cords or adapters. Always unplug the machine before cleaning, maintenance, or if it will be unused for an extended period. Do not touch the power plug with wet hands.
- **Water Safety:** Ensure water inlet and drain hoses are securely connected to prevent leaks. Do not operate the machine without sufficient water.
- **Placement:** Install the machine on a firm, level surface to minimize vibration and noise. Keep it away from direct sunlight, heat sources, and damp environments. Ensure adequate ventilation.
- **Child Safety:** Keep children away from the washing machine during operation. Do not allow them to play with the controls or inside the tubs.
- **General Use:** Do not wash items that are waterproof or easily flammable. Do not insert hands into the spin tub while it is operating.

3. Product Features

Your Super General KSGW82 washing machine comes equipped with the following features:

- **Twin-Tub Design:** Separate wash and spin tubs for efficient semi-automatic operation.
- **8 kg Washing Capacity:** Suitable for medium to large laundry loads.
- **Rust-Resistant Plastic Body:** Ensures durability and longevity.
- **Transparent Lid:** Allows you to monitor the washing and spinning process.
- **Powerful Motor:** Provides strong washing and spinning performance.
- **Magic Lint Filter:** Effectively collects lint and debris from clothes.
- **S-shaped Pulsator:** Designed for effective and gentle washing action.
- **Top Load Access:** Convenient loading and unloading of laundry.

4. Setup

Follow these steps to set up your washing machine:

1. **Unpacking:** Carefully remove the machine from its packaging. Retain packaging materials for future transport if needed.
2. **Placement:** Place the washing machine on a flat, stable, and dry surface. Ensure there is enough space around the machine for ventilation and operation. Avoid placing it in direct sunlight or near heat sources.
3. **Water Inlet Connection:** Connect the water inlet hose to the water tap and to the water inlet port on the washing machine. Ensure connections are tight to prevent leaks.
4. **Drainage Hose:** Position the drain hose to ensure proper water drainage. The hose should be placed in a sink or a dedicated drain pipe, ensuring it is not kinked or blocked.
5. **Power Connection:** Plug the power cord into a grounded 230V, 50Hz electrical outlet.



Image 1: Full view of the Super General KSGW82 semi-automatic twin-tub washing machine.

5. Operating Instructions

The Super General KSGW82 features simple knob controls for easy operation.



Image 2: Close-up view of the control panel and twin tubs of the Super General KSGW82 washing machine.

5.1. Washing Cycle

1. **Load Laundry:** Open the wash tub lid and place clothes loosely inside. Do not overload the tub beyond the 8 kg capacity.
2. **Add Detergent:** Add the appropriate amount of detergent directly into the wash tub.
3. **Fill with Water:** Turn on the water tap. Use the water inlet selector (if present) to direct water into the wash tub. Fill to the desired level according to the laundry load. You can use cold or warm water.
4. **Set Wash Timer:** Turn the Wash Timer knob to select the desired washing time (e.g., 5-15 minutes). The machine will start washing.
5. **Drain Water:** Once the wash cycle is complete, turn the Wash/Drain Selector knob to the 'Drain' position to empty the water from the wash tub.

5.2. Spin Cycle

1. **Transfer Laundry:** Carefully transfer the washed clothes from the wash tub to the spin tub. Distribute the clothes evenly to prevent imbalance.
2. **Secure Lid:** Close the inner safety lid and the outer lid of the spin tub securely.
3. **Set Spin Timer:** Turn the Spin Timer knob to select the desired spinning time (e.g., 1-5 minutes). The machine will start spinning.
4. **Remove Laundry:** Once the spin cycle is complete and the tub has stopped rotating, open the lids and remove the spun clothes.

6. Maintenance

Regular maintenance ensures optimal performance and extends the life of your washing machine.

6.1. Cleaning the Exterior

- Wipe the exterior with a soft, damp cloth.
- Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the plastic surface.

6.2. Cleaning the Lint Filter

- Locate the magic lint filter inside the wash tub.
- Remove the filter and clean any accumulated lint under running water.
- Reinsert the filter securely. Clean the lint filter after every few washes to maintain washing efficiency.

6.3. Draining Residual Water

- After each use, ensure all water is drained from both tubs.
- If the machine will not be used for a long period, ensure it is completely dry to prevent mold or odors.

7. Troubleshooting

Before contacting customer service, please refer to the following common issues and solutions:

Problem	Possible Cause	Solution
Machine does not start	No power supply; Lid not closed; Timer not set.	Check power plug and outlet; Ensure lids are securely closed; Set the wash/spin timer.
Water does not fill	Water tap closed; Water inlet hose kinked or blocked.	Open water tap; Straighten or clear the water inlet hose.
Water does not drain	Drain hose kinked or blocked; Drain selector not set to 'Drain'.	Straighten or clear the drain hose; Set the Wash/Drain Selector to 'Drain'.
Excessive vibration/noise	Machine not level; Unbalanced laundry load in spin tub.	Adjust machine to be level; Redistribute clothes evenly in the spin tub.
Poor washing performance	Overloading; Insufficient detergent; Clogged lint filter.	Reduce laundry load; Use appropriate amount of detergent; Clean the lint filter.

8. Specifications

Feature	Specification
Brand	Super General
Model	KSGW82
Washing Capacity	8 kg
Total Capacity (Water/Combined)	14 kg
Product Dimensions (D x W x H)	48.5 x 82.7 x 86.5 cm
Item Weight	21 kg
Color	White
Loading Type	Top Load
Operating Mode	Semi-Automatic
Control Type	Knob
Material Type	Plastic

Feature	Specification
Voltage	230 Volts
Frequency	50 Hz
Noise Level	6 dB
Standard Cycles	2 (Wash, Spin)
Included Components	1 x Super General KSGW82 Semi-Automatic Twin-Tub Washing Machine
Batteries Required	No

9. Warranty and Support

Your Super General washing machine is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including the warranty period and coverage details.

For technical assistance, spare parts, or warranty claims, please contact your local Super General authorized service center or the retailer from whom you purchased the product. Keep your purchase receipt as proof of purchase.

For general inquiries, you may visit the [Super General Store on Amazon](#).