

Remington CI6X10

Remington Pro Tight Curl Wand CI6X10 - 10mm Ultra-Fine Hair Curler

Instruction Manual


IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using the Remington Pro Tight Curl Wand CI6X10. Keep this manual for future reference.

- Always keep the appliance away from water and flammable materials.
- Avoid direct contact of the hot barrel with skin to prevent burns.
- Unplug the appliance immediately after use and before cleaning.
- Ensure the appliance is completely cool before storing.
- This appliance features an automatic shut-off after 60 minutes for safety.
- Do not use this appliance near bathtubs, showers, basins, or other vessels containing water.
- Do not immerse the appliance in water or any other liquid.
- Keep out of reach of children.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.

PRODUCT FEATURES

Ultra-Fine 10mm Barrel

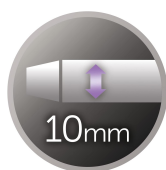

The 10mm titanium ceramic barrel is designed for creating ultra-fine, tight, and defined curls.

4X Protection Coating



Features an advanced coating with Anti-static, Ceramic, Ionic Tourmaline, and Smooth Glide properties to protect hair and ensure effortless styling.

Digital Temperature Control



Offers 10 precise temperature settings ranging from 130°C to 220°C, displayed on an LCD screen for optimal heat control for various hair types.

Quick Heat-Up & Safety

Heats up in just 30 seconds. Includes an on/off button, temperature adjustment dial, cool tip, universal voltage, and a swivel cord for ease of use. Automatic shut-off after 60 minutes for enhanced safety.



Image: The Remington Pro Tight Curl Wand CI6X10, showcasing its sleek design and digital display.

SETUP

1. Unpack the curling wand and all accessories, including the heat-resistant styling glove.

2. Ensure your hair is clean, dry, and free of tangles.
3. Plug the appliance into a suitable power outlet. The digital display will illuminate.
4. Place the curling wand on a heat-resistant surface while it heats up.



Image: The curling wand alongside the included heat-resistant glove, ready for use.

OPERATING INSTRUCTIONS

1. **Power On:** Press and hold the On/Off button until the display lights up.
2. **Select Temperature:** Use the temperature adjustment dial to select your desired heat setting (130°C to 220°C). Lower temperatures are recommended for fine, damaged, or color-treated hair, while higher temperatures are suitable for thick or coarse hair.
3. **Heat-Up:** The wand will heat up rapidly, reaching the selected temperature in approximately 30 seconds. The

display will stop flashing when the temperature is reached.

4. **Prepare Hair:** Section your hair into small, manageable strands. For best results with tight curls, use very small sections.
5. **Curl Hair:**
 - Wear the heat-resistant styling glove on the hand you will use to wrap your hair.
 - Starting from the root, wrap a section of hair around the barrel, holding the end of the hair against the cool tip.
 - Hold for 5-10 seconds, depending on your hair type and desired curl intensity.
 - Carefully release the curl by unwinding the hair or gently pulling the wand downwards.
6. **Repeat:** Continue curling all sections of your hair.
7. **Power Off:** After styling, press and hold the On/Off button to turn off the appliance.
8. **Cool Down:** Allow the wand to cool completely before storing.





Image: A user holding the curling wand, highlighting the digital display and cool tip.

MAINTENANCE

Proper maintenance ensures the longevity and performance of your curling wand.

- **Cleaning:** Ensure the appliance is unplugged and completely cool. Wipe the barrel and handle with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Storage:** Store the appliance in a dry place, away from moisture and direct sunlight. Ensure the cord is not wrapped tightly around the appliance, as this can cause damage over time.
- **Inspection:** Regularly inspect the power cord for any signs of damage. If the cord is damaged, discontinue use and contact customer support.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in correctly, power outlet issue, or internal fault.	Check if the plug is fully inserted. Try a different power outlet. If the issue persists, contact customer support.
Appliance is not heating up.	Temperature setting too low, or internal fault.	Increase the temperature setting. Ensure the appliance has been on for at least 30 seconds. If still not heating, contact customer support.
Curls are not holding.	Hair section too large, temperature too low, or insufficient holding time.	Use smaller hair sections. Increase the temperature setting (within recommended limits). Hold hair on the barrel for a longer duration. Ensure hair is completely dry.

Problem	Possible Cause	Solution
Appliance automatically turns off.	Safety feature activated (60-minute auto shut-off).	This is a normal safety feature. Simply turn the appliance back on if you wish to continue styling.

SPECIFICATIONS

- Model Number:** CI6X10
- Barrel Size:** 10mm
- Barrel Material:** Titanium Ceramic with 4X Protection Coating (Anti-static, Ceramic, Ionic Tourmaline, Smooth Glide)
- Temperature Settings:** 10 settings, 130°C - 220°C
- Heat-Up Time:** 30 seconds
- Display:** Digital LCD
- Safety Features:** Automatic 60-minute shut-off, Cool Tip
- Voltage:** Universal
- Cord:** Swivel Cord
- Included Accessories:** Heat-resistant styling glove
- Dimensions (L x W x H):** 30.67 x 2.9 x 3.26 cm
- Weight:** 196 grams
- Power Source:** Corded Electric



Image: Detailed view of the curling wand's digital temperature display.

WARRANTY AND SUPPORT

For warranty information, product registration, or technical support, please visit the official Remington website or contact their customer service department. Keep your proof of purchase for any warranty claims.

Remington Official Website: www.remingtonproducts.com